


Quick Guide

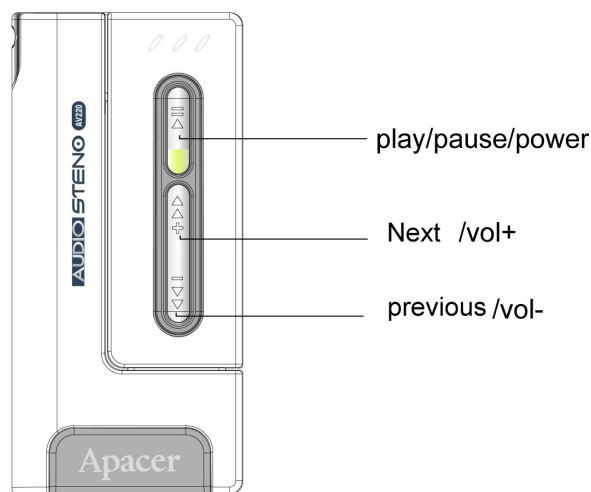

Notices:

- In Windows 98/98SE, please install driver before plugging in your device.
- Please read user manual before use.

Use as a MP3 Player

The device can be used as an MP3 player ONLY when it is NOT connected to the PC and powered by battery

(1) **Play / Pause / Power:**

- **Play/Pause** When device is turned on, press the button to start playing music and press the button once again to pause
- **Power On** Press the button to power on the device
- **Power Off** Press and hold the button for 2 seconds to power off the device.

(2) **Next Song / Volume Up:**

- **Next Song** Press the button once to skin next song
- **Volume Up** Press and hold the button for 2 seconds to increase volume

(3) **Previous Song / Volume Down:**

- **Previous Song** Press the button once to previous song
- **Volume Down** Press and hold the button for 2 seconds to decrease volume

(4) **LED Indicator (Green)**

- LED stays in steady green when device is powered on.
- LED stays in green flashing when playing music.
- LED stays in quick green flashing when volume is been adjusting.

Use as an USB Flash Drive

When connected to PC, the MP3 Flash Drive performs purely as USB flash drive. Stored data/files can be transferred among different platforms by simply plug the device into the USB port of computer systems.

(1) USB interface

- This MP3 Flash Drive complies with the latest Hi-Speed USB2.0 specification
- It is backward compatible with USB 1.1 specification.


(2) Storage Capacity

- Embedded 64MB, 128MB, 256MB or 512MB

(3) LED Indicator (Red)

- When plug into USB port, The LED will turn ON in RED.
- If device is not busy for more than 6 seconds, The LED will turn OFF.
- When the computer is under "SLEEP" or "Stand By" mode, The LED will turn OFF.

快速指南

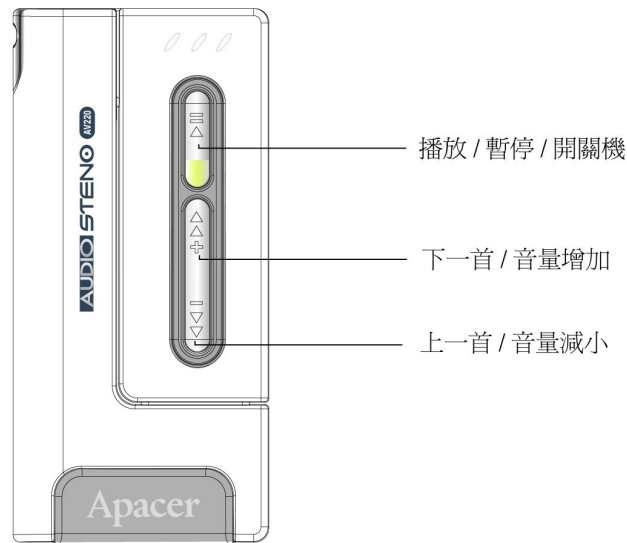

注意:

- Windows 98/98SE 使用者, 連接電腦前請先安裝驅動程式
- 使用前請先閱讀使用手冊

MP3 播放功能

當本機器為 MP3 撥放器時, 電力則來自電池,

(1) 播放 / 暫停 / 開關機:

- 播放 / 暫停 當本機開機時, 按此鍵一次可播放或暫停音樂
- 開機 當本機關機時, 按此鍵兩秒鐘開機
- 關機 當本機式開機狀態時, 按此鍵兩秒鐘開機

(2) 下一首 / 音量增加:

- 下一首 當音樂播放時, 按此鍵一次可跳至下一首
- 音量增大 當音樂播放時, 按此鍵兩秒鐘可增大音量

(3) 上一首 / 音量減小:

- 上一首 當音樂播放時, 按此鍵一次可跳至上一首
- 音量減小 當音樂播放時, 按此鍵兩秒鐘可增減小音量

(4) LED 指示燈 (綠色)

- 當本機為開機狀態時, LED 指示燈為綠色指示燈
- 當本機為播放狀態時, LED 綠色指示燈會閃動表示
- 當本機為調整音量狀態時, LED 綠色指示燈則會快速閃動

USB 隨身碟功能

當本機連接電腦時，使用者可任意的利用本機存取資料至各平台上

(1) USB 介面

- 支援最新的 USB 2.0 高速介面
- 可相容於 USB 1.1 規格.

(2) 儲存容量

- 內建 64MB,128MB,256MB or 512MB

(3) LED 指示燈 (紅色)

- 當本機連接至電腦, LED 指示燈為紅色指示燈.
- 當本機連接至電腦後, 若在六秒後未使用, LED 指示燈會自動熄滅.
- 當本機連接至電腦狀態為”睡眠”與”待機”模式時, LED 指示燈會自動熄滅..