

TOSHIBA

OWNER'S MANUAL

900MHz

CORDLESS TELEPHONE WITH DIGITAL ANSWERING SYSTEM

FT-8906A

FT-8906A BK



The **FIRST** thing to do after unpacking your new cordless telephone is:

CHARGE THE BATTERY !

Please read and follow the few instructions on

PAGE 1

BEFORE YOU DO ANYTHING ELSE.

GETTING STARTED: DO THIS FIRST!

FIRST, After unpacking your new cordless phone, the **first** thing to do is

CHARGE THE HANDSET BATTERY!

- Set your new phone in an out-of-the-way place near a power outlet but where it will not be disturbed. Do not connect it to the telephone line.
- Plug the AC adapter into the wall power outlet.
- Plug the AC adaptor cord in to the power jack on the base unit. The “POWER” LED should light. If not, see “**TROUBLESHOOTING**,” page 39.
- Take the cover off the handset battery compartment; plug the battery connector into the receptacle inside the battery compartment and replace the cover. The connector only goes in one way.
- Place the handset into the base unit’s charging cradle. The “CHARGE” LED should light.
- The battery charging period has now started. From now until the 12 hour period is complete, do not let anything cause the handset to be removed from electrical contact with the base unit’s charging pins or power to be removed from the base unit.

SECOND, after completing the 12 hour charge period, connect the base unit to the telephone line modular jack, using the six foot long modular line cord. If the unit is to be wall mounted, use the six inch cord.

Now, set the Tone-Pulse switch for your type of service according to the instructions on Page 18 and your telephone is ready for normal use. Information on the use of other features follows page 18.


IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury.

- 1 Read and understand all instructions.
- 2 Follow all warnings and instructions marked on the product.
- 3 Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 4 Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- 5 Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the telephone.
- 6 Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect the phone from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
- 7 Do not allow anything to rest on the power cord. Do not locate this product where the cord can be stepped on or tripped over.
- 8 Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 9 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 10 Do not disassemble this product. Opening or removing covers puts you at risk of electrical shock, and incorrect reassembly can cause shocks, sparks or other damage during subsequent use.
- 11 Take this product to a qualified service technician under any of the following conditions:
 - A. When the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally according to the operating instructions. Adjust only those controls covered by this manual. Improper adjustment of other controls may result in serious damage to the unit or your home.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
- 12 Do not use the telephone to report a gas leak in the vicinity of the leak.

IMPORTANT SAFETY INSTRUCTIONS

The RBRC™ Seal

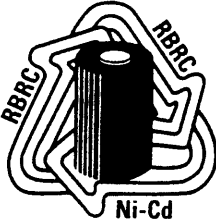

The RBRC™ Seal on the (easily removable) nickel-cadmium battery (contained in our product) indicates that Toshiba America Consumer Products, Inc. (TACP) is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States. The RBRC™ program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste, which is illegal in some areas.

TACP's payments to RBRC™ make it easy for you to drop off the spent battery at local retailers of replacement nickel-cadmium batteries, or at authorized TACP product service centers. You may also contact your local recycling center for information on where to return the spent battery. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. TACP's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

Detach the battery compartment cover on the handset and remove the nickel-cadmium battery pack.

RBRC™ is a trademark of Rechargeable Battery Recycling Corporation.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS BY BATTERY, READ AND FOLLOW THESE INSTRUCTIONS.

BATTERIES

- 1 Use only the appropriate type and size battery pack specified in the instruction manual provided for this product.
- 2 Do not dispose of the battery pack in a fire. The cell may explode. Check with State and local codes for possible special disposal instructions.
- 3 Do not open or mutilate the battery pack. Released electrolytes are corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- 4 Exercise care in handling the batteries. Contact with conductive materials such as rings, bracelets and keys may cause the battery to short out, resulting in overheating which could burn.
- 5 Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instruction manual provided for this product.
- 6 Observe proper polarity orientation between the battery pack and battery charger.

ATTENTION: THE PRODUCT THAT YOU HAVE PURCHASED CONTAINS A RECHARGEABLE BATTERY. UNDER VARIOUS STATE AND LOCAL LAWS, IT MAY BE ILLEGAL TO DISPOSE OF THIS BATTERY INTO THE MUNICIPAL WASTE STREAM. PLEASE CHECK WITH YOUR LOCAL GOVERNMENT FOR DETAILS IN YOUR AREA REGARDING RECYCLING OPTIONS OR PROPER DISPOSAL.

SAVE THESE INSTRUCTIONS

TABLE OF CONTENTS

GETTING STARTED: DO THIS FIRST!	1
IMPORTANT SAFETY INSTRUCTIONS	2
FEATURES	7
Parts checklist	8
INSTALLATION	10
Installing the handset battery pack	10
Setting up the base unit	11
AC adaptor specifications	11
Wall mounting	12
Charging the handset	13
LOCATION OF CONTROLS	14
BASICS	18
Tone/Pulse selection	18
Making a call	18
Interference or static	19
Answering a call	19
Last number redial	19
Call waiting	20
Banking and telephone services	20
Paging the handset	21
Changing the security code	21
SPEED DIALING	22
Storing numbers	22
Dialing a stored number	23
Erasing a stored number	23
Chain dialing	24
Using the memory dialing or PBX	24
USING THE ANSWERING MACHINE	25
Setting the clock	25
Recording the outgoing message (OGM)	26
Turning the answering machine on & off	27
To change the outgoing message (OGM)	27
Setting the ringer volume	28
Setting the number of rings	28

TABLE OF CONTENTS

Setting maximum recording time for incoming messages	.29
Turning the Calling Party Control on or off	.29
Playing recorded messages	.30
Deleting recorded messages	.32
Screening incoming calls	.32
Leaving a memo message	.33
Recording a phone conversation	.34
Using the MAILBOX	.35
REMOTE OPERATION	.37
Setting the PIN number	.37
Calling in from a remote location	.38
Table of commands	.38
TROUBLESHOOTING	.39
SPECIFICATIONS	.42
WARRANTY/SERVICE	.44
REMOTE OPERATIONS CARDS	.47

FEATURES


Toshiba America Consumer Products takes pride in presenting the FT-8906A cordless telephone and digital message system. An all digital answering device provides many new conveniences not available on tape machines, such as repeat, skip, individual message delete and quick playback. Plus, your Toshiba FT-8906A gives you complete access to all the answering machine functions from the handset, as well as the base. So you can listen to incoming messages or even screen calls from the handset. And that's just the beginning...

Cordless Phone Features

- 900 MHz Transmission
- Helical Antenna Provides Excellent Reception and Durability
- 10 Number Speed Dial
- Handset Locator/Page
- 7 Days Standby Battery Life
- Compandor Sound Clarity
- Low Battery Indicator
- Wall Mountable
- Hearing Aid Compatible


Answering Machine Features

- 20 Minutes Record Time
- Flash Memory IC
- Time & Day Stamp
- Voice Menu Operation Guide
- Base & Handset Call Screening
- Full Remote Access
- Play/Skip/Repeat/Delete/Rewind
- Conversation Record/Memo
- Prerecorded OGM Option
- Quick Playback Option
- Separate MAILBOX for multiple users or home office.

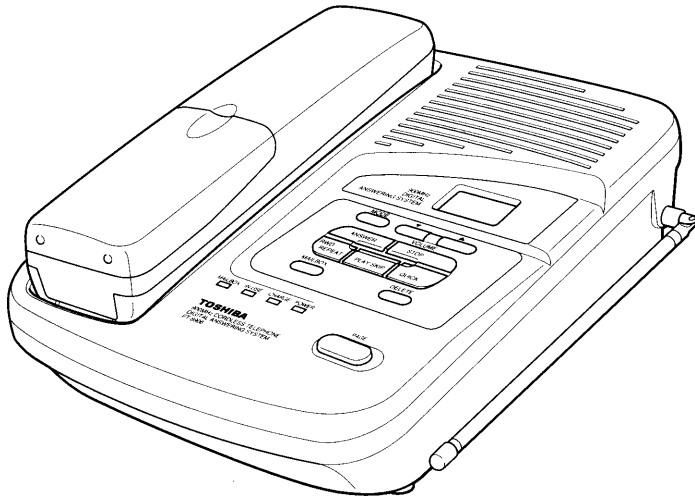


FEATURES


PARTS CHECKLIST

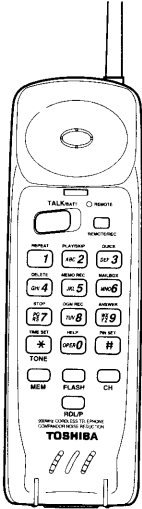


Handset

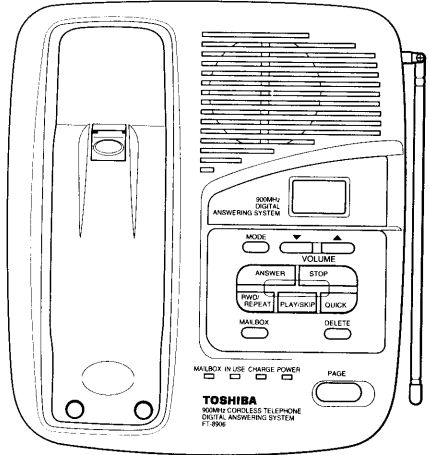

Base Unit

 


6' Modular Line Cord

 

6" Modular Line Cord


FEATURES

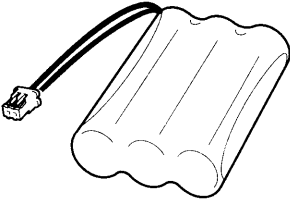


Battery Pack

SPEED DIAL INDEX	
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	

Directory Card

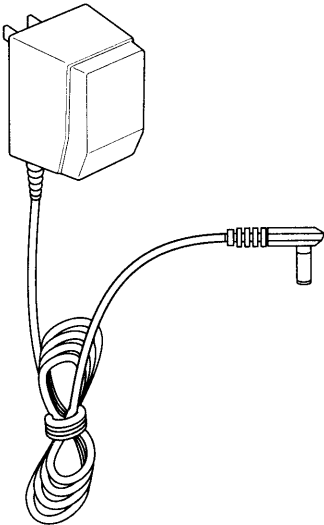

AC Adaptor

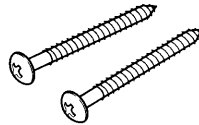

Screws (for the wall mount)




INSTALLATION

INSTALLING THE HANDSET BATTERY PACK

NOTE: Be sure to charge the handset 12-16 hours before use. See “Getting Started: Do this first” page 1.

- 1 Remove the battery compartment cover on the back of the handset by sliding it down.
- 2 Plug the battery pack cord into the connector in the battery compartment. With the handset held upright, the black wire should go to the right side of the connector terminal, and the red wire should go to the left side.
- 3 Place the battery pack in the battery compartment.
- 4 Replace the battery compartment cover by sliding it up until it clicks shut. Make sure not to get the wires of the battery pack caught in the cover.

NOTE: When replacing the battery pack, please check with State and local agencies for proper disposal of the old battery.

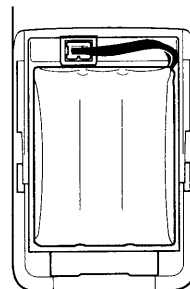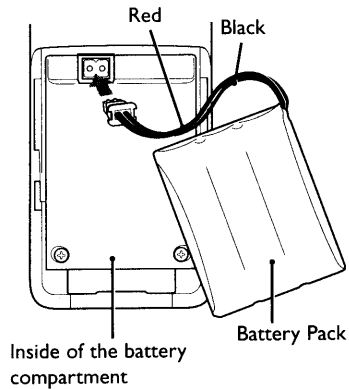
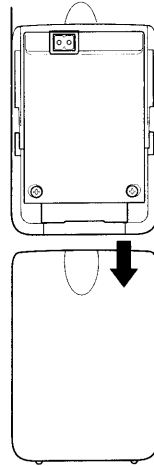


INSTALLATION

SETTING UP THE BASE UNIT


For use on a desk or counter top follow the instructions below. For Wall Mounting directions, proceed to the next page.

- 1 Make sure that your telephone jack is located near an electrical outlet. To ensure constant functioning, the outlet should not be controlled by a light switch. If the outlet is farther away, you may need an extension cord.
- 2 After the battery has been fully charged, plug one end of the telephone line cord into the back of the base in the slot labeled TEL LINE, and plug the other end into the telephone jack.
- 3 Insert the tip of the AC adaptor into the slot labeled DC IN 9V on the back of the base, and plug the other end into the electrical outlet.

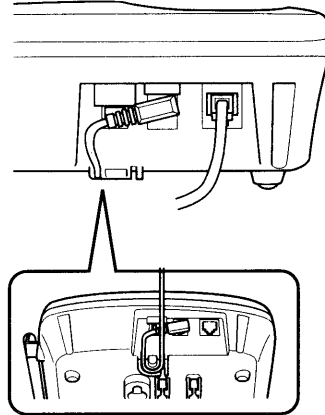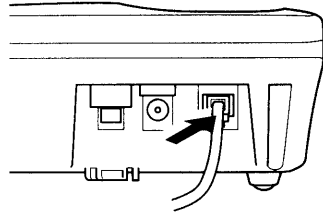

AC ADAPTOR SPECIFICATIONS

Use only the AC adaptor, or one matching its specifications exactly, with this product. Incorrect voltage may damage the unit or cause it to function improperly.

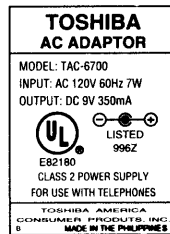

INSTALLATION




WALL MOUNTING

This wall mounting system is designed to work with a standard wall jack plate with two protruding nail-like heads on either side of the jack opening. They are available at most phone or electronics retailers.

To mount the base on the wall using a baseboard jack, cut out the template on page 42 to position screws.

- 1 Make sure that your telephone jack is located near an electrical outlet. To ensure constant functioning, the outlet should not be controlled by a light switch. If the outlet is farther away, you may need an extension cord.
- 2 Plug one end of the telephone line cord into the back of the base in the slot labeled TEL LINE.
- 3 Insert the tip of the AC adaptor into the slot labeled DC IN 9V on the back of the base.
- 4 Position the AC adaptor cord through the channel on the back of the base.
- 5 Position the base over the wall plate "screws". Plug the line cord into the jack. Press the unit towards the wall and then down to secure it properly.
- 6 Remove the switch hook tab and flip it over as shown, then plug the AC adaptor into the electrical outlet.




NOTE: Use only the AC adaptor, or one matching its specifications exactly, with this product. Incorrect voltage may damage the unit or cause it to function improperly. See page 11 for specifications.

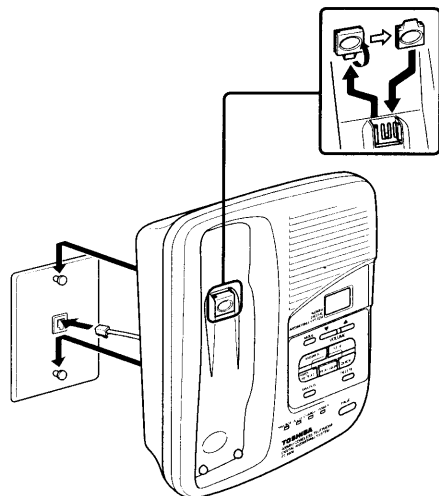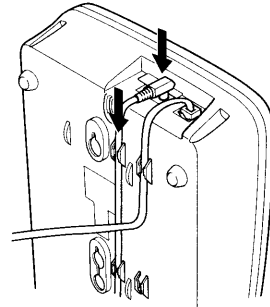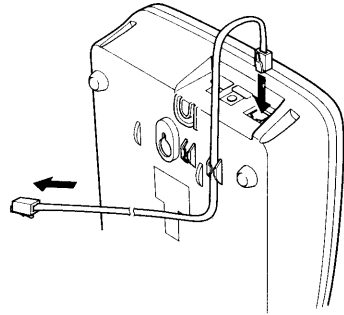

INSTALLATION

CHARGING THE HANDSET

- 1 After installing the battery pack and setting up the base, place the handset on the base unit.
- 2 The CHARGE LED lights to show that the handset is charging.
- 3 If the LED does not light, make sure the AC adaptor is plugged in securely and that the electrical outlet is working and not controlled by a light switch.
- 4 If the LED still does not light, verify that the charging contacts are clean and untarnished. Clean the contacts occasionally with a dry cloth.
- 5 The supplied Ni-Cd battery pack is not charged. It is important that this battery is charged for 12 to 16 hours continuously without any interruption before you use the handset for the first time.
See "Getting Started: Do this first" page 1.

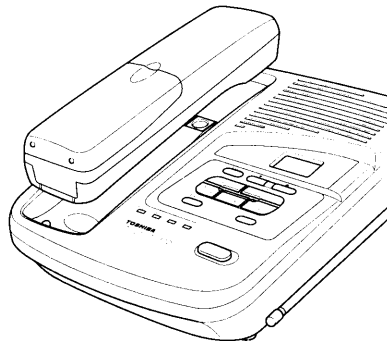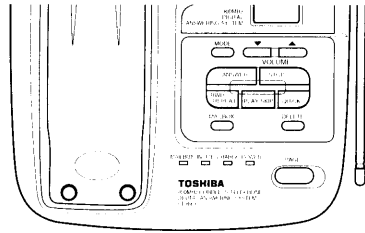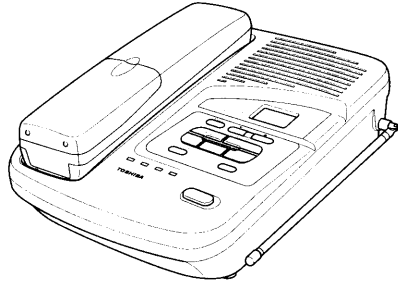

LOCATION OF CONTROLS

HANDSET

TALK/BATT/REMOTE LED

Steady Red = phone is in use.

Blinking Red = low battery status/the handset is connecting to the base for receiving or making a call, or the channel is being changed.

Steady Green = you are using the handset for remote operation of the answering machine or you are recording a phone conversation.

TALK BUTTON

Press to make a call, receive a call or hang up after a call (page 18). (For Call Waiting press the FLASH button).

tone button


If you have Rotary/Pulse service, press this button and you can have temporary tones for use with bank and other telephone services (page 20).

MEM BUTTON

Used for programming speed dial numbers into the phone (page 23, 24).

FLASH BUTTON

Used in conjunction with Telephone Company services, such as Call Waiting (page 20).

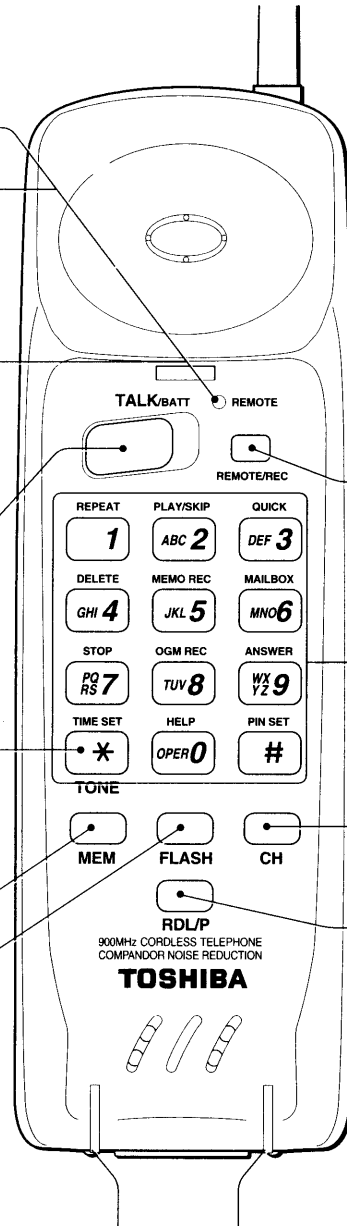

Charging Contacts

LOCATION OF CONTROLS

Speed Dial Directory Card— Used to record the numbers stored in the speed dial memory. Should be attached to the handset.

REMOTE/REC BUTTON

Press to operate the answering machine from the handset, even for Call Screening, or to record a phone conversation (page 34).

DIALPAD


Used to dial phone numbers or to operate the answering machine.

CH (channel) BUTTON

To change to a clearer frequency (page 19).

RDL/P BUTTON

Press to redial the last number dialed or to insert a pause into speed dial numbers (page 19).

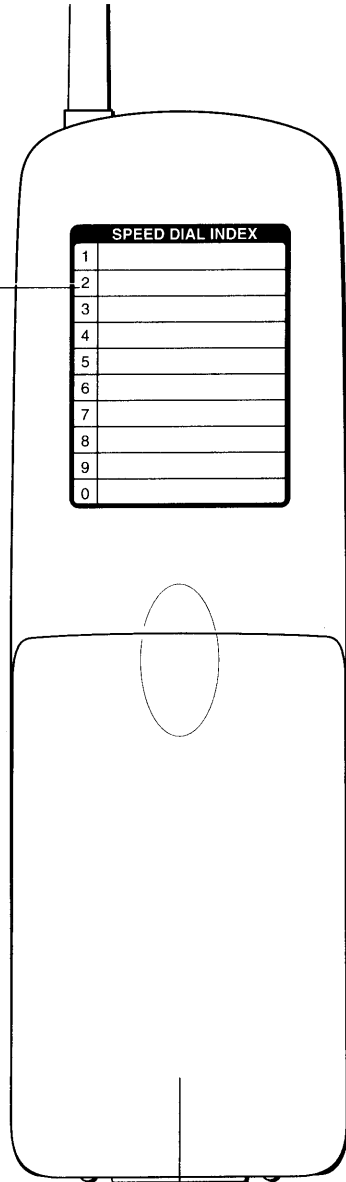

Battery Compartment— Install the rechargeable battery pack here. Charge for at least 12 hours whenever installing or replacing the battery (page 10).

LOCATION OF CONTROLS

BASE

TONE/PULSE switch sets the phone for tone or pulse dialing (page 18).

DC JACK for AC Adaptor connection

LINE MODULAR JACK for Telephone line cord connection (page 11)

MODE BUTTON Press to select the settings for the answering machine (page 28).

ANSWER BUTTON Press to turn the answering machine on and off (page 27).

RWD/REPEAT BUTTON Press during playback to play the incoming message again. Press and hold the button to rewind the messages (page 30).


LEDs
MAILBOX— On when the unit is in the mailbox mode. Blinks when there are incoming messages.

IN USE— Steady on means the line is engaged.


Also steady on during remote operation by the handset.

CHARGE— On shows that the handset is charging.

POWER— On indicates that electricity is on.

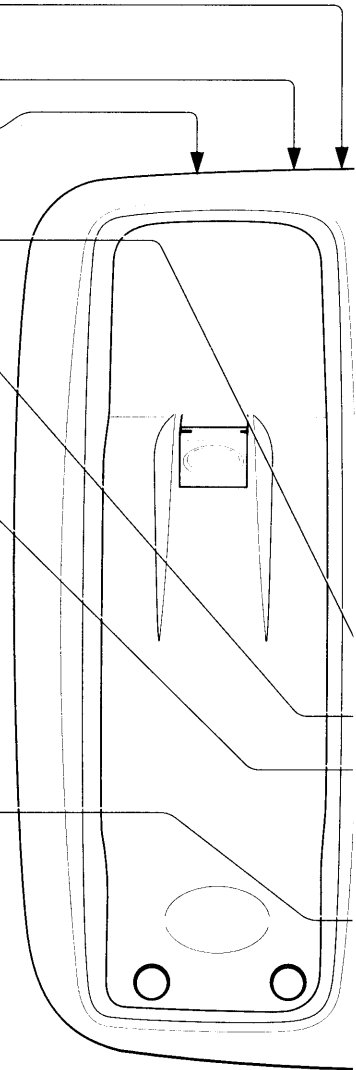

LOCATION OF CONTROLS

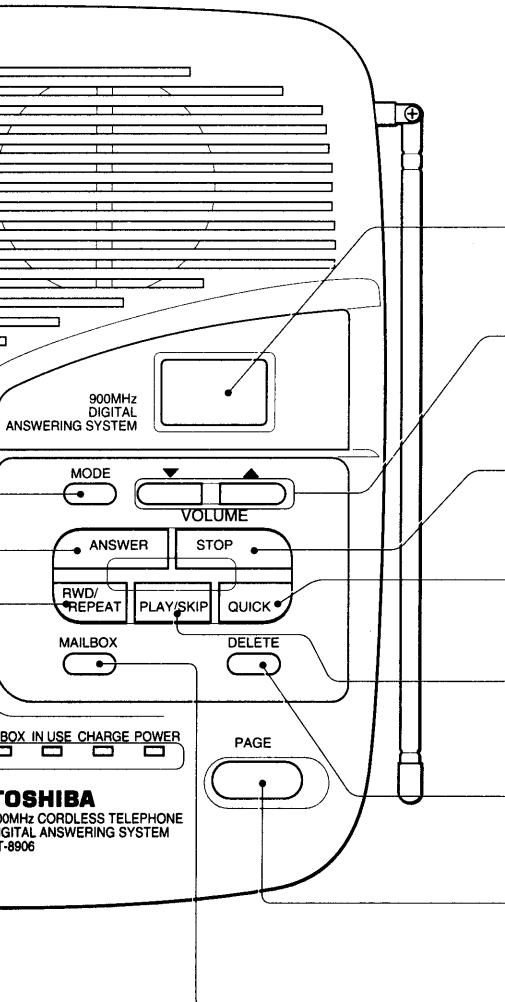

LED DISPLAY

Displays the number of messages received and other information (page 30).

VOLUME BUTTONS

Press to adjust the speaker volume (page 30), or to select the mode for the answering machine.

STOP BUTTON

Press to stop playback of incoming messages (page 30).

QUICK BUTTON

In playback mode, press for quick playback of the incoming message (page 30).

PLAY/SKIP BUTTON

Press to play messages. Press during playback to skip a message (page 30).

DELETE BUTTON

Press to delete the messages recorded (page 30).

PAGE BUTTON

Press to beep the handset for paging (page 21).

MAILBOX BUTTON

Press to place the unit into mailbox mode or back to standby (page 35).

BASICS


TONE/PULSE SELECTION

Set the Tone-Pulse switch for the type of service you have, tone or pulse. If you are not sure which type of service you have:

- 1 Set the T-P switch to T.
- 2 Press the TALK button on the handset and listen for a dial tone.
- 3 Press any number other than 0. If the dial tone stops, you have Tone service. If the dial tone continues, you have Pulse service.
- 4 If you have Pulse service, set the T-P switch to P.


See also "BANKING AND TELEPHONE SERVICES" page 20.

TONE/PULSE switch

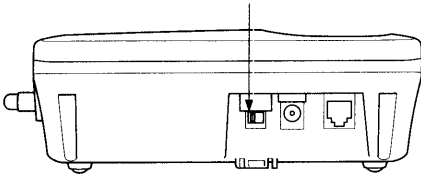

MAKING A CALL

- 1 Press the TALK button.
- 2 Listen for a dial tone. The TALK/BATT/REMOTE LED will come on in red.
- 3 Key in the phone number you are calling.
- 4 It may take a second for transmission and for ringing to start.
- 5 To hang up, press the TALK button again.

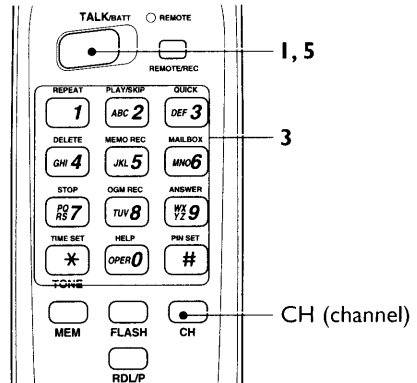

NOTES:

- If the handset battery becomes weak during conversation, warning beeps will sound every 3 seconds. Finish the call as soon as possible and return the handset to the base unit for recharging.
- If the handset is too far away from the base unit, the line may not disconnect even if you press the TALK button. In such a case, you will hear a beep sound indicating an error. To disconnect the line, bring the handset near the base unit and press the TALK button again, or return the handset to the base unit.
- If a power interruption occurs, press the TALK button. The handset returns to standby mode.

INTERFERENCE OR STATIC

Static interference can be caused by many different things, such as: cordless phones in neighbouring homes or apartments, baby monitors, microwave ovens, certain kinds of lighting, etc. To reduce static on the line:

- 1 Try moving to another location in the room or closer to the base unit.
- 2 Press the CH (channel) button to change to a clearer channel.
- 3 Lower the antenna slightly on the base unit.
- 4 If none of the above solutions works, refer to the Troubleshooting on page 39.

NOTE:

When the channel is changed, the TALK/BATT/REMOTE LED blinks. If it fails, error beeps sound.

For service information, call 1-800-631-3811.

ANSWERING A CALL


If the handset is on the base unit, simply pick it up and it will connect automatically.

If the handset is off the base unit, press the TALK button or any dialing keys including * and # to answer your call. To hang up, press the TALK button again.

LAST NUMBER REDIAL

To redial the last number that you called on the handset:

- 1 Press the TALK button.
- 2 Wait for dialtone.
- 3 Press the RDL/P button.

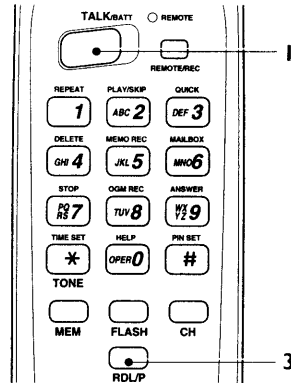

NOTES:

- You cannot redial numbers with more than 32 digits.
- RDL/P stands for REDIAL/PAUSE. If any button is pressed between the TALK and RDL/P the unit will think you want PAUSE and will not REDIAL.


BASICS

CALL WAITING

- 1 To answer a Call Waiting call, press the FLASH button.
- 2 Press the FLASH button again to switch between calls.

NOTES:


- Pressing the TALK button will not access Call Waiting; it will disconnect the current caller.
- Pressing the FLASH button without having received a Call Waiting signal may disconnect the current caller.

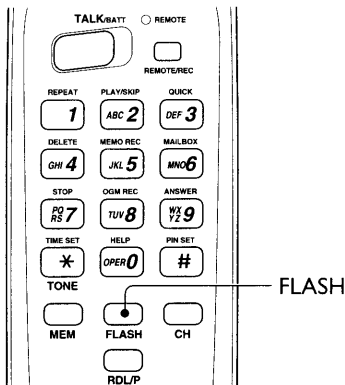

BANKING AND TELEPHONE SERVICES

Even if you have PULSE dialing, you can use this phone with banking and other phone services requiring touch tone signals.

- 1 Dial the service number and wait for the connection.
- 2 Press the TONE button and then enter the numbers required.
- 3 You will hear the tones on the line.

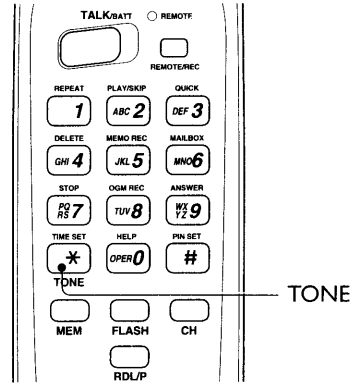

PAGING THE HANDSET


Press the PAGE button to beep the handset.

CHANGING THE SECURITY CODE

The digital security code is automatically set when you place the handset on the base unit.


The following instructions for changing the security code are provided for your use in the rare event that such a change becomes necessary, such a change should only be made when you are not making a call.

- 1 With the handset placed on the base, press the PAGE button of the base. The handset beeps.
- 2 Pick up the handset from the base.
- 3 Keep the handset away from the base for about 12 seconds.
- 4 Replace the handset on the base and wait at least 3 seconds. New security code is set automatically.

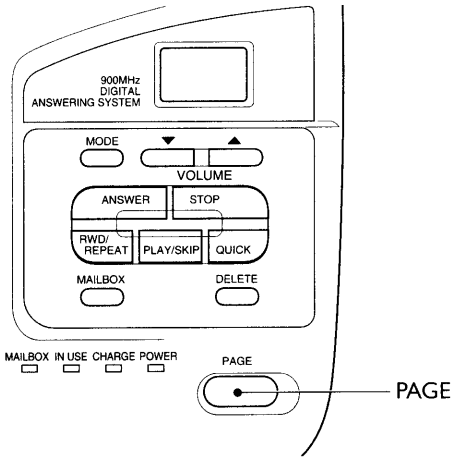

NOTE:

If a call comes in during paging, you will hear the ring.

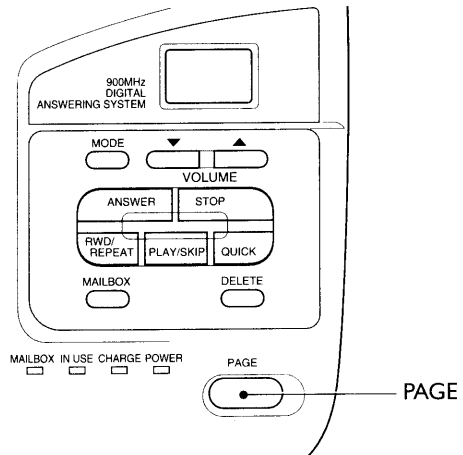

SPEED DIALING


Numbers that are called a lot can be stored in memory and dialed by pressing only two buttons, reducing the amount of manual dialing.

You can store up to 10 telephone numbers in the speed dial memory. Each number can be up to 16 digits, including numbers and symbols (0-9, #, *, TONE and PAUSE) which count 1 each.


STORING NUMBERS

Remember, each number should be stored just as you would dial it manually. So for long distance calls, you may need 1-area code-number, but for local calls, just the number.


- 1 Press the MEM button.
- 2 Dial the phone number (16 digits max.).
- 3 Press the MEM button again.
- 4 Press the number (0-9) you want the phone number assigned to.
A long beep indicates that the number has been stored successfully.

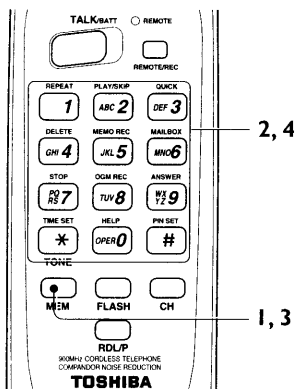

 EXAMPLE to store (101)555-1234 under (ac2).



EXAMPLE for storing a phone number and instructions for banking or voice mail systems in memory number 9:

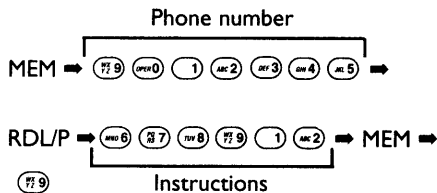

The RDL/P button works as the PAUSE button here.


NOTES:

- Each button must be pressed within 20 seconds after the previous button. Otherwise the storing procedure will be canceled.
- If you store a new telephone number in the same memory address, the previously stored telephone number will be erased.
- If you make a mistake, short beeps sound and the setting is canceled.

SPEED DIALING

DIALING A STORED NUMBER

- 1 Press TALK and wait for dial tone.
- 2 Press the MEM button.
- 3 Press the memory location number (0-9).

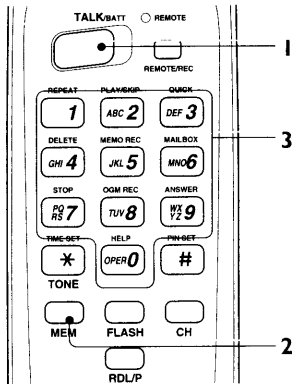

ERASING A STORED NUMBER

You can erase a number or simply store another one in its place. When you store a new phone number, the one previously stored in that memory is erased automatically. To erase a stored number:

- 1 Press the MEM button twice.
- 2 Press the memory location button (0-9).

SPEED DIALING

CHAIN DIALING

(When the telephone number is more than 16 digits)

There are some different dialing options.

You can:

- (A) Store the numbers in memory locations.
- (B) Store the numbers at the beginning of the dialing sequence, and dial the rest of the numbers manually.
- (C) Store some numbers at the end, and dial the first numbers manually.

EXAMPLE: to store

9-RDL/P-012345678-TONE-90123456:

- (A) To store the numbers in two memory locations (or addresses) using memory locations 1 and 2, for example:

First, MEM ⇒ RDL/P

TONE

⇒ MEM ⇒

Then, MEM ⇒ ⇒

MEM ⇒

To dial the above number

TALK ⇒ MEM ⇒ ⇒ MEM ⇒

- (B) To store some numbers at the beginning, and dial the rest of the numbers manually.

Still using the above example number, store from 9 to TONE in memory number 1, for example:

To dial the above number

TALK ⇒ MEM ⇒ ⇒ and then

press

- (C) To store some numbers at the end, and dial the first numbers manually, store from TONE to 6 in memory number 1, for example:

To dial the above number

TALK ⇒ RDL/P

⇒ MEM ⇒

USING THE MEMORY DIALING OR PBX

The RDL/P (redial/pause) button allows you to insert a pause of about 3 seconds in the memory dialing to make an outgoing call through a PBX or a long distance service.

EXAMPLE: to store 0-1234567 to call through a PBX in memory number 1

MEM ⇒ ⇒ RDL/P ⇒
 ⇒ MEM ⇒

If more than 3 seconds are needed, press RDL/P twice.

To dial the above number

TALK ⇒ MEM ⇒


If you require further operating instructions about memory dialing, call **1-800-631-3811**.

USING THE ANSWERING MACHINE

SETTING THE CLOCK

The answering machine's clock starts when the AC adaptor cord is plugged in. However, it does not start with the actual time. The right time must be programmed in.

The day and time are programmed all at once using a sequence of 5 numbers followed by $\#$ or \ast . The first digit is for the day of the week. The next two digits are for the hour, and the last two are for the minutes, with \ast indicating AM or $\#$ indicating PM. For example, Saturday, 3:00 p.m. would be:

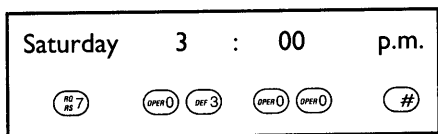


Use the table below as a guide.

Day of a week:	
Sunday	= 1
Monday	= 2
Tuesday	= 3
Wednesday	= 4
Thursday	= 5
Friday	= 6
Saturday	= 7
Hour:	01 to 12
Minute:	00 to 59
AM:	\ast
PM:	$\#$

Once you've figured out the right sequence, follow these steps to set the clock (it may help to write the sequence down first):

- 1 Press the REMOTE/REC button. The TALK/BATT/REMOTE LED will turn green. You will hear the default day and time setting and the number of messages.

- 2 Press the TIME SET \ast button.
- 3 Key in the sequence of numbers according to the table on the left. After you have entered the 5 digits and $\#$ or \ast , you will hear a long beep. Then you'll hear the new day and time.
- 4 Press the REMOTE/REC button again and the green LED will go off. If you make a mistake, just try the procedure again.

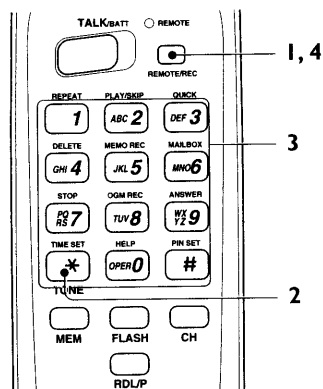

NOTES:

- Complete the clock setting within 2 minutes after step 3. Otherwise the setting will be canceled.
- If the wrong button is pressed, short beeps will sound to alert you. Press the right button or start again.
- If a call comes in during clock setting, start over after the call.
- The TALK button of the handset will not operate during remote operation of the answering machine from the handset.
- The buttons on the base unit will not operate while operating the answering machine from the handset.
- If you hear a busy tone when you try to access the phone line, the answering machine is being operated at the base.
- In case of power interruption, the clock stops, and you will need to reprogram the time once power is restored.

USING THE ANSWERING MACHINE


RECORDING THE OUTGOING MESSAGE (OGM)

You can record a personalized outgoing message or use the prerecorded electronic message. When a call is received, the answering machine answers the call and plays the OGM.

- 1 Press the REMOTE/REC button of the handset. The TALK/BATT/REMOTE LED will come on in green.
- 2 Press the OGM REC (9) button. After the long beep, begin speaking.
- 3 When you finish speaking, press OGM REC (9) again or press STOP (7). If the 59 second limit is reached before you finish, recording will stop and the OGM will playback automatically.
- 4 When finished, press the REMOTE/REC button again, and the green LED will go off.

NOTES:

- If there is an incoming call, the answering machine operation from the handset is interrupted, and the incoming ring sounds.
- The TALK button of the handset will not operate during remote operation of the answering machine from the handset.
- The buttons on the base unit will not operate while operating the answering machine from the handset.
- If you hear a busy tone when you try to access the phone line, the answering machine is being operated at the base.
- If the OGM is shorter than 4 seconds, it will not be recorded.

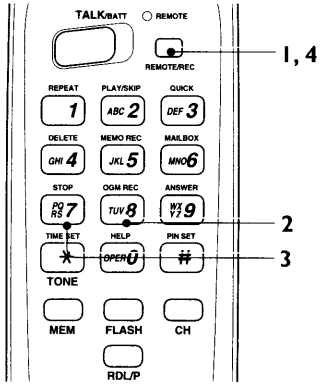


USING THE ANSWERING MACHINE


TURNING THE ANSWERING MACHINE ON & OFF

AT THE BASE:

- 1 Check the LED display to see if the answering machine is on or off. If the LED display is on, the unit is on and ready to take messages. If the LED display is off, it will not take messages. (The unit will not take messages even with the LED on when the ICM (Incoming message) mode has been set to Announce Only. For more information, see page 29.)
- 2 Simply press the ANSWER button to change the status from on to off or off to on. The LED display will indicate the change.
- 3 When the unit is turned on, it initializes by playing the outgoing message. If you want to stop playing, press the STOP button.

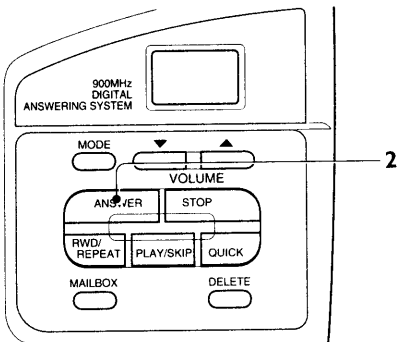

- 3 Press the REMOTE/REC button again, and the green LED will go off.

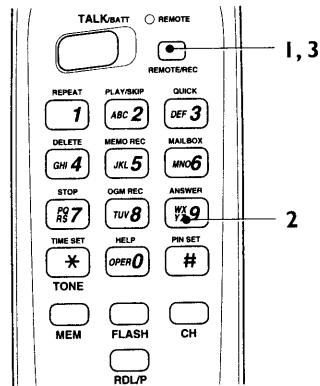

NOTES:

- If there is an incoming call, the answering machine operation from the handset is interrupted, and the incoming ring sounds.
- The TALK button of the handset will not operate while operating the answering machine from the handset.
- The buttons on the base unit will not operate while operating the answering machine from the handset.
- If you hear a busy tone when you try to access the phone line, the answering machine is being operated at the base.

TO CHANGE THE OUTGOING MESSAGE (OGM)

USING THE HANDSET


- 1 Press the REMOTE/REC button. The TALK/REMOTE/REC LED will come on in green.
- 2 Simply press the ANSWER (79) button to change the status from on to off or vice versa.

When you turn on the answering machine, you will hear the outgoing message. If you want to change from the pre-recorded OGM to your own recorded OGM or vice versa, press the ANSWER button on the base unit while the unit is playing the OGM.

USING THE ANSWERING MACHINE

SETTING THE RINGER VOLUME


- 1 Press the MODE button until you hear the “ringer volume” announcement. (Pressing the MODE button selects “ringer volume”, “ringer select”, “recording time” or “CPC” in sequence).
- 2 Choose one of three settings using the VOLUME ▼/▲ buttons:
High – Sets the ringer volume to high level.
Low – Sets the ringer volume to low level.
Off – Turns the ringer off.
- 3 Press the MODE button again. You will hear a long beep indicating that the ringer volume is set.

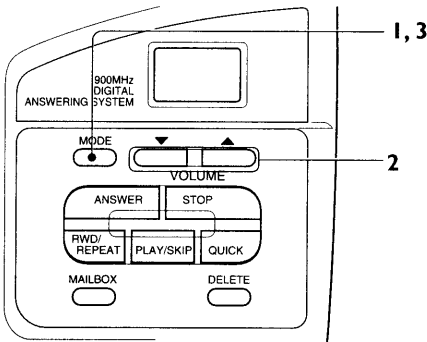

SETTING THE NUMBER OF RINGS

Selects the number of rings before the answering machine answers to a caller.

- 1 Press the MODE button until you hear the “ringer select” announcement. (Pressing the MODE button selects “ringer volume”, “ringer select”, “recording time” or “CPC” in sequence).
- 2 Choose one of four settings using the VOLUME ▼/▲ buttons:
2 times – Answering machine will always answer after two rings.
4 times – Answering machine will always answer after four rings.
6 times – Answering machine will always answer after six rings.
Toll Saver – Toll Saver is used for when you call to check your messages. If you have no new messages, the phone will ring 3 times and you can hang up before the answering machine picks up. If there are messages to be retrieved, the machine will answer after the second ring.
- 3 Press the MODE button again. You will hear a long beep indicating that the ringer time is set.

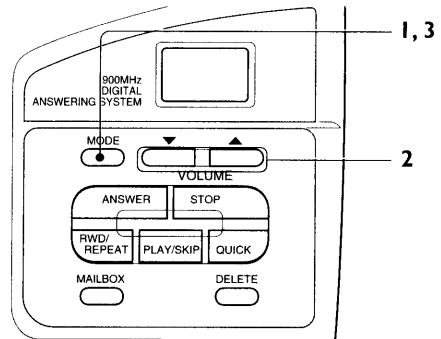


USING THE ANSWERING MACHINE

SETTING MAXIMUM RECORDING TIME FOR INCOMING MESSAGES

The answering machine can record up to 40 different messages or 20 minutes, whichever comes first. The maximum length of any one message can be set at 1 minute, 4 minutes or announce only to best fit the situation.


- 1 Press the MODE button until you hear the “recording time” announcement. (Pressing the MODE button selects “ringer volume”, “ringer select”, “recording time” or “CPC” in sequence).
- 2 Choose one of three settings using the VOLUME ▼/▲ buttons:
 - 1 minute – Sets a maximum record time of 1 minute per message.
 - 4 minutes – Sets a maximum record time of 4 minutes per message.
 - Announce OnLy – The unit answers your outgoing message only but does not record incoming messages.
- 3 Press the MODE button again. You will hear a long beep indicating that the recording time is set.

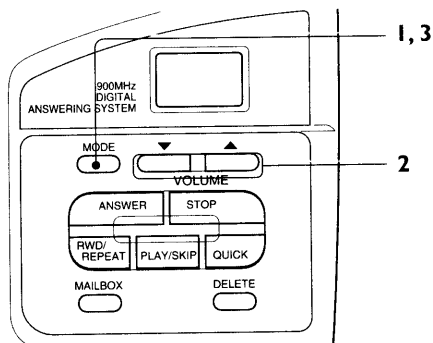

TURNING THE CALLING PARTY CONTROL (CPC) ON OR OFF

The answering machine will stop recording when the caller hangs up if the CPC is turned on. You can save the remaining recording time.

- 1 Press the MODE button until you hear the “CPC” announcement. (Pressing the MODE button selects “ringer volume”, “ringer select”, “recording time” or “CPC” in sequence).
- 2 Choose one of two settings using the VOLUME ▼/▲ buttons:
 - On – Saves the available recording time as the answering machine disconnects the line when the caller hangs up.
 - Off – If you have Call Waiting service, set CPC to off. Otherwise, the answering machine stops recording the incoming message when a call waiting signal comes in.
- 3 Press the MODE button again. You will hear a long beep indicating that the CPC is turned on or off.

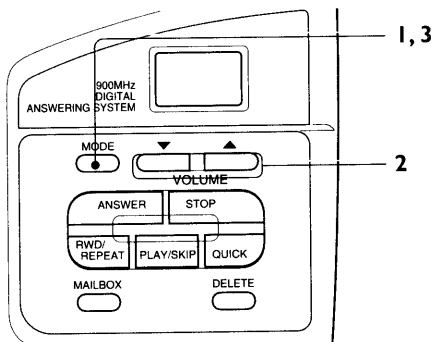

USING THE ANSWERING MACHINE

PLAYING RECORDED MESSAGES

You can listen to messages at the base unit or on the handset.

AT THE BASE:

- 1 The number on the display will blink to indicate that new messages have been received.
- 2 Press the PLAY/SKIP button to hear the messages. They will play in the order they were received.

For faster playback, press the QUICK button. To return to normal speed, press QUICK again.

To stop playback, press the STOP button.


To delete the message, press the DELETE button before the next message starts playing. (For more information, see page 32)

To repeat the message, press the RWD/REPEAT button. To repeat the previous message, press RWD/REPEAT within 4 seconds after the current message has started. If you press after 4 seconds, the current message is repeated from the beginning.

To rewind the messages, press and hold the RWD/REPEAT button during playback. The messages are played back from when you release the button.

To skip to the next message, press the PLAY/SKIP button.

To adjust the speaker volume, press the VOLUME ▼/▲ buttons. The volume level is displayed by a figure from 1 to 15.

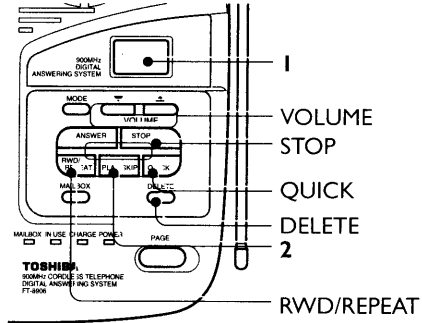

USING THE ANSWERING MACHINE

USING THE HANDSET

1 Press the REMOTE/REC button. The TALK/BATT/REMOTE LED will come on in green.

2 Press PLAY/SKIP (M2) to hear the messages. They will play in the order in which they were received.

For faster playback, press the QUICK (M3) button. To return to normal speed, press the button again.


To stop playback, press the STOP (M7) button.

To delete the message, press the DELETE (M4) button before the next message starts playing.

To repeat the message, press the REPEAT (M1) button. To repeat the previous message, press the REPEAT (M1) button within 4 seconds after the current message has started. If you press after 4 seconds, the current message is repeated from the beginning.

To skip to the next message, press the PLAY/SKIP (M2) button.

3 Press the REMOTE/REC button again to exit, and the green LED will go off.

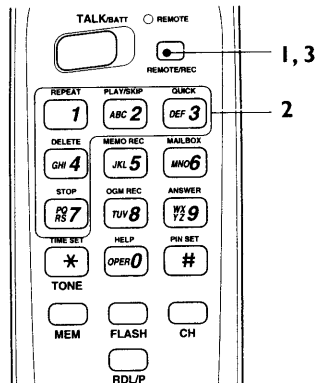

NOTES:

- To maintain maximum available record time, it is a good idea to delete the old messages.
- If there is an incoming call, the answering machine operation from the handset is interrupted, and the incoming ring sounds.
- The TALK button of the handset will not operate while operating the answering machine from the handset.
- The buttons on the base unit will not operate while operating the answering machine from the handset.
- If you hear a busy tone when you try to access the telephone line, the answering machine is being operated at the base.

USING THE ANSWERING MACHINE

DELETING RECORDED MESSAGES

You can delete messages one at a time or all at once.

To delete individual messages (at the BASE and HANDSET):

Press the DELETE button during playback, immediately after, or before the next message begins. You will hear a confirmation tone when the deletion is complete.

To delete all messages (only at the BASE):

After playback is over, press and hold the DELETE button at the BASE for approximately 1 second. There will be one long beep to indicate successful deletion.

NOTES:

- ***If there are messages that you have not listened to, you will hear several short beeps and the messages will not be deleted. This is to protect you from accidentally erasing messages you have not yet listened to.***
- ***To maintain maximum available record time, it is a good idea to delete the old messages.***

SCREENING INCOMING CALLS

You can screen calls either using the base or the handset.

AT THE BASE:

- 1 After the answering machine answers, the base speaker lets you hear the caller as the machine records the message.
- 2 To answer the call immediately, pick up the handset or press the TALK button on the handset. The answering machine will disconnect automatically.
- 3 If the message portion was longer than 4 seconds, it will be retained as a message.

NOTE:

The base speaker does not let you hear the outgoing message (OGM).

USING THE HANDSET:

While the answering machine is answering, the TALK/BATT/REMOTE LED blinks in red.

- 1 After the call has been answered, press the REMOTE/REC button. The TALK/BATT/REMOTE LED will be green.
- 2 Through the earpiece speaker you will hear the caller leaving the message.
- 3 If you want to answer the call now, press the TALK button. The answering machine will disconnect.
- 4 If the message portion was longer than 4 seconds it will be retained as a message.

USING THE ANSWERING MACHINE

LEAVING A MEMO MESSAGE

You can record a memo, as a reminder to yourself or as a message for someone else in the household. A memo is stored and played back like any other incoming message, and the LED display will light to indicate that a message has been received. A memo can be recorded for up to 4 minutes.


- 1 Press the REMOTE/REC button on the handset. The TALK/BATT/REMOTE LED will come on in green.
- 2 Press the MEMO REC (M 5) button.
- 3 After the long beep, begin speaking.
- 4 When you have finished the memo, press the MEMO REC (M 5) button again, or the STOP (R 7) button.
- 5 When finished, press the REMOTE/REC button again.

NOTES:

- If a call comes in during the memo recording, the unit will stop recording automatically and the ringer will sound. You will need to start over after the call. If the memo recording so far was more than 4 seconds, it will be retained as a message.
- If you hear a busy tone when you try to access the telephone line, the answering machine is being operated at the base.

To leave a memo message in the MAILBOX

Set the MAILBOX mode by pressing the MAILBOX button on the handset, then follow the same procedure shown on the left.

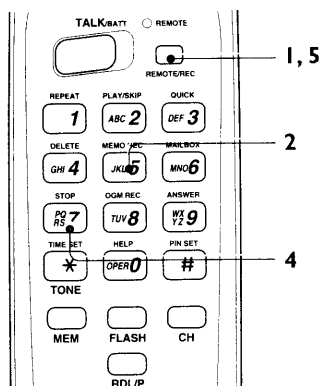

USING THE ANSWERING MACHINE


RECORDING A PHONE CONVERSATION

You can record a telephone conversation that is already in progress. Remember, the total maximum record time of the unit is 20 minutes and the maximum record time of one phone conversation is 10 minutes. The conversation is stored and played back like an incoming message.

- 1 During the conversation, press the REMOTE/REC button on the handset. The TALK/BATT/REMOTE LED changes from red to green, and recording starts automatically.
- 2 To stop recording, press the REMOTE/REC button again. If maximum record length is reached, recording will stop automatically without notification.

NOTES:

- During recording, only TALK, CH (channel) and REMOTE/REC buttons operate.
To answer a Call Waiting Call, you would need to stop recording and then press the FLASH button.
- If the recorded conversation is less than 4 seconds, it will be automatically deleted.
- The telephone beeps intermittently to alert the parties that the conversation is being recorded.

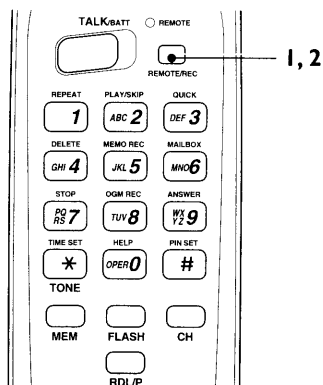

USING THE ANSWERING MACHINE

USING THE MAILBOX

With the MAILBOX, you can separate messages for a specific person or for a specific purpose, such as business calls, by incorporating the MAILBOX PIN (Personal Identification Number) into your OGM. Or, you can exchange private messages with particular persons you give the PIN to.

The operations of the base unit, such as recording outgoing messages and listening to incoming messages, are the same as those of the usual answering mode, except for setting the MAILBOX mode, and are explained separately on those pages.


- In the MAILBOX mode, you can;
 - record the MAILBOX outgoing message
 - playback the MAILBOX outgoing message
 - playback the MAILBOX incoming message (quick playback is also possible)
 - delete the MAILBOX incoming message
 - leave a memo message in the MAILBOX.
- You cannot operate the ANSWER button in the MAILBOX mode.

To set the MAILBOX PIN

- 1 Press the REMOTE/REC button. The TALK/BATT/REMOTE LED come on in green. The answering machine will announce the current day and time.
- 2 Press the PIN SET (#) button.
- 3 Press the desired 2-digit PIN.
- 4 Press (*) button. You will hear a long beep indicating that the new 2-digit PIN is accepted.
- 5 Press the REMOTE/REC button again to disconnect.

NOTE:


In the event of a long power failure, the MAILBOX PIN will revert to the 00 setting.

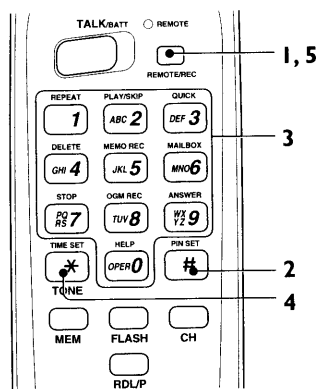

USING THE ANSWERING MACHINE

To record the MAILBOX outgoing message (OGM)

- 1 Press the REMOTE/REC button. The TALK/BATT/REMOTE LED above the button comes on in green.
- 2 Press the MAILBOX (M) button to set the MAILBOX mode.
- 3 Press the OGM REC (R) button to record the MAILBOX outgoing message (OGM).
- 4 Press the STOP (S) button or OGM REC (R) button to stop recording. The answering machine automatically lets you hear the playback of the MAILBOX OGM.
- 5 Press the REMOTE/REC button again, and the green LED will go off.

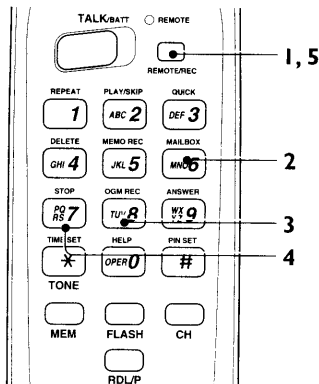

To leave a message in the MAILBOX from outside telephone

- 1 Press the (*) button and 2-digit of MAILBOX PIN while the answering machine plays the outgoing message (OGM).


- 2 Begin speaking at the tone.

NOTE:

If a call is placed to a MAILBOX for which no OGM was specifically recorded, the answering machine will not play any OGM.

To listen to a MAILBOX message at the base

- 1 Press the MAILBOX button to set the MAILBOX mode.
- 2 Press the PLAY/SKIP button after the playback of the MAILBOX outgoing message (OGM) ends, and messages will begin playing automatically. (You can also listen to a message by using the handset. For more information, see page, 30 and 31).
- 3 Press the MAILBOX button to exit the MAILBOX mode. After 20 seconds, the machine automatically returns to the ANSWER mode.

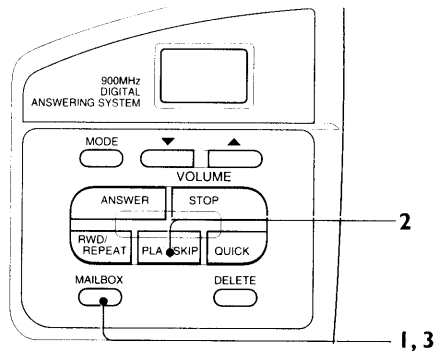

REMOTE OPERATION


SETTING THE PIN NUMBER

In order to gain access to your answering machine when you are away from home, you need to identify yourself through the use of a Personal Identification Number (PIN). The PIN is preset to 00. You can select any two digit number between 00 and 99 as your PIN. To change your PIN,

- 1 Press the REMOTE/REC button. The TALK/BATT/REMOTE LED will come on in green. The answering machine will announce the current day and time, and the number of new messages.
- 2 Press the PIN SET (#) button.
- 3 Press the desired 2-digit PIN.
- 4 Press the PIN SET (#) button again. You will hear a long beep indicating that the new PIN is accepted.
- 5 Press the REMOTE/REC button again to disconnect.

NOTES:

- In the event of a long power failure, the PIN will revert to the 00 setting.
- If there is an incoming call, the answering machine operation from the handset is interrupted, and the incoming ring sounds.
- The TALK button of the handset will not operate during operation of the answering machine from the handset.
- The buttons on the base unit will not operate during operation of the answering machine from the handset.
- If you hear a busy tone when you try to access the phone line, the answering machine is being operated at the base.

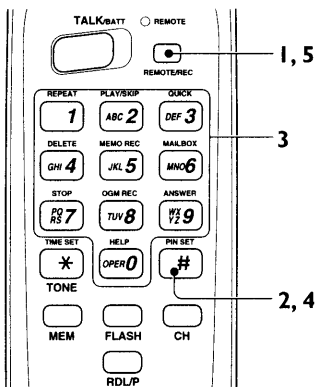

REMOTE OPERATION

CALLING IN FROM A REMOTE LOCATION

You can retrieve messages or change answering machine settings by calling the unit from a touch-tone phone. Even if the unit has been left off, you can still access it by turning it on first.

- IF THE UNIT IS OFF:**
Let the phone ring at least 10 times. The line will connect and you will hear several short beeps. Press the **#** button and enter your PIN.
IF THE UNIT IS ON:
After the unit begins playing your outgoing message, press the **#** button and enter your PIN.
- The answering machine will announce the day and time and number of new messages.
- You can use all the same commands as you would using the handset to retrieve messages. The code numbers are the same as those labelled on the handset. Press the **#** button followed by the appropriate number.
- When finished, hang up.

NOTES:

- *When entering your PIN number, the second digit must be entered within 2 seconds after the first one.*
- *If you enter a wrong PIN number 3 times, the line will be disconnected.*
- *Enter the command within 20 seconds or while you hear intermittent beeps. If you fail to enter a command in time, the line is disconnected.*

TABLE OF COMMANDS

OPERATION	KEYS
REPEAT	PRESS # 1
PLAY	PRESS # 2
SKIP	PRESS # 2
QUICK PLAY	PRESS # 3
INDIVIDUAL DELETE	PRESS # 4
RECORD MEMO	PRESS # 5
MAILBOX ON/OFF	PRESS # 6
STOP	PRESS # 7
RECORD OGM	PRESS # 8
STOP RECORD	PRESS # 7
ANSWER ON/OFF	PRESS # 9
HELP	PRESS # 0

NOTE:

To leave a message in the MAILBOX

1. Press the ***** button and the MAILBOX PIN while the answering machine plays the outgoing message (OGM).
2. Begin speaking at the tone.

TROUBLESHOOTING

Should any problem occur with the set, make the following simple tests to determine whether or not servicing is required.

If the problem persists after you have made these tests, **call 1-800-631-3811 for Customer Service.**

PROBLEM	Cause and Countermeasure
No dial tone. No calls come in.	<ul style="list-style-type: none">• AC adaptor of the base unit is not plugged into the AC 120V outlet.• Battery is low. → Place the handset on the base unit to recharge.• Telephone line cord is disconnected. → Check the wall telephone jack.• The previous call is not disconnected. → Press the TALK button to disconnect the line.• Trouble with the telephone line. → Check with another telephone.
The line is noisy.	<ul style="list-style-type: none">• The handset is too far from the base unit. → Bring the handset near the base unit.• The battery is low. → Place the handset on the base unit to recharge.• The base unit is located in a place with high interference. → Relocate the base unit.• Interference from TV, appliances, etc. → Move away from the interference source.• May be line noise. → Check with another phone.
Battery pack goes low quickly.	<ul style="list-style-type: none">• The battery pack was not fully charged at the initial charging. First, disconnect the phone from the telephone line and press the handset TALK button. Set the handset aside for about 8 hours to discharge the battery. Charge the battery pack for 12 to 16 hours without any interruption.• To avoid Ni-Cd battery memory effect, be sure to charge only as needed.• Battery needs to be replaced.

TROUBLESHOOTING

PROBLEM	Cause and Countermeasure
The message is incomplete.	<ul style="list-style-type: none"> • The incoming message was longer than the recording time (1 or 4 minutes), or shorter than 4 seconds. • The memo message was longer than 4 minutes, or shorter than 4 seconds. • The phone conversation was longer than 10 minutes. • The recording capacity became full during recording. • The phone was answered during recording. • CPC is set to ON and a Call Waiting signal was received during recording.
The answering machine does not respond to remote operation.	<ul style="list-style-type: none"> • You are not calling from a touch tone phone. • The PIN number you entered was wrong. (See page 37.) There was a power interruption and PIN has reset to 00.
The answering machine does not answer callers.	The recording capacity is full. In this case, the line will be connected after 10 rings. However, the answering machine will not answer with the OGM. You will hear intermittent beeps prompting make lower case you to enter your PIN number.
The clock is incorrect.	<ul style="list-style-type: none"> • There was a power interruption. → Reset the time. (See page 25.)
The unit operates abnormally.	Try in this order. <ol style="list-style-type: none"> 1 Disconnect the AC adaptor. 2 After a few seconds, connect the AC adaptor again.
"E" lights up in the LED display.	Disconnect the AC power cord and connect

TROUBLESHOOTING

If you want to reset the unit to the factory settings

You can cancel all settings such as for the answering machine and speed dialing by the following process.

- 1** Disconnect the AC adaptor and telephone line cord from the base.
Keep the AC adaptor connected to the wall outlet. Make sure that the telephone line cord remains disconnected during this procedure.
- 2** Set the TONE/PULSE switch to T.
- 3** While pressing the PLAY/SKIP button and the RWD/REPEAT button, plug the AC power adaptor into the base.
A beep sounds and the LED displays "0".
- 4** Disconnect the AC adaptor from the base again.
- 5** Plug the AC adaptor into the base again. The LED displays "P". The unit is reset. Press any key on the base to clear "P" from the LED.

To resume using the unit, connect the telephone line cord and place the handset on the base.


SPECIFICATIONS

HANDSET

Receive Frequency	925.999 ~ 927.951 MHz
Transmit Frequency	902.078 ~ 904.030 MHz
Power Source	Customer Replaceable Ni-Cd Battery 600 mAH 3.6 V DC
Battery Life	7 days at Standby Mode, after proper initial charging cycle
Dimensions (H/W/D)	Approx. 6 1/2" X 2 1/4" X 1 1/2" (162 x 54 x 38 mm) Antenna Length 2 1/4" (54.9 mm)
Weight	Approx. 7.8 oz (220 g)

BASE UNIT

Receive Frequency	902.078 ~ 904.030 MHz
Transmit Frequency	925.999 ~ 927.951 MHz
Power Source	AC 120 V 60 Hz/DC 9 V
Dimensions (H/W/D)	Approx. 2 1/2" X 6 3/4" X 7 1/2" (63.5 x 170 x 188 mm)
Weight	Approx. 1 lb 5 oz (600 g)

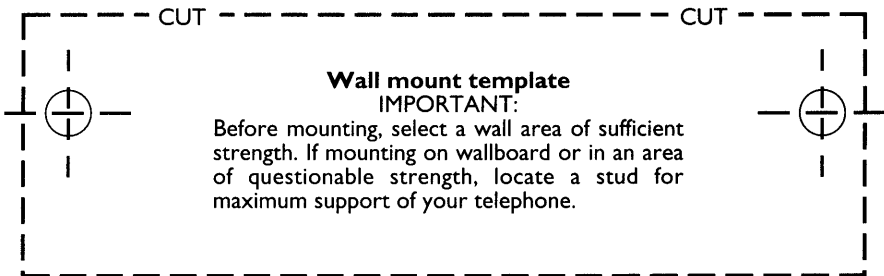

SPECIFICATIONS

SUPPLIED ACCESSORIES

Rechargeable Battery	(1)	TRB-8000	Part #. RC004931
AC Adaptor	(1)	TAC-6700	Part #. RC003528 for FT-8906A or
		TAC-6700BK	Part #. RC003328 for FT-8906ABK
Short Telephone Cord	(1)		Part #. RC001872
Long Telephone Cord	(1)		Part #. RC001861
Owner's manual	(1)		Part #. RC005141
Speed Dial Index Card	(1)		Part #. RC005152
Wall Mount Screw	(2)		Part #. RC000936
Quick Reference Guide	(1)		Part #. RC005142

For the purchase of accessories, please call **1-800-631-3811**.

WARRANTY/SERVICE

SERVICE REQUIREMENTS

If the cordless telephone should malfunction, all repairs will be performed by an authorized Toshiba Service Station. This unit has been registered with the FCC for direct connection to the telephone network. Under the FCC program, no customer is authorized to repair this unit. This applies to a unit both in and out of warranty. If an unauthorized repair is performed, the registration of the unit for direct connection to the network will be null and void. If the unit is still in warranty, the remainder of the warranty period will also be null and void.

It is the responsibility of users requiring service to report the need for service to the Toshiba dealer.

IMPORTANT INSTRUCTIONS TO USERS

Your FT-8906A has been designed and constructed to conform to federal regulations and can be connected to the phone line as described in this manual.

Please note that each product connected to the telephone line places a certain load on the line. We designate this as the unit's "Ringer Equivalence Number".

It is most unlikely, but...If your FT-8906A should cause problems on the phone line, the phone company has the right to temporarily discontinue your service. If this happens, the phone company will notify you and give you the opportunity to correct the problem. Also, you need to know that the phone company does have the right to make changes in their lines and/or equipment.

If these changes might affect your FT-8906A (or require changes in the FT-8906A or its

connection), the phone company will notify you in writing, so you will have the chance to take whatever action is necessary to ensure uninterrupted phone service.

FCC REQUIREMENTS

You are no longer required by the FCC to notify your local telephone company of your intent to connect a new telephone. Your local telephone company may call you and request information about your phone such as: the brand name, model number, registration number, and ringer equivalence number. This information is provided on a label located at the bottom of the base unit and handset.

You may not directly connect your FT-8906A to coin telephone services. Check with your local telephone company if you wish to connect your FT-8906A to a party line service. Some party line services require a special adaptor or modification to your telephone.

WARRANTY/SERVICE

TELEPHONE/TELEPHONE ANSWER MACHINE LIMITED WARRANTY

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and not to any other purchaser or transferee.

Limited One (1) Year Warranty of Parts and Labor

TACP/THI warrant this product and its parts against defects in materials or workmanship for a period of one year after the date of original retail purchase.

During this period, TACP/THI will repair a defective product or part, without charge to you. You must deliver the entire unit to a TACP/THI Authorized Service Station. You are responsible for all transportation and insurance charges for the unit to and from the Authorized Service Station. If you live in the Continental U.S.A. you may, at your option, forward your product for exchange to: Toshiba America Consumer Products Inc.

Return Center
1420C Toshiba Dr.
Lebanon, TN37087

You are responsible for all transportation and insurance charges for the product to the Return Center. Products shipped to the Return Center must be insured and safely and securely packed, preferably in the original shipping carton, and a letter explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed.

Upon receipt we will, at our option, exchange the unit with a new or refurbished unit.

Owner's Manual

You should read the owner's manual thoroughly before operating this product.

Your Responsibility

The above warranties are subject to the following conditions.

- (1) You must retain your bill of sale or provide other proof of purchase.
- (2) These warranties are effective only if the product is purchased and operated within the U.S.A or Puerto Rico.
- (3) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.
- (4) After the warranty period has expired in the U.S.A. Call 1-800-631-3811 to receive information concerning the closest Authorized Service Station in your area or to receive information on an exchange price. Payment must be enclosed with product in the form of a certified check or money order and forward your product to:
Toshiba America Consumer Products Inc.
Return Center
1420C Toshiba Dr.
Lebanon, TN37087
- (5) Physically damaged products are not acceptable for repair or exchange within or after the warranty period expires and will be returned as received.

WARRANTY/SERVICE

How to Obtain Warranty Service

In the event a problem should develop with your product, please proceed as follows:

(1) Arrange for the delivery of the product to the TACP/THI Authorized Service Station. Products shipped to the Service Station must be insured and safely and securely packed, preferably in the original shipping carton. A letter explaining the defect and a copy of the bill of sale or other proof of purchase must be enclosed. All transportation and insurance charges must be prepaid by you.

In The Continental United States contact:



In Hawaii contact:

Toshiba Hawaii
327 Kamakee Street,
Honolulu, HA 96814
(808)-521-5377

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. With the exception of any warranties implied by state law as hereby limited, the foregoing express warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any product or parts.

In no event shall TACP or THI be liable for consequential or incidental damages. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP and THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within which you may bring an action beyond the limits provided by state law so the above provision may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

IMPORTANT: PACKING AND SHIPPING INSTRUCTIONS

When you send the product to a service center, you should use the original carton box and packing material, then insert the original carton box containing the unit into another carton, using more packing material.

REMOTE OPERATION CARDS

CUT

TOSHIBA

REMOTE OPERATIONS OF FT-8906A

- A** Call your machine from touch tone phone. After your machine answers, enter # and PIN (Access Code) pressing each digit for at least 1 second. If you enter # and PIN correctly, your machine sounds invitation tone after the announcement of the time and others. Now enter the command (# and number) by pressing the keypad.
- B** To playback incoming and memo messages press #2. To skip press #2 again during playback. To repeat press #1 during playback. To play quickly press #3 during playback. To delete press #4 during playback.
- C** To record MEMO message press #5. To record OGM press #8. To stop recording press #7. To turn on or off the answer mode press #9. To turn on or off the mailbox press #6.
- D** To stop operation press #7. If you need help press #0.

CORTE

TOSHIBA

OPERACIONES POR CONTROL REMOTO FT-8906A

- A** Llame a su teléfono desde un teléfono de teclado. Después que su teléfono conteste, introduzca # y el código de acceso (PIN) presionando cada dígito durante 1 segundo como mínimo. Si introduce correctamente # y el PIN, su teléfono emitirá un tono de invitación después del anuncio de la hora y demás. Luego introduzca el mandato (# y un número) presionando las teclas.
- B** Para reproducir los mensajes recibidos y los memorandos presione #2. Para saltar presione otra vez #2 durante la reproducción. Para repetir presione #1 durante la reproducción. Para reproducir rápidamente presione #3 durante la reproducción. Para borrar presione #4 durante la reproducción.
- C** Para grabar mensajes de memorando presione #5. Para grabar un mensaje de contestación presione #8. Para detener la grabación presione #7. Para activar o desactivar el modo de contestación presione #9. Para activar o desactivar el buzón presione #6.
- D** Para detener la operación presione #7. Si necesita ayuda presione #0.

REMOTE OPERATION CARDS

CUT

TOLL FREE CUSTOMER SERVICE 1-800-631-3811		
MESSAGE REPEAT # + 1	MESSAGE PLAYBACK/SKIP # + 2	MESSAGE QUICK PLAYBACK # + 3 (during playback)
MESSAGE DELETE # + 4 (during playback)	MEMO RECORD # + 5	MAILBOX ON/OFF # + 6
RECORD STOP/ OPERATION STOP # + 7	OGM RECORD # + 8	ANSWER ON/OFF # + 9
	HELP # + 0	REMOTE ACCESS # + PIN

CORTE

REPETICIÓN DE MENSAJE # + 1	REPRODUCCIÓN/ SALTO DE MENSAJE # + 2	REPRODUCCIÓN RÁPIDA DE MENSAJE # + 3 (durante la reproducción)
BORRADO DE MENSAJE # + 4 (durante la reproducción)	GRABACIÓN DE MENSAJE DE MEMORANDO # + 5	ACTIVACIÓN/DESACTIVACIÓN DEL BUZÓN # + 6
DETENCIÓN DE GRABACIÓN/OPERACIÓN # + 7	GRABACIÓN DE MENSAJE DE CONTESTACIÓN # + 8	ACTIVACIÓN/DESACTIVACIÓN DE CONTESTACIÓN # + 9
	AYUDA # + 0	ACCESO AL CONTROL REMOTO # + PIN

For technical assistance, purchase of accessories or service, please call 1-800-631-3811.

IMPORTANT

We suggest you record the following information and retain for your records along with your bill of sale or equipment document.

Model no. _____ **Serial no.** _____
Purchase date _____ **Dealer** _____
Dealer address _____

© 1997 TOSHIBA AMERICA CONSUMER PRODUCTS, INC.