

Panasonic®

Operating Instructions IC Recorder

Model No. RR-US361 **RR-US360**

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully Before connecting, operating or adjusting this product, please read these

instructions completely. Please keep this manual for future reference.

P PC En

Panasonic Consumer Electronics Company, **Division of Matsushita Electric Corporation of America**

One Panasonic Way Secaucus, New Jersey 07094 http://www.panasonic.com

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")

Ave. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 0098 Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3 www.panasonic.ca


2003 Matsushita Electric Industrial Co., Ltd. Printed in Japan

RQT7478-P F0104TJ0

oefore operatior There is no power button. Erase Play/enter [▶], stop [■],-The unit returns to standby if there is no operation after 10 seconds have elapsed.

Before use

For MEETING Change the micro ecorded content phone sensitivity re stored in folde Recording mode and recording time When recording close to the Recording/stop source: LO For DICTATION Long recording Meeting/Dictation 8 hours 10 minutes Volume (+, -) When recording the source FQ HQ sound A maximum of 99 files car Standard play (Fine quality) (High quality from a distance: HI /Standard \ / Fine \ Press [■] to stop the operation midway/cancel the setting.

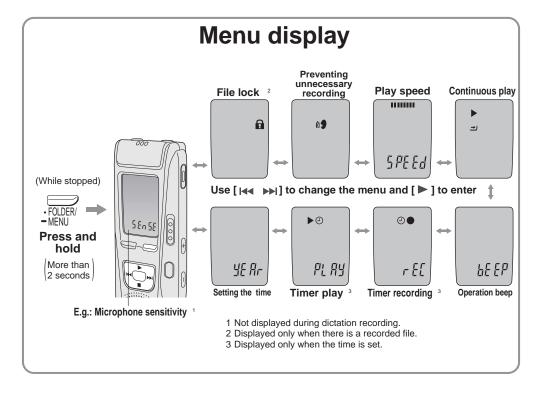

Other recording methods

Recording automatically pauses when there is no sound

■ To turn the function off ⇒select "OFF" in step 3.

Press again to return to the

elapsed recording time display

Turn the function off when recording important files.

3 Select "On"

Plug type: 3.5 mm (1/8 in.) monaural

(The built-in microphone

 $\mathbb{P}^{\mathsf{Press}} \Rightarrow [\mathsf{H} \bullet \mathsf{P}] \rightarrow [\mathsf{P}] \Rightarrow [\mathsf{H} \bullet \mathsf{P}] \rightarrow [\mathsf{P}]$

RR-US360

(ENTER)

■ Recording through an external

1 a /41

Enter the menu mode 2 Select " (4)

Preventin

During recording

• FOLDER

■Checking the remaining recording

Available recording time also appears when the remaining time becomes very short.

This product may receive radio interference caused by mobile telephones or other products during operation. If such interference is apparent, please increase separation between the product and the mobile telephone or other product.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

This statement is applied to only Canada

(K1HA09BD0001

Supplied accessories

To order accessories, refer to


"Accessory Purchases" on page 8


RR-US361


USB cable

This Class B digital apparatus complies with Canadian ICES-003.

Preparation Inserting batteries

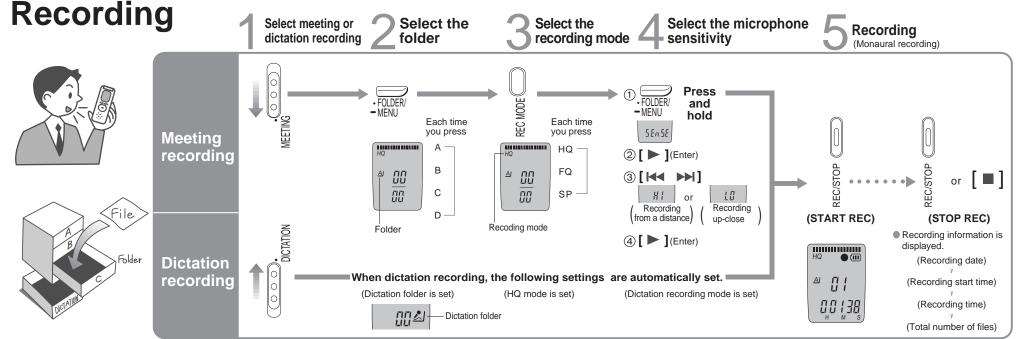

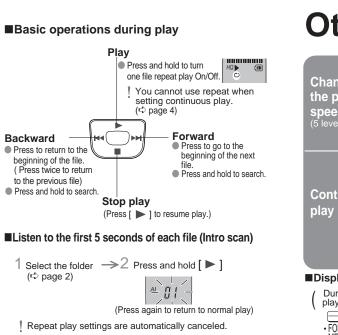

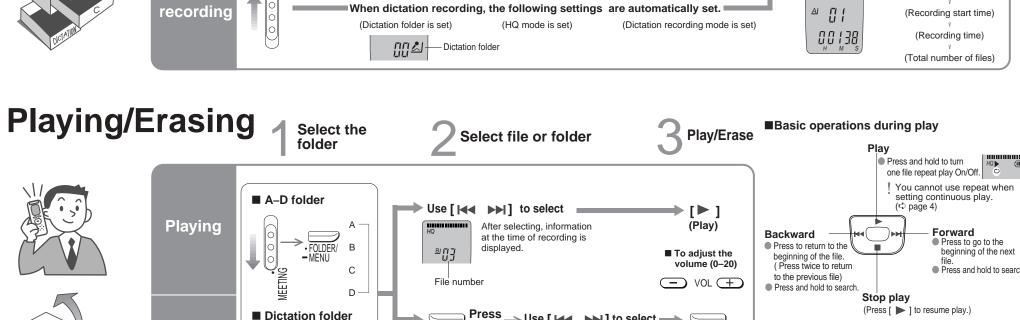

and

ERASE

25

you erase.

You cannot restore files

→ Use [| ◆ ▶ |] to select |

ALL

AB 🖒

■All files

■All folders

ERASE

(Erase)

(**□** page 2)

3

■ Dictation folder


2

The dictation

folder is selected


Erasing



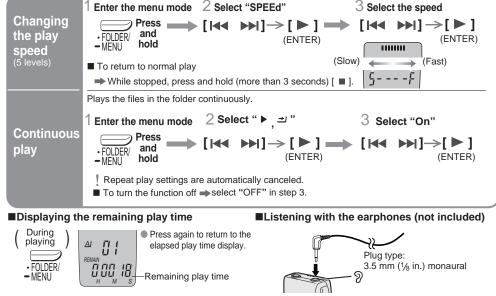

Monaural microphone (L0FBBA000002) CD-ROM (Voice Studio CD-ROM (Dragon NaturallySpeaking^R7 Preferred RR-US360 (K1HA09BD0001 USB cable AAA, LR03, AM-4 battery CD-ROM (Voice Studio) ·Use numbers indicated when asking fo If rechargeable batteries are to be used replacement parts rechargeable batteries manufactured by For the U.S.A. Panasonic are recommended

 The battery indicator (displayed during operation)





Replace the batteries within 30 seconds to preserve the time settings.
Recordings remain intact. Replace the batteries


long as regular batteries.)

 Rechargeable batteries may not last as




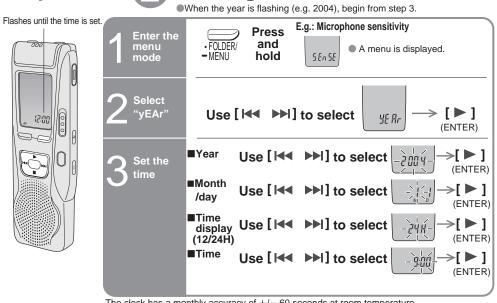



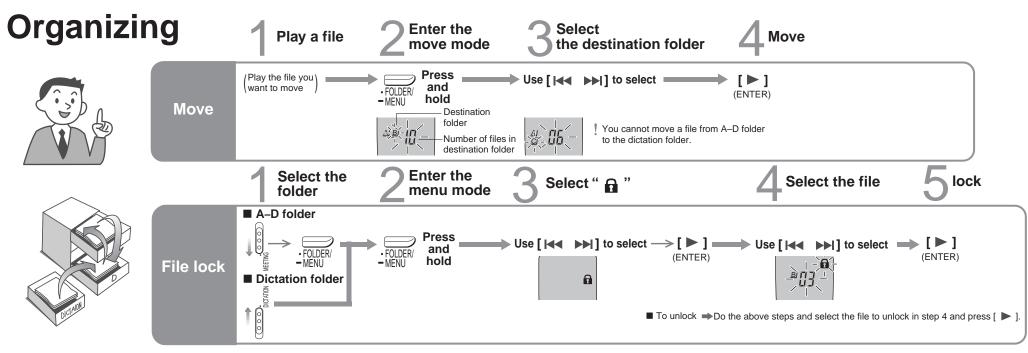

Saving (dubbing)

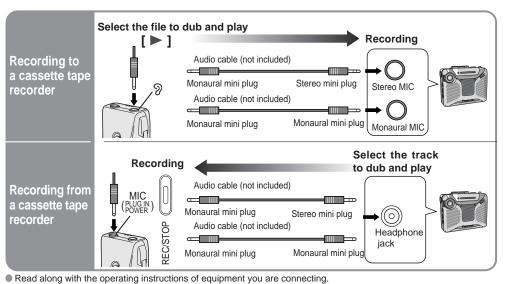


The recorded sound quality may differ from the original recording.

 Adjust the recording volume on the source to the desired level.






Using the timer

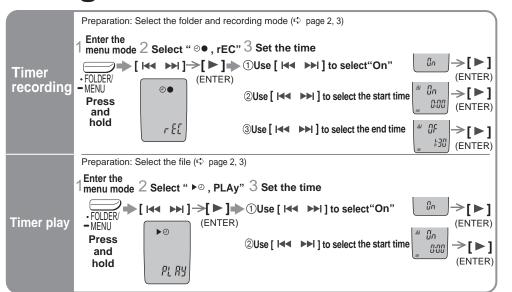

- To cancel the timer ⇒select "OFF" in step 3-①.
- To confirm the set time ⇒ From the menu (♣ page 4), select " ♠ , rEC" or " ▶ ♠ , PLAy" and press [▶].
- ! Even when "♥" or "▶ 🗷 " are displayed during timer play, the repeat play or continuous play cannot be used.

Part names

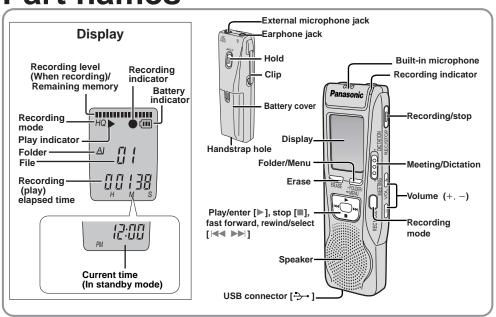

Installing Voice Studio

(Save and edit sound files you have recorded with the unit.)

■ Installing Voice Studio

Start Windows.

Insert the included CD-ROM into your computer's CD-ROM drive. The program installer starts automatically

 When the installer does not automatically start
 From the "Start" menu click on "Run". Type ":\Launcher\VSV2Launcher.exe" and click on "OK".

is the CD-ROM drive ID.

Follow the on-screen instructions.

4 Click "Finish" from the Installshield Wizard Complete screen.
Selecting "Yes, I want to restart my computer now" automatically

■ Starting Voice Studio

Double click on the "Voice Studio" icon

on the desktop. After double clicking, follow the on-screen instructions.

■ Using the operating instructions (PDF file) From the Windows "Start" menu, click on "All programs" Studio" "Voice Studio Operating Instructions" or from the "Help (H)" menu in the Voice Studio main screen, click on "Operating

• If DirectX 8.1 or later is not installed on your computer, follow the instructions that appear on-scree • If Dragon NaturallySpeaking ver.6 or later is not installed on

your computer, Dragon NaturallySpeaking Components is automatically installed at the same time. This program is necessary when a link is made to Dragon NaturallySpeaking not included). Do not uninstall.

Adobe Acrobat Reader is necessary to view the operating instructions (PDF file). If Adobe Acrobat Reader is not installed on your computer, it is automatically installed at the same

Uninstall the following before installing Voice Studio.You cannot install two versions of Voice software on the same

Voice Editor 3 - Voice Editor 2 - SD Voice Editor Ver.1.x you should back them up to be sure.

System requirements

You will need an IBM PC/AT computer with ollowing software and hardware in order to use this application.

Operating system:
Microsoft® Windows® 98 Second Edition,
Microsoft® Windows® Millennium Edition,
Microsoft® Windows® 2000 (Professional, SP2, SP3, and SP4),
Microsoft® Windows® 2000 (Professional, and SP1).

• This software cannot be used on Microsoft® Windows® 3.1/95/98, Windows NT® or Macintosh® operating systems. Correct operation cannot be guaranteed when used on Windows* 98SE, Windows* Me, Windows* 2000, or Windows* XP upgraded from Windows* 3.1/95/98 or Windows NT*.

• Under Windows* 2000 and Windows* XP, this software can only be used by the administrator.

System requirements:
• CPU: Intel® Pentium® II 333 MHz or better, or equivalent processor (Intel® Pentium® III 500 MHz or better recommended)

No. 1 Heart Pentium III 700 MHz or better recommended to use the Waveform feature.)
RAM: Windows⁶ 98 SE, Windows⁶ Me: 64 MB or better (128 MB or better recommended) Windows⁶ 2000, Windows⁶ XP: 128 MB or better (256 MB or better recommended) (Windows⁶ 98SE, Windows⁶ Me: 256 MB or better, Windows⁶ 2000, Windows⁶ XP: 512 MB or better recommended to use the Waveform feature.)

70 MB or better

An extra 25 MB will be required to install Acrobat® Reader® (included).
An extra 50 MB will be required to install DirectX® 9.0b (included).
When using the Waveform feature, an extra 220 MB per hour of sound file may be required temporarily.
• Required software: DirectX® 8.1 or later, Internet Explorer 5.5 or later


 Sound board: Windows compatible sound device Display: Set to high color (16 bit color) or better, with a resolution of 800×600 dots or better (1024 × 768 or better recommended).

Drive: CD-ROM drive (for installation)

Prisplay, Set to flight color (10 in color) or better, with a resolution of source of or better (10.4.2.7 too of reliter (10.4.2.7 too of reliter (10.4.2.7 too of reliter (10.4.2.7 too of reliter). Operation is not guaranteed even if your computer environment satisfies the requirements shown. Operation is not guaranteed on a computer you have built yourself.

Refer to the system requirements for the voice recognition software if you intend to use it.

Various functions

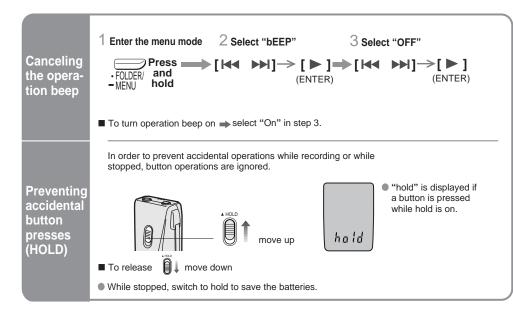

Using the unit with a computer

Install Voice Studio. 2 Connect this unit to a computer (and Dragon NaturallySpeaking®7
Preferred for RR-US361) with the USB cable. This unit can not be operated For details, read the installation instructions for Voice Studio and (\leftarrow) Dragon NaturallySpeaking^R (□ below and page 5) - USB cable (included Connect one IC Recorder only while using Voice Studio. This software does not support simultaneous use of multiple IC recorders.

•Use only the included shielded interface cable with a ferrite core when connecting to computer

To reduce risk of radio interference caused by headphone-, earphone- or microphone cable, only use adequate accessories with cable length less than 3 m.

Do not disconnect the USB cable while this is flashing.

Installing Dragon NaturallySpeaking®

■ Installing Dragon NaturallySpeaking®

Start Windows Insert the included CD-ROM into your

computer's CD-ROM drive. The program installer starts automatically. If it doesn't, double click

Setup.exe on your CD-ROM.) Follow the on-screen instructions.

├ Choose your setup type. Most users should choose "Typical Installation" and click Next. (At the end of the installation, you can enable the QuickStart

option. QuickStart launches Dragon NaturallySpeaking at system startup and adds an icon to the Windows® task bar.) Click "Finish" to complete the installation.

■ Starting Dragon NaturallySpeaking® Start Dragon NaturallySpeaking by either:

• Double click Dragon NaturallySpeaking icon on the desktop.

Studio main screen.
• Select "All Programs" from the "Start" menu and select "Dragon NaturallySpeaking 7.x".

■ Using the on-line help

When connected to a computer "PC" appears, and when transferring data "PC"flashes.

The on-line help After starting Dragon NaturallySpeaking, select "Help topics"

To conduct a search using the table of contents Double click on and the titles within that subject are dis-

 Click on and to see an explanation of the item. Making a search by keyword

The table of contents is replaced by a list of keywords when you click on the "Index" tab. You can find a keyword either by entering it or scrolling through

■ Using the operating instructions (PDF file) The Dragon NaturallySpeaking Quick Start and USER'S GUIDE are on the Dragon NaturallySpeaking CD-ROM.

 Adobe Acrobat Reader is necessary to view the operating instructions (PDF file). Adobe Acrobat Reader is installed automatically when

installing Voice Studio. For your reference

et the display font in Windows to "Normal". The main window does not appear as shown above if the Windows screen dis play font has been set to "Extra Large Fonts". Refer to the ndows Operating System users guide for details.

Note• If you have Version 5 or 6 in the default installation directories on your system, Version 7 will install by default into the previous your system, Version / Will install by default into the previous version's directory.Please do not change or customize the installation directory during the install.

• When installing a different language version of Dragon NaturallySpeaking, make sure to uninstall the older version before installing the new version.

System requirements
You will need an IBM PC/AT computer with the following attributes or equivalent, and the following software and hardware in order to use this application.

Operating system:

Operating system:
Microsoft® Windows® 98 Second Edition
Microsoft® Windows® Millennium Edition,
Microsoft® Windows® 2000 and Service Pack2/SP3/SP4,
Microsoft® Windows® XP Home Edition, Professional and SP1.

• This software cannot be used on Microsoft® Windows® 3.1/95/98, Windows NT® or Macintosh® operating systems.

System requirements:

CPU: Intel® Pentium® III 500 MHz or higher, or equivalent processor.

(Users cannot install the software on PCs slower than 500 MHz CPU clock speed.)

RAM: 128 MB or more.

(Users cannot install the software on PCs with RAM less than 128 MB.)

Display: 800 x 600 or higher resolution required

 Hard disk space:
 350 MB or more required for typical Preferred install for single language. 40 to 50 MB is required for creating an additional user file.

equired software: Internet Explorer 5 or later. (Required for support of HTML help and registration.)

Drive: CD-ROM drive (Required for installation. 8x speed or higher.)
 Sound board: Creative[®] Labs SoundBlaster[®] 16 or upper, or equivalent sound card. WAV files to be recorded in 16-bit mono, 11 kHz minimum

sampling rate.

• Audio unit: Panasonic IC Recorder. Office support : Office 98/2000/XP fully supported. Office 2003, only the transcription supported for Word 2003. (Patches for

Natural Language Process Command support is available for the update. http://support.scansoft.com/downloads.)
The administrator privilege is required for installation under Windows 2000/Windows XP. (No need for a user to have administrator rights in order to use the software.)

he administrator privilege is required for creating an IC Recorder user. • For details on the system requirements, refer to installation guide stated above rather than USER'S GUIDE of Dragon NaturallySpeaking

ScanSoft, Inc. Worldwide Headquarters 9 Centennial Drive Peabody, MA 01960 United States Tel: 978-977-2000 WEB http://www.scansoft.com/

ScanSoft Belgium BVBA International Headquarters
Guldensporenpark 32 Building D 9820 Merelbeke Belgium Tel: +32 9 239 8000 Fax: +32 9 239 8001 6

Troubleshooting Guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, see "Product information"

Symptom	Checkpoints
No operation.	The hold function is on. (⋄ page 6) Make sure the battery cover is closed. Make sure the batteries are correctly inserted. Make sure the batteries cover is attached to the rubber strap You cannot operate when the unit is connected to a computer.
"U01" appears on the display.	●The battery has run down.
"2004" flashes.	●Set the time. (➪ page 1)
There is no sound from the earphone or it is difficult to hear or noisy.	Ensure the plug is inserted firmly.Wipe the plug clean.
Recording stops.	VAS (♥ page 4) may have functioned.
"" appears instead of the recording date.	● Set the time. (❖ page 1)
Playback speed is too fast or slow.	●Set play speed to normal. (➪ page 4)
"FULL" appears.	 There are 99 files in the folder. There is no remaining recording time. Erase unneeded files. (☼ page 2, 3)
No sound from the speaker.	•There is no sound when you have connected an earphone.
Cannot erase a file or folder.	The file is locked. (⋄ page 2, 3) The folder is already empty.
Cannot move a file.	 You cannot move files to folders that already contain 99 files. You cannot move files from A−D folder to the Dictation folder. (⋄ page 3)
A recording disappeared.	 Recordings can disappear if the unit receives a shock (e.g. it is dropped), or if the batteries and cover come loose during recording.
Available recording time does not increase correspondingly after erasing files.	This can occur after repeatedly recording and erasing files. Unlock all your files, then erase all folders to remedy this.
Cannot set timer recording/playback.	You can set the timers within 24 hours of the current time. Set the time. (← page 1)
Timer recording/playback does not work.	 The settings are canceled if the batteries are removed and the clock settings clear.
Cannot set timer recording/playback at the same time.	•When you set both, only the one you set last works.
Timer recording does not work.	 You cannot set the timer if there is less than one minute of available recording time.
Cannot use a battery that can be used on other equipment.	 This unit determines the battery empty even if there is actually life left in it. This is to preserve the clock and other memory items.
Cannot select a folder.	 Press [•FOLDER/ ■ MENU] briefly. You will enter the menu mode if you hold the button down for 2 or more seconds.
Sound is distorted.	•When sound other than voice is recorded, this may occur during playback.
Voice Studio does not start or does not work correctly.	Make sure that "PC" is on this unit's display, and that this unit is recognized as a drive in Voice Studio. If it is not, disconnect the USB cable from this unit, then reconnect it. The connection may not work if you connect via a USB hub or USB extension cable.

Maintenance

To clean this unit, wipe with a soft, dry cloth. •Never use alcohol, paint thinner or benzine to clean this unit.

•Before using chemically treated cloth, read the instructions that came with the cloth carefully

Product Service

- 1. Damage requiring service—The unit should be serviced by qualified service personnel if:
 - (a) Objects or liquids have gotten into the unit; or
- (b) The unit has been exposed to rain; or(c) The unit does not operate normally or exhibits a marked change in performance; or
- (d) The unit has been dropped or the cabinet damaged.

 2. Servicing—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.

 3. Replacement parts—When parts need replacing ensure the servicer uses parts specified by the manufacturer or
- parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric 4. Safety check-After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper

Product information

For product information or assistance with product operation:

In the U.S.A., refer to "Customer Services Directory" on page 8. For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

Panasonic Services Company - Customer Servicente Suite B 4900 George McVay Drive McAllen, TX 78503

In Puerto Rico contact the Panasonic Sales Company

Tel. (787) 750-4300 Fax. (787) 768-2910 When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Also, the purchaser will be responsible for shipping the unit to the above address.

In Canada, contact the Panasonic Canada Inc. Customer Care Centre at 905-624-5505, or visit the website (www.panasonic.ca), or an authorized Servicentre closest to you.

> The serial number of this product can be found on the back of the cassette compartment cover or inside the battery compartment. Please note it in the space provided below and keep as a permanent record of your purchase to aid identification in the event of theft. MODEL NUMBER SERIAL NUMBER

User memo:

DATE OF PURCHASE DEALER NAME DEALER ADDRESS

TELEPHONE NUMBER

• Microsoft and its logo as well as Windows, Windows NT and DirectX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries

Intel and Pentium are registered trademarks or trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

States and other countries.
IBM and PC/AT are registered trademarks of International Business Machines Corporation of the U.S.
Macintosh is a registered trademark of Apple Computer, Inc. of the U.S. and other countries.
ScanSoft, the ScanSoft logo, the Dragon logo, and Dragon NaturallySpeaking are trademarks or registered trademarks of ScanSoft, Inc. or its affiliates in the United States and/or other countries. Adobe and its logo, Acrobat, and Acrobat Reader are trademarks of Adobe Systems Incorporated.
 Other names of systems and products mentioned in these instructions are usually the registered trademarks or

trademarks of the manufacturers who developed the system or product concerned • The "TM" and "R" marks are not used to identify registered trademarks and trademarks in these instructions.

 $\overline{7}$

Specifications

Power output:

Output jack;

Input jack;

Power requirement:

Dimensions (W×H×D):

Max dimensions;

with batteries;

without batteries:

Care and Use

Cabinet dimensions;

Jack:

Speaker:

300 mW (max.) Battery life:

 $(1\%_{32} \times 3^{29}/_{32} \times \%_{8} \text{ in.})$

About 62 g (2.2 oz.) About 39 q (1.4 oz.)

Frequency response: 240 Hz - 5,100 Hz (HQ mode) [When used at 25 °C (77 °F) on a flat, stable surface] 230 Hz - 3,400 Hz (FQ/SP mode

mode Play back About 9 hours About 14 hours HQ 30 minutes 30 minutes FQ/SP About 11 hours About 19 hours batteries 28 mm (13/32 in.) 8 Ω DC 3 V

2 AAA size (LR03, AM-4) batteries •The battery life may be less depending on the

$35.0 \times 100.2 \times 24.0 \text{ mm}$ **Note:**

(1 $^3\!/_8 \times$ 3 $^{15}\!/_{16} \times$ $^{15}\!/_{16}$ in.) $\,$ •Specifications are subject to change without notice. 32.8 × 99.3 × 22.5 mm • Mass and dimensions are approximate.

Operational temperature range: 0 °C - 40 °C (32 °F - 104 °F)

Mass:

 Avoid using or placing this unit near sources of heat. Do not leave it in an automobile exposed to direct sunlight fo a long period of time with the doors and windows closed. •To avoid product damage, do not expose this product to

●Do not keep this unit and magnetized cards (bank

cards, commuter passes, etc.) close together.

■ Batteries

•Do not peel off the covering on batteries and do not use if the covering has been peeled off.

Do not mix different types of batteries or old and new

•Do not throw into fire, short-circuit, disassemble, or sub-

Do not attempt to recharge dry cell batteries.

Mishandling of batteries can cause electrolyte leakage

Allergies Discontinue use if you experience discomfort with the

earphones or any other parts that directly contact your skin. Continued use may cause rashes or other allergic reactions.

Earphone, 3.5 mm ($\frac{1}{8}$ in.); 0.5 mW 16 Ω Mic, 3.5 mm (1/8 in.); 0.56 mV plug in powe

30 minutes 30 minutes

EIA

■ Unit

rain, water or other liquids.

•The speaker does not have magnetic shielding. Do not

place it near televisions, personal computers or other devices easily influenced by magnetism

Align the poles ⊕ and ⊖ correctly when inserting the

•Remove the batteries if you do not intend to use the unit for a long time.

ject to excessive heat.

which can damage items the fluid contacts and may cause a fire. If electrolyte leaks from the batteries, consult your dealer. Wash thoroughly with water if electrolyte comes in contact with any part of your body.

To establish a safe level: Start your volume control at a low setting.

Once you have established a comfortable sound level: Leave it there.

Panasonic Consumer Electronics Company Division of Matsushita Electric Corporation of

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

All Portable Audio Products except item listed below One (1) Year Rechargeable batteries (in exchange for defective item) Ten (10) Days Not applicable During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts

Wickleh, 17 7505
For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.
When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, fault installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, ingrating account of cation, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product or service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God. installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modifi THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE" EQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS

PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but are ALL EXPRESS AND IMPLIED WARRANTIES. INCLUDING THE WARRANTY OF MERCHANTABILITY. ARE LIMITED TO THE PERI-

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at: http://www.panasonic.com/support

http://www.panasonic.com/contactinfo ntact us directly at 1-800-211-PANA (7262)

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at: thtp://www.pasc.panasonic.com
or, send your request by E-mail to: npcparts@panasonic.com
You may also contact us directly at:
1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday –
Friday 9 am to 8 pm, EST.)

Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032


(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales

 RQT7478







ed play. If you experience a ringing in your ears, reduce volume or discontinue use. Do not use while operating a motorized vehicle. It may

You should use extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around

create a traffic hazard and is illegal in many areas.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

 Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

ONLY FOR U.S.A.

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc., Ave. 65 de Infantería, Km. 9.5 One Panasonic Way Secaucus, New Jersey 07094 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic Portable Audio Products Limited Warranty

Product or Part Name

You must mail-in your product during the warranty period. This Limited Warranty excludes both parts and labor for batteries, antennas, an cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warrant is extended only to the original purchaser of a new product which was not sold "as is".

Mail-In Service

For assistance in the continental U.S.A. in obtaining repairs please ship the product to

Panasonic Services Company
Customer Servicenter

4900 George McVay Drive

Limited Warranty Limits And Exclusions
This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products

PARTS AND SERVICE. WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users, TTY: 1-866-605-1277 Service in Puerto Rico

Company/Factory Servicenter: Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985 Phone (787)750-4300, Fax (787)768-2910

8