




Access the
Menu
Functions

- ① Press the **Menu** soft key.
- ② Scroll with the UP and DOWN arrow keys through the list of the menus until you reach the required menu.
- ③ Press the **Select** soft key.
- ④ Scroll with the UP and DOWN arrow keys through the list of the options until the required one is selected.
- ⑤ Press the **Select** soft key.


- Each of the two soft keys ( and ) perform the function indicated by the text above it (bottom line in the display).

Dual Band SGH-C225 GPRS Telephone Quick Reference Card


Make a Call


- ① Key in the number.
- ② Press the  key.



End a Call

Briefly press the  key.

View Missed
Calls
Immediately
After Missing
Them

- ① Press the **View** soft key.
- ② Scroll with the UP and DOWN arrow keys through the missed calls.
- ③ To return the call, press the  key.

Answer a Call	Press the  key.
Adjust the Volume	Press the UP or DOWN arrow key on the left side of the phone.
Choose the Alert Type	<ol style="list-style-type: none"> ① Select the Alert Type menu option (4.3). ② Select an option: <ul style="list-style-type: none"> • Melody • Vibration • Vibra+Melody ③ Press the Select soft key.

Store Numbers in the Phonebook	<ol style="list-style-type: none"> ① Key in the number. ② Press the Save soft key. ③ Select an icon for label. ④ Press the Select soft key. ⑤ Enter the name. ⑥ Press the OK soft key. ⑦ If necessary, change the location. ⑧ Press the OK soft key. ⑨ Press the  key to return to idle mode.
Search for a Number in the Phonebook	<ol style="list-style-type: none"> ① Press the Ph.Book soft key. ② Select the Search option. ③ Enter the start of the name. ④ To scroll through the names, press the UP and DOWN arrow keys. ⑤ Press the View soft key. ⑥ To scroll through the numbers, press the UP and DOWN arrow keys. ⑦ Press the  key to dial.