


**INSTRUCTIONS FOR THE USE AND CARE
OF ZANUSSI CH 63 AND CH 93
COOKER HOODS**

The graphic features a central white square containing the text 'ZANUSSI USE & CARE MANUAL'. This square is set against a black background. On the left and right sides of the square, there are four horizontal white bars of varying lengths, creating a stylized, symmetrical design.

**ZANUSSI
USE & CARE
MANUAL**

IT IS MOST IMPORTANT THAT THIS INSTRUCTION BOOK SHOULD BE RETAINED WITH THE APPLIANCE FOR FUTURE REFERENCE. SHOULD THE APPLIANCE BE SOLD OR TRANSFERRED TO ANOTHER OWNER, OR SHOULD YOU MOVE HOUSE AND LEAVE THE APPLIANCE, ALWAYS ENSURE THAT THE BOOK IS SUPPLIED WITH THE APPLIANCE IN ORDER THAT THE NEW OWNER CAN BE ACQUAINTED WITH THE FUNCTIONING OF THE APPLIANCE AND THE RELEVANT WARNINGS.

WARNINGS

THESE WARNINGS ARE PROVIDED IN THE INTEREST OF SAFETY. YOU MUST READ THEM CAREFULLY BEFORE INSTALLING OR USING THE APPLIANCE.

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.
- Any installation work must be undertaken by a qualified electrician or a competent person.
- It is dangerous to alter the specifications or modify the product in any way.
- This product should be serviced by an authorised Zanussi Network Service Centre, and only genuine Zanussi spare parts should be used.
- If the steam is to be extracted through a ventilation system, you must ensure that the ducting for the appliance is not connected to any existing ventilation system which is being used for any other purpose.
- Read the installation instructions carefully.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by an inexperienced person may cause injury and/or serious malfunctioning. Refer to your local Zanussi Network Service Centre. Always insist on genuine Zanussi spare parts.

CONTENTS

General Information	3
Electrical Connections	4
Installation	5
How To Use	6
Maintenance and Cleaning	7
Servicing	8

GENERAL INFORMATION

This cooker hood can be used to extract odours to the outside or recirculate the air within the kitchen after passing through a cleansing charcoal filter, which is supplied as standard.

The cooker hood is convertible to either function by the movement of a conversion slider, enabling you to switch between extraction and recirculation whenever you want.

The hood is designed for use beneath a wall cabinet or directly onto a wall using the brackets supplied.

IMPORTANT

When installed the hood must be positioned at least 65cm (25 1/2") above an electric cooking appliance and 70cm (27") above a gas cooking appliance.

These measurements apply when fitting above an eye level grill.

WARNING:

The fan motor on this appliance incorporates a thermal cut-out device which will operate if the hood is installed below the minimum heights recommended.

WARNING:

If the room where the cooker hood is to be used contains a fuel burning appliance such as a central heating boiler, then its flue must be of the room sealed or balance flue type.

If other types of flue or appliance are fitted, ensure that there is an adequate supply of air to the room.

ELECTRICAL CONNECTIONS

WARNING:

**THIS APPLIANCE MUST BE
EARTHED.**

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

GREEN AND YELLOW - EARTH
BLUE - NEUTRAL
BROWN - LIVE

As the colours of the wires in the mains lead of the cooker hood may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter <E> or by the earth symbol \perp or coloured green or green/yellow.

The wire coloured blue must be connected to the terminal in the plug which is marked with the letter <N> or coloured black.

The wire which is coloured brown must be connected to the terminal in the plug which is marked with the letter <L> or coloured red.

If a 13amp (BS1363) plug is used fit a 3amp fuse. If any other type of plug is used fit a 5amp fuse in the plug or adaptor or at the distribution board.

INSTALLATION

WALL FITTING

The hood may be fixed to any rigid vertical surface. If it is necessary to fix the unit to a hollow construction plaster or partition board structure then it must be sufficiently reinforced to be quite rigid in the area of the hood mountings.

The hood must not be mounted using the keyhole fixing points, but with the special brackets provided.

Use the paper template provided to mark the hole positions on the wall for the bracket fixing screws. Check the distances are correct with a measure as stated on the template. When drilling the holes for the wall fixing screws, care must be taken to ensure that they are quite level as there is only minimal vertical adjustment of the fixing brackets.

The brackets should be fixed with the round end at the bottom. Once the brackets are secured the hood can be hooked on.

Access to the two levelling screws and the locking nut studs will require the removal of the lower grille panel. To open the grille, press inwardly on the two slider catch fasteners located towards either side of the grille near the front edge, then it may be pivoted down.

To remove the grille, unhook the right hand hinge pin from the casing guide; the grille panel can then be removed. The two adjustment screws will be visible towards each end of the back panel. Turn the screws until the hood is positioned at right angles to the wall, then fit the locking washers and nuts onto the studs that project through the back panel from the support brackets to fully secure the hood.

WALL CABINET FITTING


Before fitting the hood beneath any type of wall cabinet ensure it is firmly fixed to the wall in accordance with the manufacturer's instructions.

Use the paper template provided to mark the hole positions on the underside of the cabinet. Pilot drill the fixing holes and fit the fixing screws from the inside of the cabinet carcass.

HOW TO USE


INTERNAL RECIRCULATION VERSION (Filtering) OPERATION

The hood is delivered and adjusted for operation in the Recirculation mode. In this mode, the conversion slider is put in the **RECIRCULATION** position and a charcoal filter is fitted onto the motor support grille. The air is passed through the charcoal filter to be purified and recirculated into the room through the grille on top of the casing near the front of the hood.

Controls are located on the right hand side of the front to select the working speed and operate the worktop illumination. The slide switch marked with the symbol  controls the three working speeds. Position 1 should be selected when simmering or using only one pan. Position 2 should be selected for normal cooking and Position 3 should be selected when frying or cooking foods with strong odours.

EXTERNAL DUCTING (Extraction)

To convert the hood to extraction, open the lower grille panel, remove the charcoal filter and move the conversion slider to the **DUCTING** position. The hood is provided with top and rear extraction outlets complete with twist locking 100mm (4") ducting collar and 100mm blanking plate. Fit the flange collar into the selected aperture and make an airtight connection. The other outlet must be closed with the blanking plate.

The slide switch marked with the symbol  controls the worktop illumination. To obtain the best performance turn your hood on before you start cooking to establish an airflow in the kitchen and leave it running for approximately 15 minutes after finishing.

Ensure the blanking plate and collar are located correctly. Align the inter-locking lugs on the plate and the collar with the recesses in the aperture, insert and turn clockwise, to lock the plate and collar into position.

If possible, duct directly through the wall. For the best performance, use the shortest possible duct run and minimum number of bends.

NOTE: Every 90 degree bend introduced into the run of the ducting will effectively reduce the overall length of run available by 1 metre.

MAINTENANCE AND CLEANING

Regular maintenance and cleaning will ensure good performance and reliability, while extending the working life of the hood. Special attention should be taken to keep the grease filter clean at all times and the charcoal filter (recirculation model) should be replaced regularly.

To remove filters for subsequent cleaning and replacement first open the metal grille panel.

GREASE FILTER:

This retains the solid grease particles. It should be cleaned once a month with normal usage. It may be washed in hot water and mild detergent or liquid soap, and should be squeezed dry and not wrung out.

It is fitted onto the reverse side of the metal grille panel and it is easily removed from the grille by pushing the wire clips to one side and removing.

CHARCOAL FILTER:

In the recycling model the charcoal filter absorbs smells and odours. The charcoal filter cannot be cleaned and should be replaced at least every six months or more frequently if the hood is used consistently. To replace the charcoal filter, support the filter with one hand, remove the thumb screw through the centre of the charcoal filter and the filter will come away. Replace by reversing the operation.

WARNING:

It is a possible fire hazard if the filters are not cleaned and replaced as recommended. Replacement charcoal filters can be obtained from your local Zanussi Service Agent, whose details can be found under 'Z' in your telephone directory.

WORKTOP ILLUMINATION:

If a lamp fails to function at any time, open the metal grille panel and check that the lamp is fully screwed into the holder. When changing the lamp, an identical replacement must be fitted to ensure a safe working of the hood. This can be obtained from your local Zanussi Service Agent.

CLEANING:

The metal work should be cleaned regularly, at least once a month, using household cleaners and polish. Never use abrasives.

IMPORTANT

The electrical supply is provided with earthing in compliance with international safety regulations. The electric supply conforms to EEC Directives on radio interference.

Never leave frying pans unattended during use as overheated fats and oils may catch fire.

Never do flame cooking under a hood.

The cookerhood ducting (evacuation version) must never be connected to central heating flues, radiators or water heaters, etc.

Before connection to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the hood.

Before carrying out any kind of maintenance or cleaning, disconnect the hood from the mains supply.

SERVICING

Should your appliance fail to operate check the following points:

- Make sure the appliance is properly plugged in and/or the socket is in the 'on' position.
- Check there is power at the socket/switch.
- Check the main circuit fuses at the consumer unit or main fuse box.

If the appliance is still not working, contact your local Zanussi Network Service Centre, whose details can be found in your telephone directory under 'Z'.

IN-GUARANTEE CUSTOMERS SHOULD ENSURE THAT THE ABOVE CHECKS HAVE BEEN MADE AS THE ENGINEER WILL MAKE A CHARGE IF THE FAULT IS NOT A MECHANICAL OR ELECTRICAL BREAKDOWN.

* Please note that proof of purchase is required for any in-guarantee service calls.

Peace of mind for twelve months

Zanussi standard guarantee conditions

This guarantee is in addition to your statutory and other legal rights which will not be excluded or in any way diminished by the return of this guarantee card.

We, Zanussi Limited, undertake that if, within twelve months of the date of the purchase, this ZANUSSI appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same **FREE OF ANY CHARGE** for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- The appliance is still in the possession of the original purchaser.

All service work under this guarantee must be undertaken by a Zanussi Network Service Centre.

Any appliance or defective part replaced shall become our property.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Cost incurred for calls to put right machines improperly installed or calls to machines outside the UK and the Republic of Ireland.
- Appliances found to be in use within a commercial environment, plus those which are subject of rental agreements.

Zanussi 5 Year Cover Conditions

(See enclosed leaflet)

For a once-only payment you can extend your Standard Guarantee, all the conditions and exclusions of which apply.

1. Products supplied as 'seconds', refurbished, damaged or shop-soiled are not eligible for Zanussi cover.

2. The issue of a cover does NOT by virtue of our having done so, nullify the exclusions.

3. The Engineer will need to check the details of your Cover card and will make a charge for his services if it is not presented to him at the time of his call.

4. The date of purchase, or the date of initial payment (deposit) of the appliance will be deemed the date of commencement of cover.

5. Covers issued are not refundable or transferable.

6. Change of address:

Zanussi Cover Card is valid throughout the UK including the Isle of Man, Channel Islands, Northern Ireland and the Republic of Ireland and does require amending. Advice in writing, quoting the 'Cover' Card number is necessary to enable correction of records.

