


LAVAMAT 50400

Washing machine

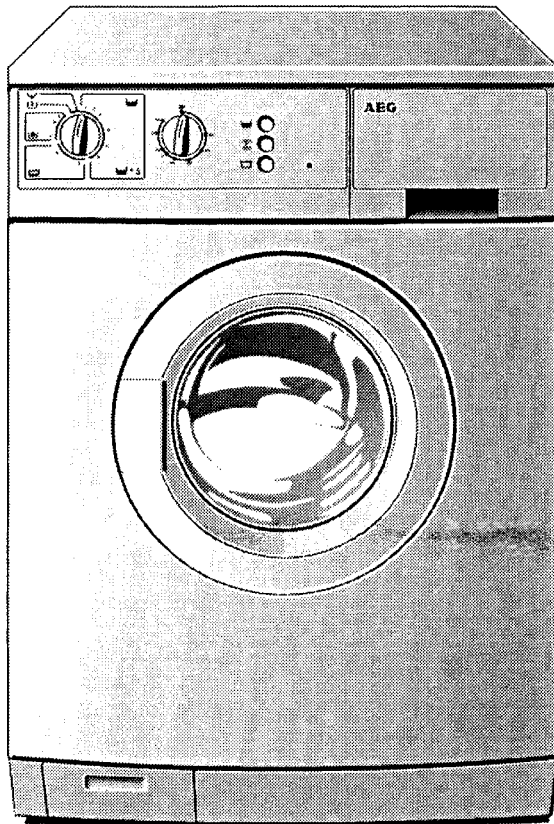

Operating Instructions

Dear customer,

Please read these operating instructions through carefully, before using the appliance.

Please ensure you fully understand the safety instructions on the first pages of these operating instructions! Retain the operating instructions for future reference, and pass them on to any future owners.



The warning triangle and/or the key words (**Warning!**, **Caution!**, **Important!**), emphasize information which is important for your safety or the correct functioning of the appliance. It is essential that this information is observed.



This symbol guides you step by step when operating the appliance.



This symbol gives you additional information and practical tips on using the appliance.





Tips and information about the economical and environmentally friendly use of the machine are marked with the clover symbol.

If you require assistance or advice on your appliance, please contact our customer care department by letter or telephone:

Customer Care Department
AEG Domestic Appliances Limited
P.O. Box 47
Newbury
Berkshire RG 14 5XL
Tel: 01635 572700
Fax: 01635 42970

Printed on environmentally friendly paper.
Whoever thinks ecologically also acts ecologically

Contents

Safety instructions	5
Disposal	7
Environmental tips	7
Important features of your appliance	8
Description of the appliance	9
Front view	9
Control panel	10
Program selector knob	10
Program selector as progress indicator	12
Temperature selector	12
Button  (EASY CARES)	12
Final spin speed button	12
Button  (RINSE HOLD)	12
Pilot light	12
Detergent drawer	13
Consumption values and time requirement for selected programs	14
Before using your machine for the first time	14
Preparing the washing cycle	15
Sorting out and preparing washing	15
Types of washing and care symbols	16
Washing powders and conditioners	17
Which washing powder and conditioner?	17
How much washing powder and fabric softener?	17
Using a water softening agent	17
Run wash cycle	18
Brief instructions	18
Loading the washing	18
Add detergent/conditioner	19
Selecting the washing program	20
Start the washing program, set the final spin speed or select RINSE HOLD	20
During the washing program	21
End of wash cycle/Removing the washing	21

Program tables	22
Washing	22
Separate rinse	23
Separate fabric softening/starching	23
Separate spinning	23
Separate prewash	24
Maintenance and Cleaning	25
In daily use	25
Control panel	25
Detergent compartment	25
Washing machine drum	26
Door	26
Precautionary measures in the event of a risk of frost	26
Troubleshooting	27
Certain problems etc.	27
If the washing results are not satisfactory	30
Carrying out an emergency emptying	31
Cleaning the drain pump	32
Technical data	33
Power supply	33
Information for the electrician	33
Service & Spare Parts	34
Index	35

Safety instructions

Your safety is of paramount importance, please ensure you read these warnings before installing or using the appliance. If you are unsure about any of the meanings of these warnings, contact the Customer Care Department.

General safety

- Repairs to the washing machine should only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local AEG Service Force Center.
- Never operate the washing machine if the mains cable is damaged or the control panel, work top or base area are damaged allowing internal components to be accessible.
- Switch off the appliance and isolate from the mains supply before carrying out any cleaning or maintenance work!
- Do not use the mains cable to pull the plug out of the socket.
- Do not spray the washing machine with water.
- During high temperature wash programs, the glass of the door may become hot. Do not touch!
- Allow the water to cool down before cleaning the drain pump or carrying out emergency emptying.
- Small animals can nibble at mains cables and water hoses causing electric shock hazard.

Installation

- Please follow the separate "Installation and connection instructions" supplied with the appliance.
- Installation must comply with local water authority and building regulations requirements.
- Before using the appliance for the first time, we recommend you run a cotton wash cycle at 95 °C without any laundry and half the recommended amount of detergent. This is to remove any residues from the drum, which may have been left during manufacture.

Child Safety

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.
- Pets and children have been known to climb into washing machines. Please check the drum before use.
- Keep all packaging well away from children.
- Keep all detergents in a safe place out of children's reach.
- When disposing of the appliance, cut off the mains cable, and destroy the plug. Disable the door catch to prevent young children being trapped inside.

Intended Use

- Always unplug the appliance and turn off the water supply after use.
- Only use the washing machine to wash normal domestic washing. If the washing machine is used for any other purpose or is incorrectly used, the manufacturer adopts no liability for any damages which may result.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Only use detergents which are suitable for automatic washing machines, and follow the recommendations of the detergent manufacturer.
- Garments which have been in contact with flammable solvents should not be washed.
- Do not use your washing machine for dry cleaning.
- Dyes and bleaching agents may only be used if specifically permitted by the manufacturer of these products. We cannot be held liable for any damages.



Disposal

Packaging

- Dispose of the packaging material correctly. All packaging materials are environmentally friendly and can be disposed of without any danger to the environment.
- The external plastic covering and bags inside are made of polyethylene (marking >PE<).
- The padding is made of CFC free expanded polystyrene (marking >PS<).

Washing machine

When disposing of the washing machine:

- Cut off the mains cable and destroy the plug
- Disable the door catch to prevent young children becoming trapped inside.
- Use an authorised disposal site.





Environmental tips

To save water and energy and help to protect the environment, we recommend that you follow these tips:


- Do not use a prewash for normally soiled washing.
- It is more economical to wash full loads.
- When washing small loads reduce the detergent by half to two thirds.
- Pre-treat stains, and then wash at a lower temperature.
- Use the energy saving program when washing light to normally soiled garments.

Important features of your appliance


- Setting the program using the program selector and temperature selector.
- **Stain program** for effectively treating stained washing.
- **Button  (EASY CARES)** for careful treatment of easy-care fabrics.
- **Energy saving program** for light to normal soilage.
- **Maximum Spin speed 850 revolutions per minute.**
- Speed for the final spin can be reduced to 500 revolutions per minute.
- **RINSE HOLD (button )** can be selected: the washing remains in the final rinse water, it is not spun.
- **Automatic load recognition** with fuzzy logic: sensor controlled washing process with variable number of rinse cycles, water quantity dependent on foam and load, controlled spin etc, ensuring best washing and rinsing results with the most economical adapted water consumption.
- **3-chamber detergent compartment** for washing powder and fabric softener: stain remover in prewash chamber
- **ÖKO lock:** The Öko lock ensures effective detergent usage. The Öko valve closes off the wash tub from the drainage system during all wash programmes.
- **Scoop ribs** in the washing machine drum: ensure washing is wet fast and equally.
- **Anti-unbalance control system:** for stability and smooth running.
- **Water protection.**
- Connection for **hot and cold water** or only **cold water**

Description of the appliance

Front view

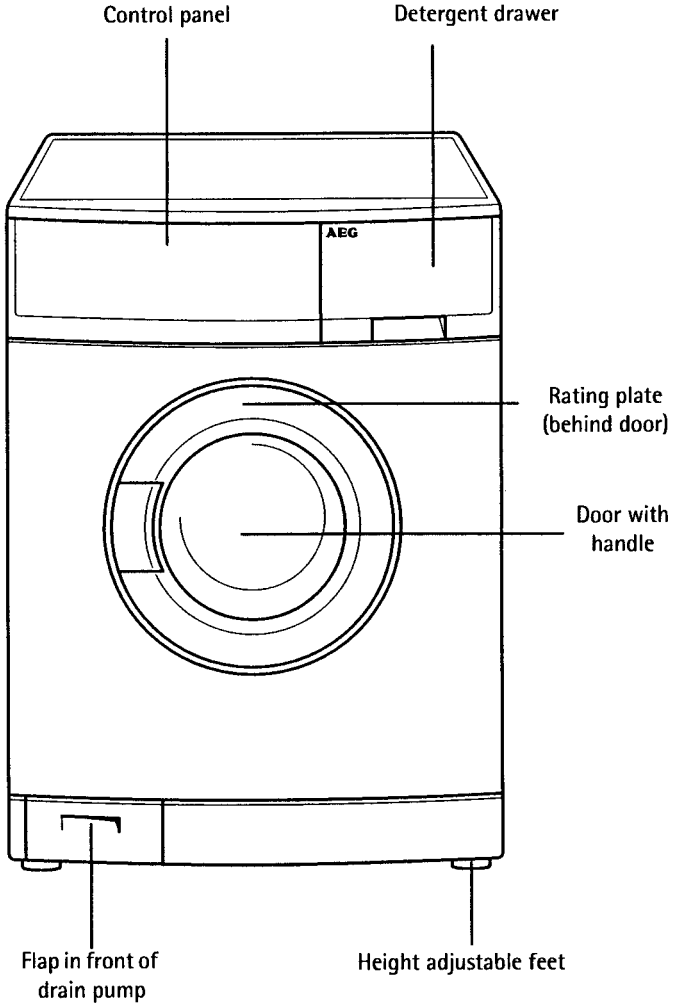


Control panel

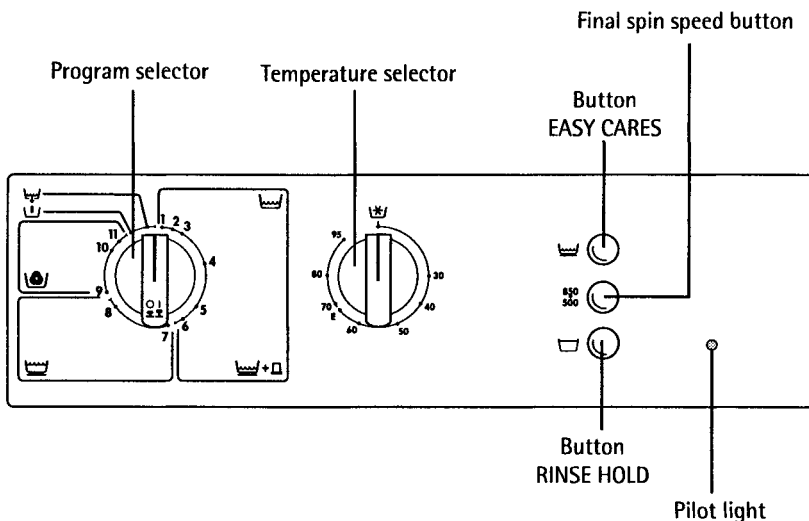

Programme Selector Knob

Turn the programme knob in a clockwise direction until the marker coincides with the required programme. If you turn the selector knob too far, **do not attempt to turn the control knob anticlockwise**, instead continue turning clockwise until the desired programme has been selected.

To start the programme, pull the knob outwards and the pilot light will illuminate. At the end of the programme push the knob inwards and the pilot light will go out.

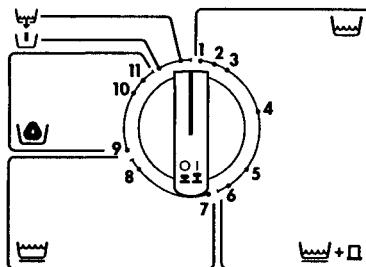

Program group  /  + ** (COTTONS/LINNEN)**** +  (EASY CARES with button)****• Position 1 (STAIN)**

For treating stained washing with stain remover (extended main wash with time optimised stain remover phase).

• Position 2 (MAIN WASH)

Main wash cycle for normally soiled washing (washing, rinsing/conditioning, spinning).


• Position 3 (QUICK WASH)

Shortened main wash cycle for lightly soiled washing.

• Position 4 (RINSE)

Separate rinse, e.g. for rinsing hand-washed fabrics (spin according to the selected washing cycle).

• Position 5 (FABRIC SOFTENING)

Conditioner rinse (or starching). Liquid conditioner or starch is added from the  compartment during the rinse.

• Position 6 (SPIN)

Spinning after a RINSE HOLD, or separate spinning of hand washed textiles.

Program group  (DELICATES)**• Position 7 (DELICATES)**

Main wash cycle for delicates (Washing, rinsing/conditioning, short spin).

• Position 8 (SHORT SPIN)

Spin after a RINSE HOLD or separate gentle spin of hand washed delicates.

Program group  (WOOLLENS)**• Position 9 (WOOLLENS)**

Main wash cycle for woollens and delicate fabrics (Washing - conditioner - short spin).

• Position 10 (GENTLE RINSE)

Separate gentle rinse, e.g. for rinsing hand-washed fabrics (1 Rinse cycle and subsequent short spin).

• Position 11 (SHORT SPIN)

Spin after a RINSE HOLD or separate short spin of hand-washed woollens and delicate fabrics.

PREWASH:

Separate PREWASH (approx. 20 minutes at maximum 40° C) and subsequent pumping out.



After PREWASH, the main wash cycle must be set as desired, the program does not continue automatically.

PUMP OUT


Pumping out the water after a RINSE HOLD (without spinning).

Program selector as progress indicator

The program selector serves as a progress indicator by moving clockwise until the end of the program is reached.


Temperature selector

On the temperature selector you can set the following temperature levels:

 (cold), 30, 40, 50, 60, E, 70, 80, 95



Position E (energy-saving program) is suitable for lightly to normally soiled cottons; temperature reduced to approx. 67°C.

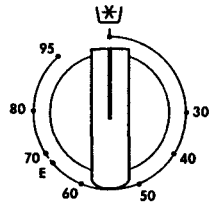

Button (EASY CARES)

For easy care washing. This button is effective when a program from the Cottons/Linen program group is selected on the program selector.



Final spin speed button

With this button you can reduce the maximum speed for the final spin.



Button (RINSE HOLD)

With the RINSE HOLD setting the washing is left in the final rinse water and is not spun.








Pilot light

The pilot light shows as soon as the washing machine is on.

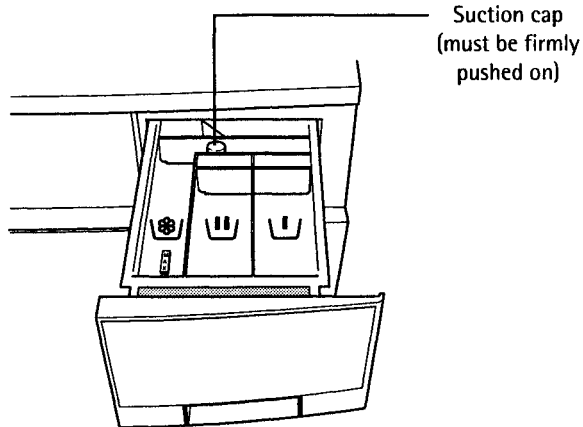


Detergent drawer



-  Compartment for prewash agent or stain remover.
They are added right at the beginning of the washing program for the position  (PREWASH) or added during the main wash at the optimal time for position 1 (STAINS).
-  Compartment for main washing detergent and if required water softening agent.
They are added at the beginning of the main wash cycle.
-  Compartment for liquid conditioners (fabric softener, starch).
They are added during the final rinse.

Consumption values and time requirement for selected programs




The values in the following table were determined under standard conditions. They provide a useful guide for household use

Program selector	Button	Temperature selector	Type of washing	Load in kg	Water in litres	Energy ¹ in kWh	Time ² in minutes
Position 2 (MAIN WASH)		95	Cottons/Linen	5	59	1.80	119
		60	Cottons/Linen	5	59	1.10	119
		40	Cottons/Linen	5	59	0.60	119
	 (EASY CARES)	40	Easy cares	2.5	48	0.40	86
Position 7 (DELICATES)		30	Delicates	2.5	57	0.45	67
Position 9 (WOOLLENS)		30	Woolens	1	52	0.35	67

1) The energy consumption will be lower on a hot and cold fill connection.

2) These times are approximate.

Before using your machine for the first time

-  Slightly pull the detergent compartment out of the control panel.
 -  Pour about 1 litre of water through the detergent compartment into the washing machine.
- When this has been done the ÖKO lock can function correctly.
-  Run a wash cycle without laundry (COTTONS 95, with half the amount of washing powder).

This removes any residues from the drum which may have been left during manufacture.

Preparing the washing cycle

Sorting out and preparing washing

- Sort out washing according to the type and care symbol (see "Types of washing and care symbols").
- Empty the pockets.
- Remove any metal parts (safety pins, badges).
- To prevent washing from getting damaged and forming bundles: close zips, button up duvet covers and pillow cases, tie up loose straps such as on aprons.
- Turn clothes made from double layer fabric inside out (e.g. anoraks, sleeping bags).
- For knitted coloured fabrics as well as woollens and fabrics with appliqué: turn inside out.
- Put small and delicate items (baby socks, tights) in a washing net or a pillow case with a zip.
- Handle curtains with special care. Remove metal strips or plastic hooks.
- Keep coloureds and whites separately in different washing cycles.
- When washing fabrics requiring different wash temperatures always select the lowest temperature.
- New coloured fabric often contains excess dyes. Wash this laundry separately for the first time.
- Mix small and large pieces of washing! This improves the effectiveness of the wash and the washing is distributed better when spinning.
- Shake out washing before putting it into the machine.
- Unfold the washing before putting it into the drum.

Types of washing and care symbols

The care symbols assist in selecting the correct washing program. The washing should be sorted according to the type and care symbol. The temperature specifications in the care symbols are always maximum specifications.

Cottons

Fabrics made of cotton and linen with this care symbol will withstand maximum wash actions and high temperatures. The COTTONS/LINEN program is suitable for this type of washing.

Linens

Fabrics made of cotton and linen with this care symbol will withstand maximum wash actions and are colourfast at 40°C or 60°C. The COTTONS/LINEN program is suitable for this type of washing.

Easy care washing


Fabrics such as finished cottons, cotton mixtures and synthetics with this care symbol require a gentler washing action. The EASY CARES program is suitable for this type of washing.



Delicates

Fabrics such as layered fabrics, microfibres, synthetics or curtains with this care symbol require a very gentle treatment. The DELICATES program is suitable for this type of washing.

Woollens and very delicate types of washing

Fabrics such as wool, wool mixtures or silk with this care symbol require a very gentle wash cycle. The WOOLLENS program is suitable for this type of washing.

Woollens with  (wool mark) may only be washed in the washing machine if they bear the addition "does not felt" or "suitable for machine washing".

Fabrics with the care symbol  (Hand washing) or  (Do not wash!) may not be washed in the washing machine!

Please follow care instructions "wash separately" and "wash separately several times"!

Washing powders and conditioners

Which washing powder and conditioner?

Only use washing powders and fabric softeners suitable for automatic washing machines. As a general rule follow the instructions of the manufacturers.

How much washing powder and fabric softener?

The amount to be used depends on

- the load:
If the detergent manufacturer does not make any specifications for small loads, use a third less for half loads, and for very small loads only use half of the amount of washing powder recommended for a full load.
- the degree of soiling of the washing:
For only lightly soiled washing use less washing powder. Follow the instructions of the detergent manufacturer and load.
- on the degree of hardness of the tap water:
The harder the water, the higher the dosage! You will find the quantities to use according to water hardness on the detergent packaging.

Liquid detergent

Add liquid detergent using the dispenser provided by the detergent manufacturer. Please follow the instructions on the package.











Using a water softening agent

In areas of hard water, the use of a water softening agent can reduce the amount of detergent necessary. See manufacturers recommendations.


Run wash cycle




Brief instructions

A washing cycle proceeds in the following steps:







-  Check whether the water tap is open.
-  Open the door, put in the washing.
-  Shut the door.
-  Add detergent/conditioner.
-  Set the correct washing program and temperature.
-  Press the  (EASY CARES) button if required.
-  Pull out program selector.
The washing program starts automatically after six seconds.
-  Reduce the final spin speed or select RINSE HOLD (button ) if required.
You can alter this setting and the temperature during the entire washing cycle.

After the washing program has been completed:


Important! If the washing cycle ends with a RINSE HOLD, pump out the water before opening the door (position ) or spin (position 6) or short spin (position 8 or 11).

-  Open the door, remove the washing.
-  Push in the program selector. This switches the washing machine off.
-  We recommend you unplug the appliance and turn off the water supply when the wash program has finished.

Loading the washing


-  Sort the washing according to the type.
-  For information on correct preparation of the washing see "Types of washing and care symbols".
-  Open the door: pull the handle of the door.
-  Load the washing.
-  See the "Program tables" for the maximum load.
-  Firmly shut the door.


Caution! When shutting the door be careful not to catch any pieces of laundry! The fabric and machine could be damaged.

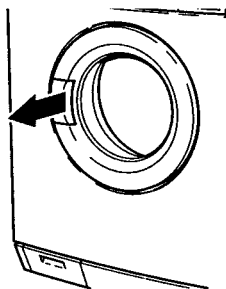

Add detergent/conditioner

- ☞ Pull out the detergent drawer as far as it will go.
- ☞ Add detergent/conditioner.
- 📘 For information about washing powder and fabric softeners see section "Washing powders and conditioners".

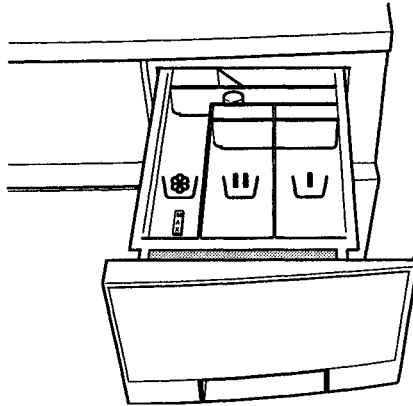

- ☞ Compartment for prewash agent or stain remover. They are added right at the beginning of the washing program for the position  (PREWASH) or added during the main wash at the optimal time for position 1 (STAINS).
- ☞ Compartment for main washing detergent and if required water softening agent. They are added at the beginning of the main wash cycle.
- ☞ Liquid conditioners (fabric softener, starch).
Important: Do not fill above the MAX mark. When using thick concentrated fabric conditioners and starches we recommend you dilute the concentrate with water to ensure trouble-free dispensing.
 If using starch powder dissolve according to manufacturers instructions.

- ☞ Push the detergent drawer completely in.


Selecting the washing program

- i** See "Program tables" for suitable program and the correct temperature for the respective type of washing.

Set the washing program


Important! Program selector may only be turned clockwise!

- ☞** Set the program selector to the desired washing program.

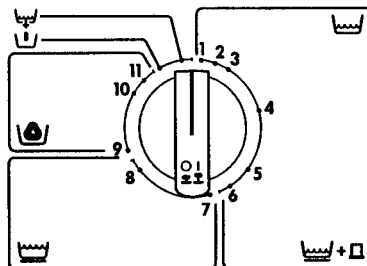

Set the temperature

- ☞** Set the temperature selector to the desired temperature.

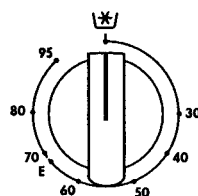

For easy care washing:

- ☞** Press button (EASY CARES)

 
- i** The button (EASY CARES) can only be combined with the programs of program group / + (COTTONS/LINEN, EASY CARES with button) otherwise this button has no effect.

Start the washing program, set the final spin speed or select RINSE HOLD

- ☞** Check whether the water tap is open.
- ☞** To start the washing machine pull out the program selector. The pilot light illuminates, the washing program starts automatically after six seconds.
- ☞** If necessary reduce the final spin speed for the final spin or select RINSE HOLD:



- Press the final spin speed button or
- press the button (RINSE HOLD).

If RINSE HOLD has been selected, the washing remains in the final rinse water and is not spun.







During the washing program

you can at any time

- alter the setting of the final spin speed,
- press the button  (RINSE HOLD),
- alter the temperature setting,
- press the button  (EASY CARES).

Other settings cannot be altered.

To interrupt the washing program prematurely:





-  Push in the program selector.
-  Turn the program selector clockwise to  (PUMP OUT).
-  Pull out program selector.







End of wash cycle/Removing the washing

The washing program normally ends with the final spin.

After RINSE HOLD:

After a RINSE HOLD the water must be pumped out first or the washing spun:













-  Release the  button (RINSE HOLD).
-  Turn the program selector clockwise to
 - Position 6 (SPIN)
or
 - Position 8 for delicates or position 11 for woollens (SHORT SPIN).
Washing is spun in accordance with the program group selected and the final spin speed set,
or
 -  (PUMP OUT).
The water is pumped out.

-  Open the door.
-  Remove the washing.
-  Push in the program selector. The washing machine is now off.
-  After the program has finished, pull the detergent drawer out a little so that it can dry. Leave the door ajar for a while. This helps to prevent stagnant smells and helps to preserve the door seal.
-  Close the water tap.
-  We recommend you unplug the appliance and turn off the water supply when the wash program has finished.

Program tables

Washing


The following tables list the most commonly used and most useful programs.

Type of washing, care symbol	max. load (dry weight) ¹	Program selector	Temperature selector	Additional button
Cottons 	5kg	Position 1 (STAIN)	95	
		Position 2 (MAIN WASH)	95	
		Position 3 (SHORT)	95	
		Energy saving program: Position 1 (STAIN)	E	
Linen  	5kg	Position 1 (STAIN)	30, 40, 50, 60	
		Position 2 (MAIN WASH)		
		Position 3 (SHORT)		
Easy cares  	2.5kg	Position 1 (STAIN)	30, 40, 50, 60	 (EASY CARES)
		Position 2 (MAIN WASH)		
		Position 3 (SHORT)		
Delicates 	2.5kg (or 15-20m ² curtains)	Position 7 (DELICATES)	 /cold), 30, 40	
Woolens ²   	1kg	Position 9 (WOOLLENS)	 /cold), 30, 40	


1) A 10 litre bucket contains about 2.5kg of dry washing (cottons).

2) Woollen clothing with the wool symbol may only be washed in the machine if it bears the addition "does not felt," "non-felting" or "washing machine resistant".


Separate rinse

Type of washing	Max. load (dry weight)	Program selector	Additional button
Cottons/Linen	5kg	Position 4 (RINSE)	 (EASY CARES)
Easy cares	2.5kg		
Delicates	2.5kg	Position 10 (GENTLE RINSE)	
Woolens	1kg		



Separate fabric softening/starching

Type of washing	Max. load (dry weight)	Program selector	Additional button
Cottons/Linen	5kg	Position 5 (FABRIC SOFTENING)	 (EASY CARES)
Easy cares	2.5kg		
Delicates	2.5kg	Position 10 (GENTLE RINSE)	
Woolens	1kg		

Separate spinning

Type of washing	Max. load (dry weight)	Program selector	Additional button
Cottons/Linen	5kg	Position 6 (SPIN)	 (EASY CARES)
Easy cares	2.5kg		
Delicates	2.5kg	Position 8 (SHORT SPIN)	
Woolens	1kg	Position 11 (SHORT SPIN)	

Separate prewash

Type of washing	Max. load (dry weight)	Program selector	Temperature-selector	Additional button
Cottons/ Linen	5 kg	Position  (PREWASH)	 (cold), 30, 40	
Easy cares	2.5 kg			
Delicates	2.5 kg			

Maintenance and Cleaning

In daily use

- ☞ After the program has finished pull out the detergent compartment a little so that it can dry out.
- ☞ Leave the door ajar for a while. This helps to prevent stagnant smells, and helps to preserve the door seal.
- ☞ Close the water tap.
- ☞ We recommend you unplug the appliance and turn off the water supply when the wash program has finished.

Control panel


Important! Do not use household furniture polish or abrasive cleaners to clean the panel and operating parts.

- ☞ Wipe over the operating panel with a damp cloth. Only use warm water.

Detergent compartment

Now and again the detergent compartment should be cleaned.

- ☞ Pull out the detergent compartment as far as it will go.
- ☞ Remove the detergent compartment by pulling firmly.
- ☞ Remove the suction cap.
- ☞ Clean the suction cap under running water.
- ☞ Clean the separate compartments with warm water. A bottle brush is a useful aid.
- ☞ Push on the suction cap firmly so that it is sitting tightly.
- ☞ Clean the entire detergent compartment inside area with a brush.
- ☞ Insert the detergent compartment into the guides and push it in.

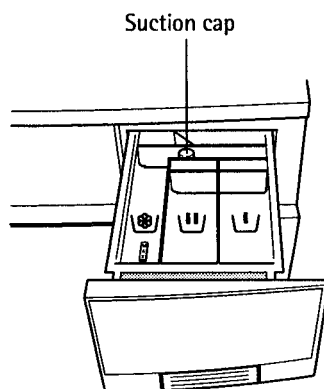


Washing machine drum

The washing machine drum is made from rust-free stainless steel. Any objects left in the laundry which are likely to rust can stain the drum.





Important! Do not clean the stainless steel drum with descaling agents containing acids, scouring agents containing chlorine or iron or steel wool.

-  Remove rust stains on the drum with a stainless steel cleaning agent.

Door

-  Regularly check if there are deposits or foreign bodies in the rubber seal behind the door and remove them.

Precautionary measures in the event of a risk of frost

-  If the washing machine is located where temperatures may fall below 0 °C the following precautions must be taken:
 -  Turn off water taps
 -  Empty the appliance (see "Carrying out an emergency emptying")
 -  Disconnect the inlet hose.

Troubleshooting


- i** The whistling noise when spinning may be different to your previous washing machine which is due to the modern drive system.



Certain problems etc.

If you call out an engineer and the fault is listed here, a charge is levied even if the appliance is in guarantee.

Fault	Possible cause	Remedy
Washing machine does not work.	The mains plug is not connected.	Plug in the mains plug.
	The fuse of the household electrical system is faulty.	Replace the fuse.
	Appliance is not switched on.	Switch on the appliance (pull out program selector).
No water flows in.	The door is not correctly closed.	Close the door; you must hear a click as it locks.
	The water tap is closed.	Open the water tap.
	The inlet hose is blocked.	Unscrew the hose from the tap, remove the filter and clean it under flowing water.
Washing machine vibrates during operation or is unsteady.	The machine is not level.	Adjust the feet according to the installation and connection instruction.
	There is very little washing in the machine (e.g. only a bath robe).	This does not hinder the machine from functioning correctly.
	Water could not be completely pumped out before the spin - because there is a kink in the outlet hose or - the drain pump is blocked.	Check that the outlet hose is correctly laid and if applicable eliminate the kink or clean the drain pump and if necessary remove any foreign bodies from the pump housing.

Fault	Possible cause	Remedy
The suds in the main wash cycle create too much foam.	Probably too much washing powder was used.	Only use as much as the washing powder manufacturer recommends.
Water is leaking out from under the washing machine.	The inlet hose connection is not tight.	Tighten the inlet hose connections.
	The inlet hose has a leak.	Check the inlet hose and if necessary replace it.
	The drain pump cover is not tight.	Tighten cover by turning clockwise.
	Washing is caught in the door.	Abort the program, remove the washing caught in the door, start a new program.
Fabric softener is not added, compartment  for fabric softener is filled with water.	Suction cap in the fabric softener compartment is not correctly fitted or is blocked.	Clean the detergent compartment, fit the suction cap on firmly.
Appliance does not spin, water in the drum.	RINSE HOLD selected.	Deselect RINSE HOLD.
Washing has not been spun sufficiently, there is water left in the drum.	There is a kink in the outlet hose.	Eliminate the kink.
	Maximum pumping height (drain height 1 m from the position of the machine) is exceeded.	Please contact AEG Service Force Centre, it has a retrofit available for pump heights above 1 m.
	Drain pump is blocked.	Switch off the machine and pull the plug out of the socket, clean the drain pump.
	The water drainage system is blocked.	Clean the blockage.
Door cannot be opened.	The door is locked due to safety reasons	After programm termination wait for 2-3 minutes.
The rinse water is cloudy.	Probably caused by a washing powder with a high silicate content.	This does not affect the rinse results. If necessary use liquid detergent.

Fault	Possible cause	Remedy
Washing powder residues are left in the washing powder compartment.	The water tap is not fully open.	Open the water tap fully.
	The inlet hose filter is blocked.	Clean the filter
	The inlet valve filter is blocked.	Disconnect the inlet hose from the machine and clean filter.

If the washing results are not satisfactory

If the washing turns greyish and limescale deposits are present in the drum

- Insufficient washing powder has been added.
- Incorrect washing powder was used.
- Stains were not pretreated.
- Program or temperature was not set correctly.
- When using modular washing powders the individual components were not used in the correct ratio.

If there are still grey stains on the washing

- Washing soiled with ointments, grease or oils was washed with insufficient washing powder.
- The temperature selected for the wash was too low.
- A frequent cause is that fabric softener especially a concentrated one has come into contact with the washing. Wash out these types of stains as fast as possible and use the fabric softener carefully.

If after the final rinse foam is still visible

- Modern washing powders can still cause foam in the final rinse cycle. The washing is nevertheless sufficiently rinsed.

If there are white residues on the washing

- These are insoluble contents of modern washing powders. They are not the result of an insufficient rinse. Shake out the washing or brush it off. Turn the washing inside out before washing it. Review your choice of powder, possibly use liquid detergents.

Carrying out an emergency emptying


! **Warning!** Isolate the washing machine from the mains supply before the emergency emptying!

If the washing machine no longer pumps out the water an emergency emptying must be carried out.


Warning! The water, which flows out of the emergency emptying hose can be hot. First allow the water to cool down before emergency emptying!

☞ Put down a flat container to catch the water draining out.

☞ Pull down the flap in the left corner of the base strip and remove it.

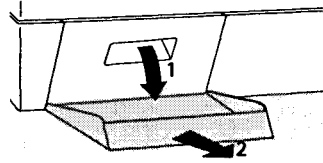


☞ Release the emergency emptying hose from its holder.

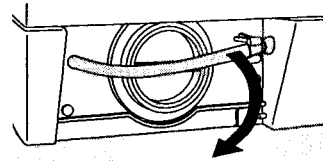

☞ Pull the emergency emptying hose out a little.

☞ Place a container underneath to catch the water.

☞ Release the plug of the emergency emptying hose by turning it anti-clockwise and pull it out.

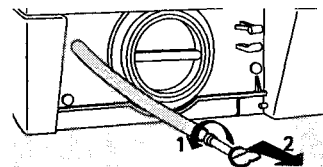

The water will drain out. Depending on the amount of water, it may be necessary to empty the container catching the water several times. To do this, temporarily close the emergency emptying hose again with the plug.

When the water has drained out completely:


☞ Push and twist the plug firmly back into the emergency emptying hose.


☞ Push the emergency emptying hose back in a little and let it catch on to the holder.


☞ Replace the flap in the base plate and close it.


i When the washing machine is completely empty, the ÖKO lock can no longer function correctly. Therefore before the next wash, pour in approx 1 litre of water (pour it in through the washing powder compartment).


Cleaning the drain pump


 **Warning!** Switch off the washing machine and pull the plug out of the socket before cleaning the drain pump!


 First carry out an emergency emptying (see section "Carrying out an emergency emptying").


 Place a towel on the floor in front of the cover of the drain pump. Surplus water may flow out.


 Unscrew the cover of the drain pump by twisting it anti-clockwise and pull it out.

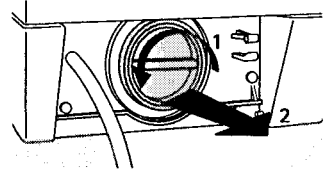



 Remove any foreign bodies which may be in the pump housing.


 Check whether the impeller of the pump can be turned. (It is normal for the pump to turn in steps.) If the impeller cannot be turned at all please contact your local AEG Service Force Centre.

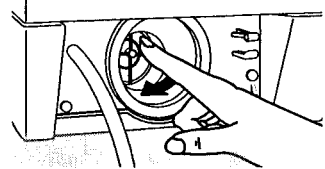

 Replace the cover (insert the ridges on the cover into the guiding slots) and screw on tightly in a clockwise direction.

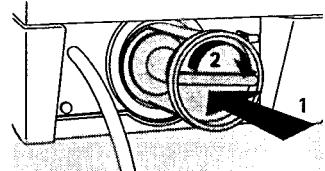

 Close the emergency emptying hose, push it in and twist.

 Close the flap.

Technical data

Height x width x depth	85x60x60cm
Depth with the door opened	95cm
Height adjustability	approx. +10/-5mm
Empty weight	approx. 85kg
Full load (depending on the program)	max. 5kg
Area of application	household
Drum speed when washing	max. 53rpm ⁻¹
Drum speed when spinning	see type plate
Water pressure	1-10bar (=10-100N/cm ² = 0.1-1.0MPa)

CE This appliance complies with the following EC directives:

- 73/23/EEC of 19/2/1973 'Low voltage directive'
- 89/336/EEC of 3/5/1989 'EMC directive' including the Modification directive 92/31/EEC

Power supply

Please refer to the rating plate for specifications about the power supply. The nominal voltage stated on the rating plate and type of current must be identical with the nominal voltage and type of current at the point of installation. Also refer to the rating plate for the fuse required.

Information for the electrician

When connecting the appliance without a plug, care must be taken that this is done correctly. Please follow the relevant information in the "Installation and connection instructions" section.

Service & Spare Parts

If after carrying out the necessary checks there is still a fault with your appliance please contact your local AEG Service Force Centre.

In guarantee customers should ensure that the suggested checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.

Service & Spare Parts

If you require a service engineer or wish to purchase spare parts, contact your local AEG Service Force Centre, by telephoning


0990 929 929

Help us to help you

Please determine your type of enquiry before telephoning. When you contact us we need to know.

1. Your name, address and post code.
2. Your telephone number
3. Clear and concise details of the fault.
 - What is the fault?
 - When does the fault occur?
4. The model, production number and product identification number.
5. Date of purchase.

This information can be found on the rating plate, so you have these numbers to hand we recommend you write them below.

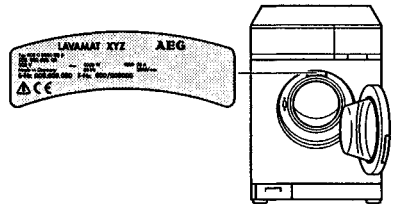

E/PNC no.

F no.

Customer care

For general enquiries regarding your AEG appliance, or for further information on AEG products please contact our Customer Care Department

AEG Domestic Appliances Limited
PO Box 47
Newbury
Berkshire RG 14 5XL
Tel: 01635 572700
Fax: 01635 42970

Index

- A**
Automatic load adaptation 8
- C**
Conditioner13, 17
 liquid13, 19
Connection hot/cold 8
Cotton mixtures 16
Cottons14, 16
Curtains15, 16
Customer care 34
- D**
Delicates 11, 14, 16
Detergent 13
Drain pump9, 32
- E**
Easy care 12, 14, 16, 20
Emergency emptying 31
Energy-saving program8, 12
- F**
Fabric softener13, 19
Fabric softening 23
- G**
Gentle rinse 11
- H**
Hand washing 16
- L**
Limescale 30
Linen14, 16
Liquid detergent 17
- M**
Main wash 11
Main washing detergent13, 19
Microfibres 16
- O**
ÖKO lock 8, 14, 31
- P**
Prewash12, 19
Pre-washing detergent13, 19
Program interruption 21
Pump out12, 18
- Q**
Quick wash11
- R**
Rating plate 9, 34
Rinse 11, 23
Rinse hold 8, 21
Rinse hold button12
- S**
Service Et Spare Parts34
Short spin11
Silk16
Soft rinsing11
Spin speed button12
Spinning8, 11, 23
Stain 7, 8, 11, 19, 30
Stain removers 13, 19
Starch13
Starching23
Synthetics16
- W**
Washing
 coloured15
 delicate 15, 16
 double layers15
 easy care16
 insufficiently clean30
 lightly soiled8, 12, 17
 normally soiled7
 powder residues30
 powders17
 starching19
Water
 hardness17
 softening agent 13, 17, 19
Wool 11, 14, 16

AEG Hausgeräte AG
Postfach 1036
D-90327 Nürnberg 1

© Copyright by AEG

H 243 264 240 - 03 - 0198

AEG Domestic Appliances Ltd

Customer Care Department

55-77 High Street

Slough

Berkshire SL1 1DZ

Telephone: 08705 350350