


B u i l t - I n E l e c t r i c O v e n

User information

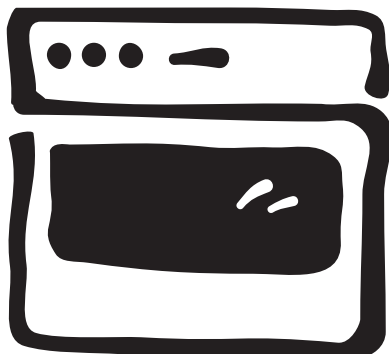

EOB5665

Dear Customer,

Please read this user information carefully and keep it to refer to later.
Please pass the user information on to any future owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning! Information that affects your personal safety.

Important! Information that prevents damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	5
Safety instructions	5
Disposal	6
Description of the Appliance	7
General Overview	7
Control Panel	8
Oven Features	8
Oven Accessories	9
Before using for the first time	10
Setting and changing the current time	10
Setting Manual Operation	11
Initial Cleaning	11
Operating the Oven	12
Switching the Oven On and Off	12
Oven Functions	13
Attaching/Removing the Grill Pan Handle	14
Clock Functions	15
Usage, Tables and Tips	18
Baking	18
Baking Tables	19
Table: Desserts	23
Roasting	24
Table: Meat, roasting, casseroles	25
Table: Roasting, casseroles, au gratin	26
Defrosting	27
Defrosting table	27
Grill sizes	28
Grilling table	28
Cleaning and care	29
Outside of the appliance	29
Oven interior	29
Accessories	29
Shelf Support Rails	30
Oven Lighting	31
Oven Roof	32
Oven door	33
Oven door glass	35

What to do if 38

Electrical Connection 39

Installation Instructions 40

Safety information for the installer 40

Warranty conditions..... 44

Service and Spare Parts..... 47

Operating Instructions

Safety instructions

- CE** This appliance conforms with the following EU Directives:
- 73/23/EEC dated 19.02.1973 Low Voltage Directive
 - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
 - 93/68/EEC dated 22.07.1993 CE Marking Directive

Electrical safety

- This appliance must be connected by a **qualified electrician** only.
- In the event of a fault or damage to the appliance: take the fuses out or switch off.
- **Repairs** to the appliance must **only be carried out by qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact your local Service Force Centre.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety whilst Using

- This appliance is intended to be used for cooking, roasting and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.

- Never pour water directly into the oven when it is hot. This could cause damage to the enamel and discoloration.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could damage the oven enamel.

Disposal




Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at your local waste disposal facilities.



Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.




Warning: Before disposing of old appliances please make them inoperable so that they cannot be a source of danger.


To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance.

Description of the Appliance


General Overview

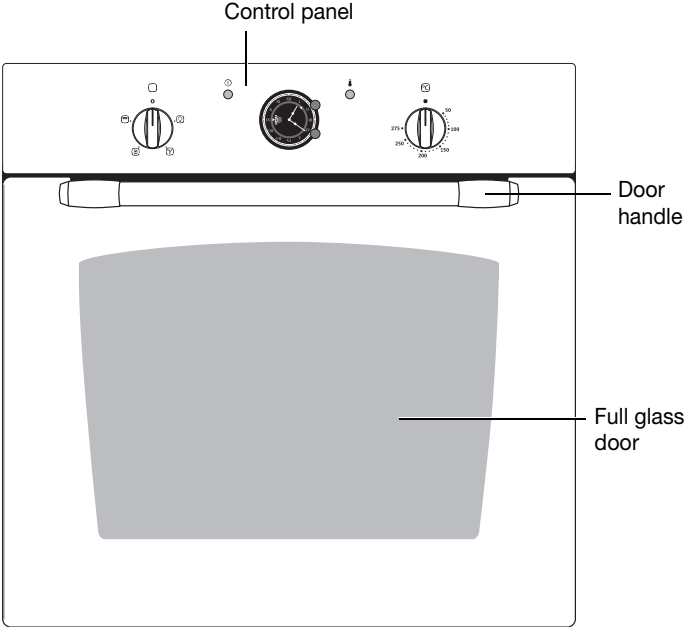

Control Panel

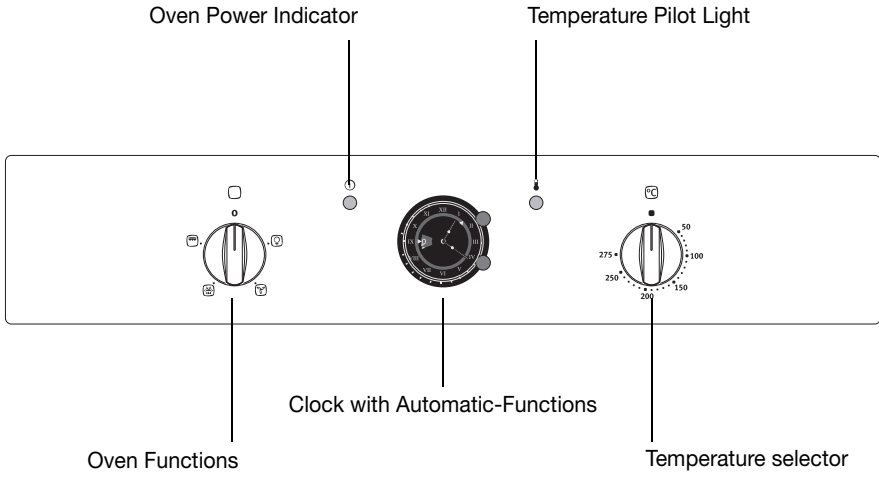


Oven Features

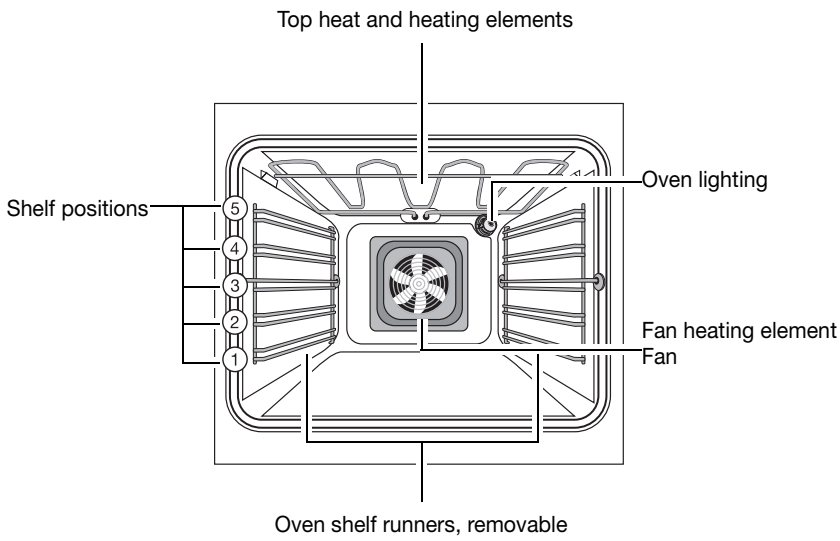

Oven Accessories


Shelf

For dishes, cake tins, items for roasting and grilling.

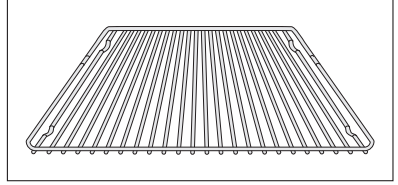


Grill pan with handle

Support for the grill tray as a collecting vessel for fat

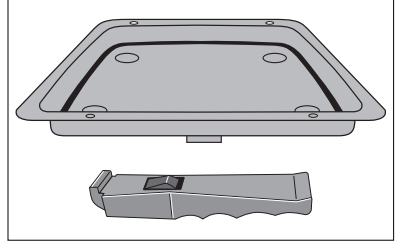

Grill tray

Insert for the grill pan for grilling smaller amounts of food

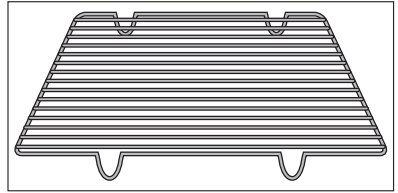


Before using for the first time

Setting and changing the current time

Setting the Time


1. Press the function setting button in as far as it will go and set the current time by simultaneously turning anticlockwise.

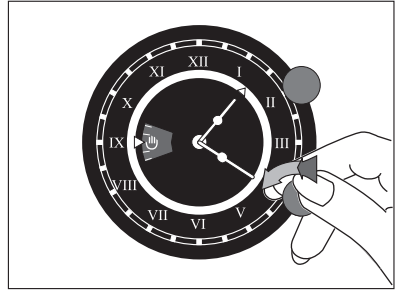

2. Pressing the start setting button, turn it until the start indicator engages at the current time.



The red start indicator must be in the same position as the hour indicator, otherwise the clock will be in automatic operation (start and cook time) and the oven cannot be switched on.

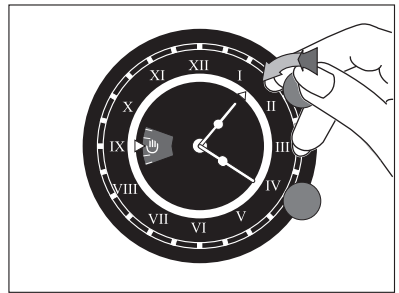


Changing the time




The time can only be changed if an automatic function has not been set.


Press the function setting button and turn it anticlockwise until the required time has been set.

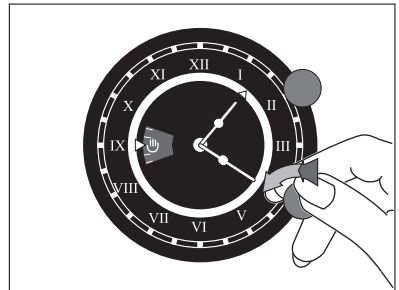


Setting Manual Operation

 Turn the function setting button anti-clockwise until  appears in the display.



If  or 0 is set, it is not possible to select an oven function.

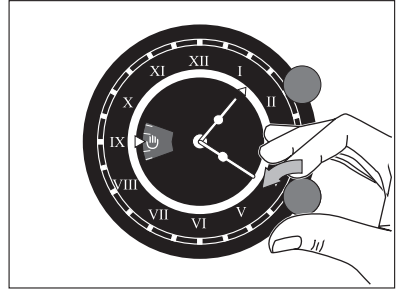

Initial Cleaning


Before using the oven for the first time you should clean it thoroughly.



Caution: Do not use any caustic or abrasive cleaners. The surface could be damaged.




To clean metal fronts use commercially available cleaning agents.

1. Set the oven functions dial to Light .
2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid.
3. Then wash out the oven with warm water and washing-up liquid, and dry.
4. Wipe the front of the appliance with a damp cloth.

Operating the Oven

Switching the Oven On and Off

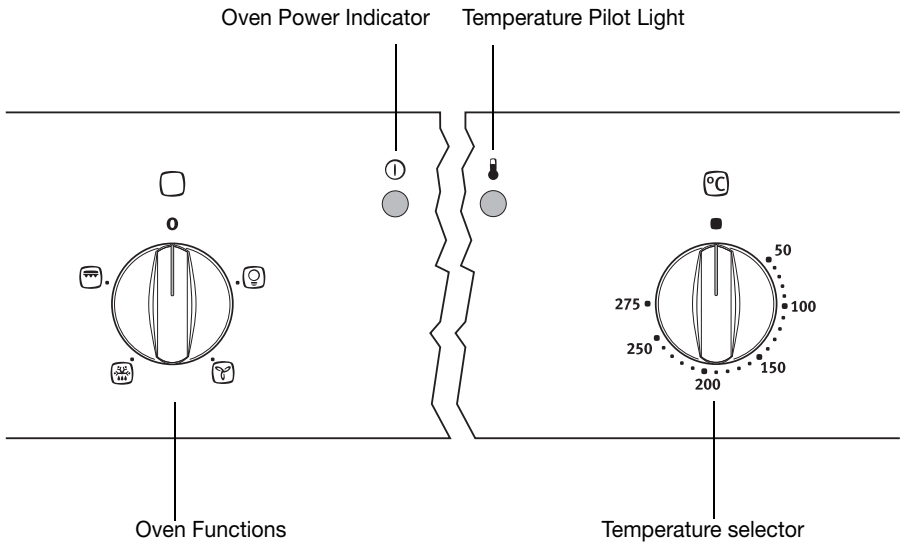

1. Turn the oven functions control knob to the desired function.
2. Turn the temperature control knob to the desired temperature.
The power indicator is lit while the oven is on.
The temperature power indicator is lit while the oven is heating up.
3. To turn the oven off, turn the oven functions and temperature control knob back to the OFF position.







Cooling fan

The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.

Oven Functions

The oven has the following functions:

	Oven function	Use	Heating element/fan
	Light	With this function you can light up the oven interior, e.g. for cleaning.	---
	Hot air	For baking on up to three oven shelves at the same time. Set the oven temperatures 20-40 °C lower than when using Conventional.	Ring element, fan
	Defrost	For defrosting e. g. gateaux and flans, butter, bread, fruit or other frozen foods .	Fan
	Infrared wide-area grill	For grilling flat food items in large quantities and for toasting .	Grill, top heat

Attaching/Removing the Grill Pan Handle

The handle is particularly useful for removing the grill pan and tray more easily from the hot oven.


Attaching the handle

Insert **the handle** at an angle from above into the recess in the side of the grill pan (1) press and hold the release button, lift the handle gently and then lower it (2) let go of the release button.



Warning: Risk of burning!

Important: Check that the handle is securely attached!

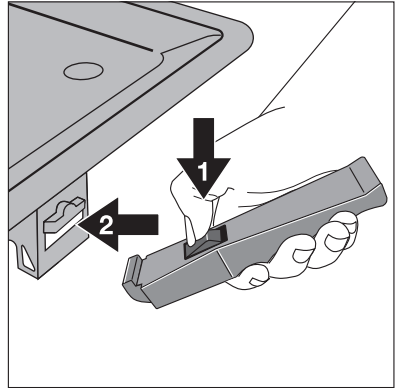


Removing the handle


Press the release button on the top of the handle (1) and lift up the handle (2) to remove it.



Important: Never leave the handle in the heated oven! Overheating can cause the handle to deform or break, and may cause an injury.

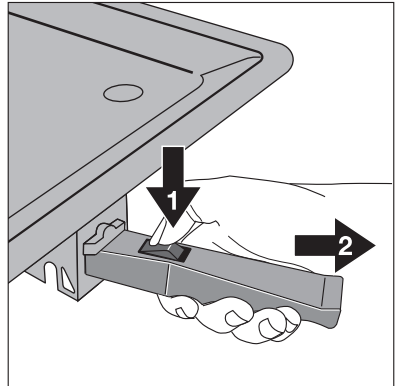

Clock Functions

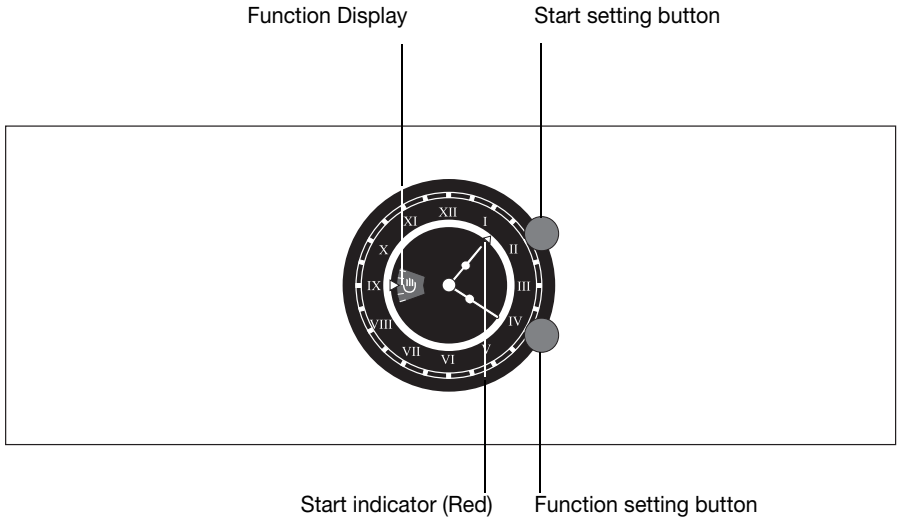

Countdown timer

To set a countdown. A signal sounds after the time has elapsed.

Cook time

To set how long the oven is to be in use.

Start and cook time

For setting when the oven is to switch on and then off.

Time

To set, change or check the time

(See also section “Before Using for the First Time”).



General information

- The required oven function and oven temperature must be selected before setting the start and cook time clock function.
- The acoustic signal can be switched off by turning the function setting button to 🍴 .
- After working with the start and cook time function the appliance must be changed from automatic operation to manual operation by turning the function setting button to 🍴 .
- When you have finished cooking return the oven function and temperature selection switches to the off position.


Countdown timer




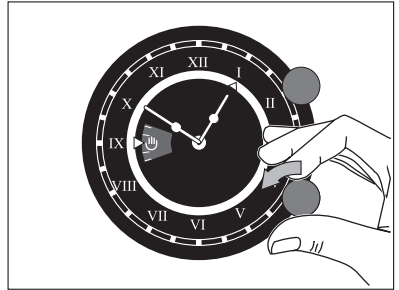
The oven must not be operating when this function is used.

1. Turn the function setting button anti-clockwise until the required countdown appears in the display, e.g., 30.

When the time has expired, a signal will sound for 1 minute.

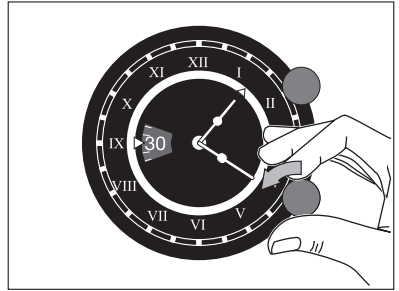


2. Cancel the acoustic signal by turning the function setting button to .




Cook time


1. Select oven function and temperature.
2. Pressing the start setting button, turn it until the start indicator engages at the current time.

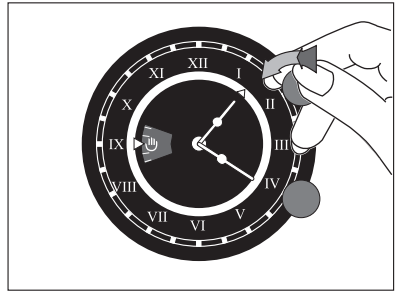

3. Turn the function setting button anti-clockwise until the required cook time appears in the display.

When the time has expired a signal sounds for 1 minute and the oven switches off.

4. When you have finished cooking return the oven function and temperature selection switches to the off position. Set the function setting button to . The appliance is ready for use again.

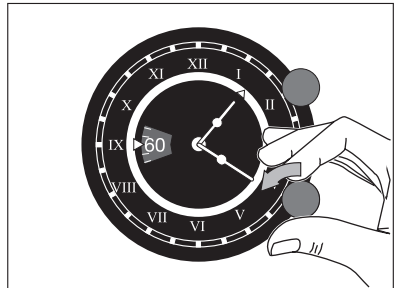


Start and cook time




Start and cook time are set if the oven is to switch on and off automatically at a **later time**.

1. Select oven function and temperature.
2. Pressing the start setting button, turn it anticlockwise until the start indicator is pointing to the required start time.
e.g., XI for 11:00 hrs.

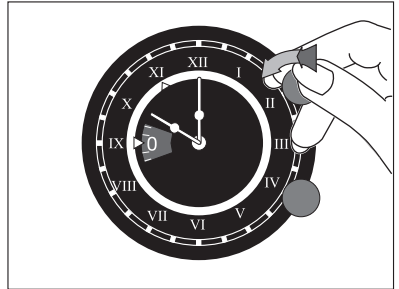

3. Turn the function setting button anticlockwise until the required cook time appears in the display.
e.g., 60 mins.

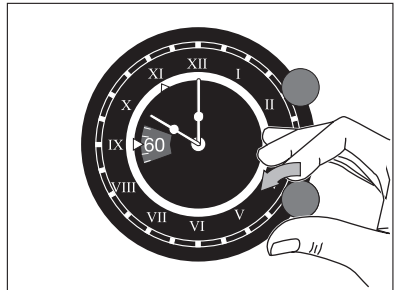


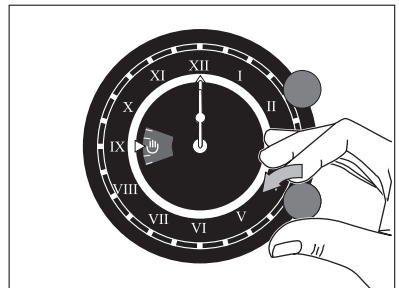
The oven will switch on automatically at the calculated time,
and it will switch off again after the set time has expired.

When the time has expired a signal will sound for 1 minute and the oven will switch off.

e.g., 12:00 hrs.

4. When you have finished cooking return the oven function and temperature selection switches to the off position.

5. Set the function setting button to .
The appliance is ready for use again.




Usage, Tables and Tips


Baking

Oven function: Hot air 


Baking tins

- For Hot air  bright metal tins are suitable.


Oven levels

- With Hot air  you can bake on up to 3 baking trays at the same time:


1 baking tray:
for example, oven level 3

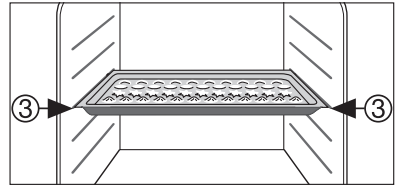


1 baking tin:
for example, oven level 1

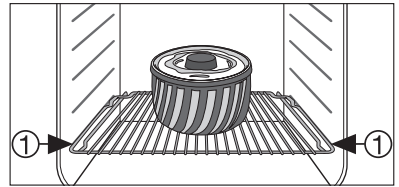


2 baking trays:
for example, oven level 1 and 3

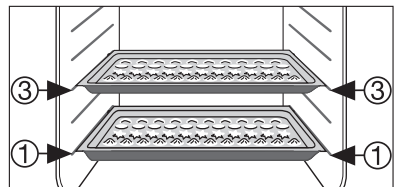

3 baking trays:
oven level 1, 3 and 5

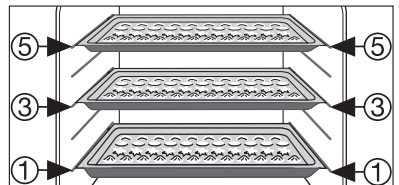

General instructions

With Hot air  you can also bake two cakes at the same time in tins placed next to each other on the shelf. This does not significantly increase baking time.



When frozen foods are used the trays inserted may distort during cooking. This is due to the large difference in temperature between the freezing temperature and the temperature in the oven. Once the trays have cooled the distortion will disappear again.

How to use the Baking Tables

The tables give the required temperature settings, baking times and oven shelf levels for a selection of typical dishes.


- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry, mixture or dough, the number and the type of baking tin.
- We recommend setting the lower temperature when baking for the first time, and if required, e.g. if a darker browning is desired or if the baking time is too long, select a higher temperature.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- If baking cakes on baking trays or tins on more than one level, baking time can be extended by 10-15 minutes.
- Moist recipes (for example, pizzas, fruit flans, etc.) are baked on one level.
- Cakes and pastries at different heights may brown at an uneven rate at first. If this occurs, **please do not change the temperature setting**. Different rates of browning even out as baking progresses.



With longer baking times, you can switch the oven off about 10 minutes before the end of the baking time, in order to utilise the residual heat. Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.



Baking Tables

Cakes, Biscuits, Bread, Pies	Hot air		Time
	Shelf-position	Temperature °C	Hr. : Min.
Using cake tins			
Cakes in Pound Cake tins	1	160-170	1:00-1:10
Sandcakes/Cakes in loaf tins	1	150-160	1:15-1:30
Madeira cake	1	150-160	1:00-1:10
Dundee cake	1	130-140	2:30-3:00
Large Christmas cake (10")	1	130	4:30-5:00
Victoria Sandwich	1 / 4	160	0:25-0:35
Pastry cases	1 / 4	170-190	0:10-0:25

Cakes, Biscuits, Bread, Pies	Hot air 		Time
	Shelf- position	Temperature °C	Hr. : Min.
Bakewell tart	3	160-170	0:45-0:55
Swiss roll	3	150-170 ¹⁾	0:10-0:20
Flans & quiches	3	170-180	0:30-0:50
Using baking sheets			
Short bread	1 / 4	140-150	0:40-0:50
Biscuits	1 / 4	150-170	0:15-0:25
Macaroons	1 / 4	140-150	0:25-0:35
Apple strudel	3	170-180 ¹⁾	0:30-0:50
Choux pastry buns	1 / 4	160-170 ¹⁾	0:20-0:35
Buns / cup cakes	1 / 4	150-160 ¹⁾	0:25-0:35
Scones	1 / 4	190-200 ¹⁾	0:10-0:15
Meringues	3	75	3:30-4:30
Sausage rolls	1 / 4	170-180 ¹⁾	0:20-0:35
Pizza	1	180-200	0:30-0:50
Bread			
Wholemeal bread	1	180-200 ¹⁾	0:40-0:45
White bread	1	180-200 ¹⁾	0:40-0:45

1) Pre-heat oven

Baking on more than one oven level


Type of baking	Hot air 	Hot air 	Temperature in °C	Time Hours: Mins.
	Shelf positions from bottom			
	2 levels	3 levels		
Cakes/pastries/biscuits on baking trays				
Cream puffs/Eclairs	1 / 4	---	160-180 ¹⁾	0:35-0:60
Dry streusel cake	1 / 3	---	140-160	0:30-0:60
Biscuits				
Short pastry biscuits	1 / 3	1 / 3 / 5	150-160	0:15-0:35
Viennese whirls	1 / 3	1 / 3 / 5	140	0:20-0:60
Biscuits made with sponge mixture	1 / 3	---	160-170	0:25-0:40
Pastries made with egg white, meringues	1 / 3	---	80-100	2:10-2:50
Macaroons	1 / 3	---	100-120	0:40-1:20
Biscuits made with yeast dough	1 / 3	---	160-170	0:30-0:60
Puff pastries	1 / 3	---	170-180 ¹⁾	0:30-0:50
Rolls	1 / 4	---	160	0:30-0:45
Small cakes (20 per tray)	1 / 4	---	140 ¹⁾	0:25-0:40

1) Pre-heat the oven!

Tips on Baking

Baking results	Possible cause	Remedy
The cake is not browned enough at the bottom	Wrong shelf level	Place cake on a lower shelf
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower temperature setting
	Baking time too short	Increase baking time Baking times cannot be reduced by setting higher temperatures
	Too much liquid in the dough/mixture	Use less liquid Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Oven temperature too low	Increase oven temperature
	Baking time too long	Shorten baking time
Cake browns unevenly	Oven temperature too high and baking time too short	Set a lower temperature and increase baking time
	Dough/mixture is unevenly distributed	Spread the dough/mixture evenly on the baking tray
Cake is not cooked within the baking time set	Temperature too low	Use a slightly higher temperature setting

Table: Desserts

Desserts	Hot air 		Time
	Shelf position	Temperature °C	Hr. : Min.
Apple pie	3	180-190	0:45-050
Rice pudding	3	130-140	2:00-2:30
Fruit crumble	3	160	0:50-1:10
Pineapple upside down cake	3	160	0:35-0:45
Pavlova	3	130	1:00-1:10
Baked custard	3	150-160	0:45-1:00
Baked apples	3	160-170	0:40-1:00
Bread and butter pudding	3	170-180	0:40-0:55
Apple charlotte	3	180-190	0:40-0:55
Soufflé - sweet/savoury	3	170-190 ¹⁾	0:30-0:45

1) Pre-heat oven

Roasting

Oven function: Hot air 

Roasting dishes

- Any heat-resistant ovenware is suitable for roasting. (Please read the manufacturer's instructions.)
- Large roasting joints can be cooked **directly in the tray or on the shelf with the tray placed below**
- For all lean meat, we recommend **roasting these in a roasting tray with a lid**. This makes the meat more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in the **roasting tin without the lid**.




Tips on using the roasting chart

The figures in the following table are for guidance only.


- We recommend cooking meat and fish **over 1 kg in weight** in the oven.
- To prevent escaping meat juices or fat from burning on to the pan, we recommend placing some water in the roasting pan.
- Turn the meat as required (after about 1/2 - 2/3 of cooking time).
- Baste large roasting joints and poultry several times during the cooking time. This will give better roasting results.
- Switch off the oven approx. 10 minutes prior to the end of the cooking time in order to use the residual heat.

Table: Meat, roasting, casseroles

Meat	Hot air 		Time
	Shelf position	Temperature °C	Hrs. : Min.
Pork			
Shoulder; leg; rolled; boned spare rib; loin of pork	1	170-180	0:30-0:35 per 450 g/1 lb plus 30-35 mins
Beef			
Inexpensive cuts	1	160-170	0:35-0:40 per 450 g/1 lb plus 15-20 mins
Prime cuts			
-rare	1	170-180 ¹⁾	0:15-0:20 per 450 g/1 lb plus 15-20 mins
-medium	1	170-180	0:20-0:25 per 450 g/1 lb plus 25-25 mins
-well done	1	170-180	0:30-0:35 per 450 g/1 lb plus 25-30 mins
Yorkshire pudding			
- small	3	200 ¹⁾	0:10-0:15
- large	1	180-190 ¹⁾	0:30-0:40
Lamb	1	170-180	0:30-0:35 per 450 g/1 lb plus 30-35 mins
Veal	1	170-180	0:30-0:35 per 450 g/1 lb plus 30-35 mins

1) Pre-Heat oven

Table: Roasting, casseroles, au gratin

Poultry, Game, Fish, Vegetables	Quantity approx.	Hot air 		Time
		Shelf po- sition	Tempera- ture °C	Hrs. : Min.
Casseroles, miscellaneous				
Casseroles	1 kg/2 lbs	1	150	2:30-3:00
Lancashire, Hot Pot	1 kg/2 lbs	1	150-160	2:15-2:30
Moussaka	1 kg/2 lbs	1	170-180	0:40-0:50
Meat Loaf	675 g/1.5 lbs	1	170-180	1:00-1:10
Poultry / Game				
Chicken	1 kg/2 lbs	1	170-180	0:50-1:10
Chicken	1.5 kg/3 lbs	1	170-180	1:15-1:30
Duck	1.5-2 kg/3.5-4 lbs	1	180-190	1:15-1:45
Goose	3.5-5 kg/ 8-10 lbs	1	170-180	2:30-3:00
Turkey	2.5-3.5 kg/5-7 lbs	1	160	1:30-2:00
Turkey	4-6 kg/8-13 lbs	1	150-160	2:30-4:00
Pheasant, Wild Duck, Rabbit	1 kg/2 lbs	3	210	0:30-1:00
Partridge/Pigeon	per 300-500g	3	190-200	0:30-0:50
Fish (baked, steamed)				
Whole fish	1-1.5 kg/2-3 lbs	1	160-170	0:45-1:15
Fish pies, bakes	750 g-1 kg/ 1.5-2 lbs	3	170-190	0:30-1:00
Vegetables				
Stuffed pepper/aubergines		1	180-190	0:30-1:00
Au gratin dishes		3	180-200	0:15-0:45

Defrosting

Oven function: Defrost  (no temperature setting)

- Unpack the food and place it on a plate on the oven shelf.
- Do not cover with a plate or bowl, as these can substantially lengthen the defrosting time.
- For defrosting, place the shelf on the **1st oven level from the bottom**.

Defrosting table

Food	Defrosting time Min.	Further defrosting time (mins.)	Comments
Chicken, 1000 g	100-140	20-30	Place the chicken on an upturned saucer placed on a large plate. Halfway through the time, turn it over
Meat, 1000 g	100-140	20-30	Halfway through the time, turn it over
Meat, 500 g	90-120	20-30	Halfway through the time, turn it over
Trout, 150g	25-35	10-15	---
Strawberries, 300g	30-40	10-20	---
Butter, 250g	30-40	10-15	---
Cream, 2 x 200g	80-100	10-15	Cream that is still slightly frozen in part can still be whipped
Flan/gateau, 1400g	60	60	---

Grill sizes

Oven function: Infrared wide-area grill  with maximum temperature setting



Important: Always grill with the oven door closed.



The empty oven should **always be pre-heated with the grill functions for 5 minutes.**

- When grilling, use the oven shelf and drip pan together.
- The grilling times are for guidance only.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling table

Food to be grilled	Oven level	Grilling time	
		1st side	2nd side
Burgers	4	8-10 mins.	6-8 mins.
Pork fillet	4	10-12 mins.	6-10 mins.
Sausages	4	8-10 mins.	6-8 mins.
Fillet steaks, veal steaks	4	6-7 mins.	5-6 mins.
Fillet of beef, roast beef (approx. 1 kg)	3	10-12 mins.	10-12 mins.
Toast ¹⁾	3	4-6 mins.	3-5 mins.
Toast with topping	3	6-8 mins.	---

1) Use the grill without the roasting tray, do not pre-heat

Cleaning and care



Warning: For cleaning, the appliance must be switched off and cooled down.

Warning: For safety reasons, **do not** clean the appliance with steam jet or high-pressure cleaning equipment.

Important: **Do not use any abrasive cleaners, sharp scrapers or abrasive items.**

Outside of the appliance

- Wipe the front of the appliance with a soft cloth and a solution of washing-up liquid and warm water.
- With metal fronts use the cleaners that are commercially available.

Oven interior

Clean the appliance after each use. In this way, residues are easier to clean off and are not allowed to burn on.

1. To clean the oven, switch the oven light on.
2. After every use, wipe the oven with a solution of washing-up liquid and allow to dry.



Remove stubborn residues with a special oven cleaner.



Warning: If using an oven spray, please follow the manufacturer's instructions exactly.

Accessories



Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Shelf Support Rails

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

Removing the shelf support rails


First pull the front of the rail away from the oven wall (1) and then unhook at the back (2).

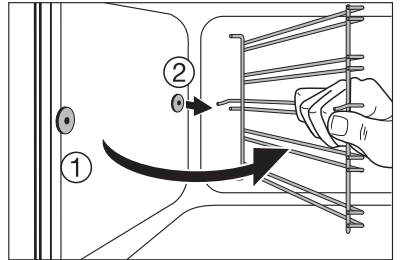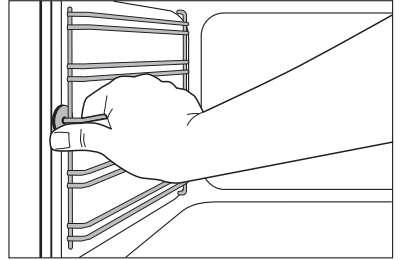


Fitting the shelf support rails



Important! The rounded ends of the guide rails must be pointing forwards!

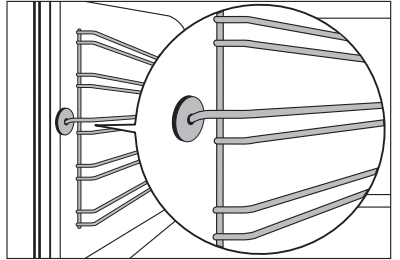

To re-insert, first hook the rail into place at the back (1) and then insert the front and press into place (2).

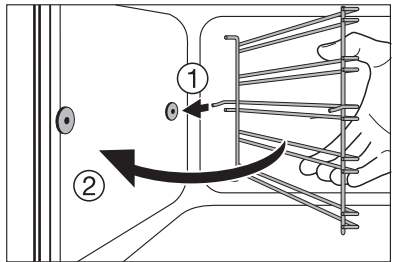

Oven Lighting



Warning: Risk of electric shock! Prior to changing the oven light bulb:


- Switch off the oven!
- Disconnect from the electricity supply.



Place a cloth on the oven floor to protect the oven light and glass cover.

Changing the oven light bulb/cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary: replace with **25 watt, 230 V, 300 °C heat-resistant oven lighting.**
3. Refit the glass cover.

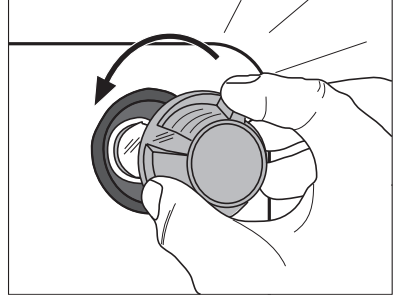

Oven Roof

The upper heating element can be folded down to make it easier to clean the oven roof.

Folding down the heating element



Warning: Only fold down the heating element when the oven is switched off and there is no risk of being burnt!

1. Remove the side shelf support rails.
2. Grip the heating element at the front and pull it forwards and out over the support lug on the inner wall of the oven.
3. The heating element will now fold down.



Caution: Do not use force to press the heating element down! The heating element might break.



Clean the oven roof

Repositioning the heating element

1. Move the heating element back up towards the oven roof.
2. Pull the heating element forwards against the spring pressure and guide it over the oven support lug.
3. Settle it onto the support.
4. Insert shelf support rail.



Important: The heating element must be positioned correctly and securely on both sides above the support lug on the inner wall of the oven.

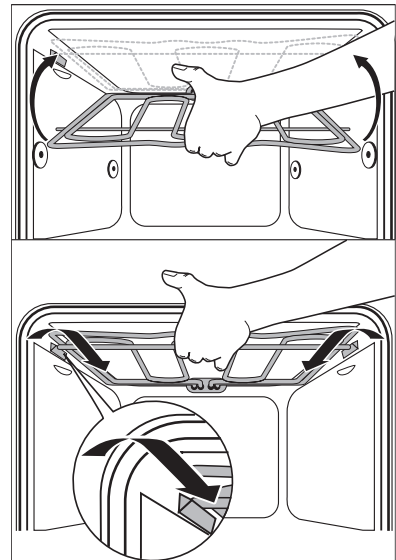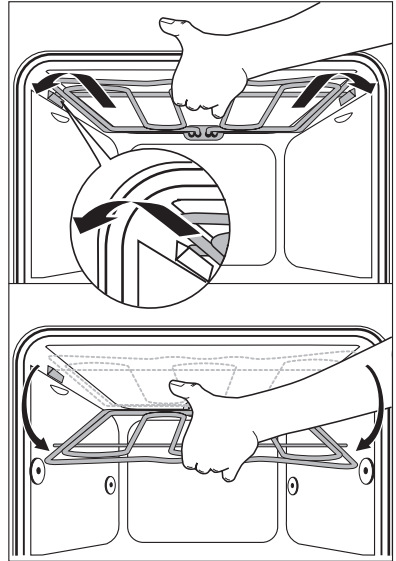


Oven door


For easier cleaning of the oven interior the oven door of your appliance can be taken off its hinges.

Removing the oven door from its hinges


1. Open the oven door as far as it will go.

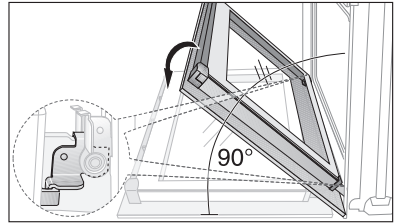

2. Undo the **clamping levers (A)** on both door hinges **fully**.

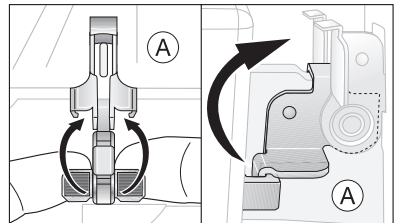


3. Close the oven door as far as the first position (approx. 45°).

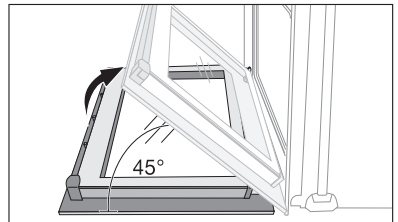

4. Take hold of the oven door with a hand on each side and pull it away from the oven at an upwards angle (**Take care: It is heavy**).




Lay the oven door with the outer side facing downwards on something soft and level, for example, a blanket in order to prevent scratches.

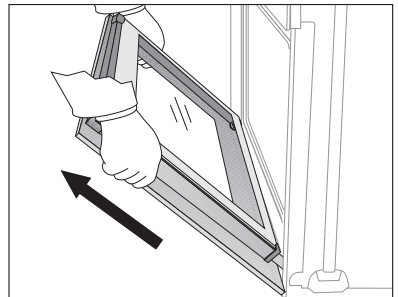


Hanging the oven door back on its hinges



1. From the handle side take hold of the oven door with a hand on each side and hold at an angle of approx. 45°. Position the recesses on the bottom of the oven door on the hinges on the oven. Let the door slide down as far as it will go.

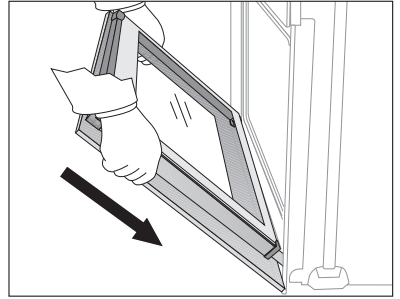

2. Open the oven door as far as it will go.

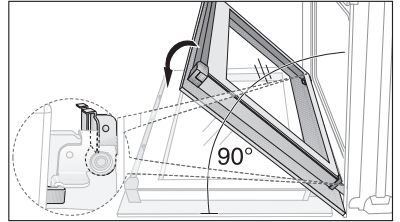

3. Fold up the clamping levers (A) on both door hinges back into their original positions.

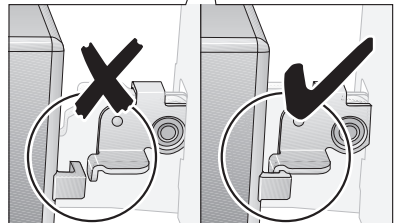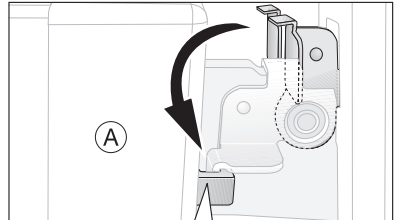

4. Close the oven door.

Oven door glass


The oven door is fitted with two panels of glass mounted one behind the other. The inner panel can be removed for cleaning.




Important Rough handling, especially around the edges of the front panel, can cause the glass to break.

Removing the door glass


1. Open the oven door as far as it will go.

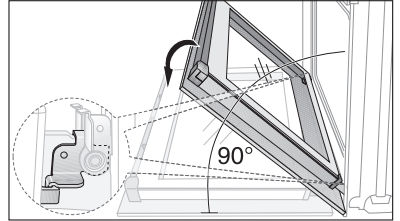


2. Undo the **clamping levers (A)** on both door hinges **fully**.

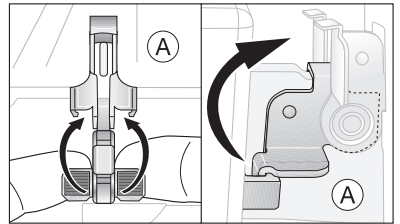


3. Close the oven door as far as the first position (approx. 45°).

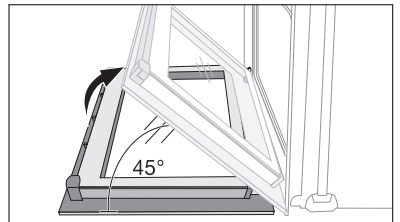

4. Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling upwards.

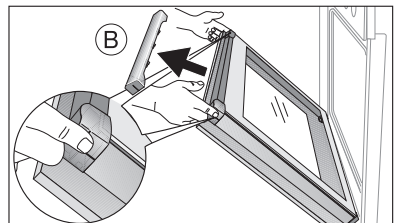

5. Take hold of the door glass on its upper edge and take it out of the guide by pulling it upwards.

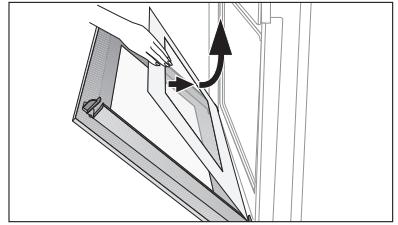


Cleaning the door glass


Clean the door glass thoroughly with a solution of water and washing up liquid. Then dry it carefully.

Putting the door glass back

1. From above insert the door glass at an angle into the door profile at the bottom edge of the door and lower it.


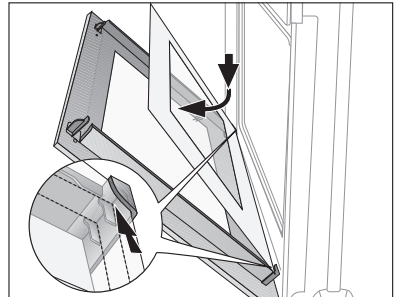


2. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door.

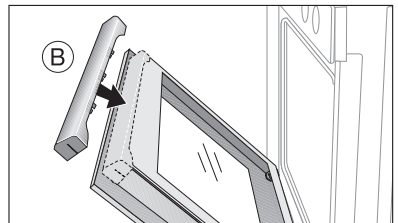






On the open side of the door trim (B) there is a guide bar (C). This must be pushed **between** the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

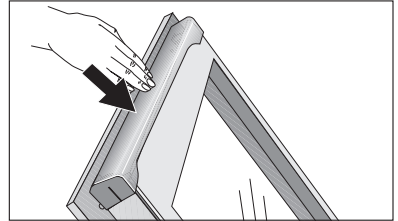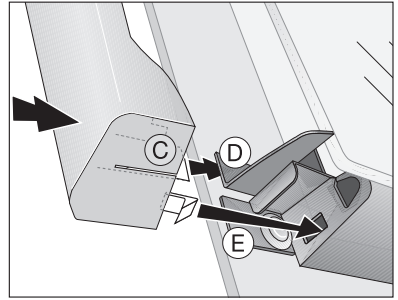

3. Open the oven door as far as it will go.

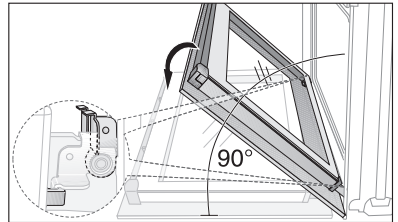

4. Fold up the clamping levers (A) on both door hinges back into their original positions.

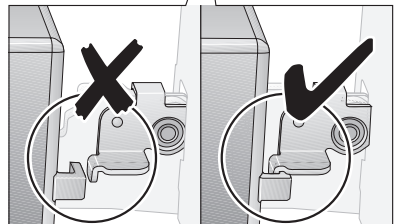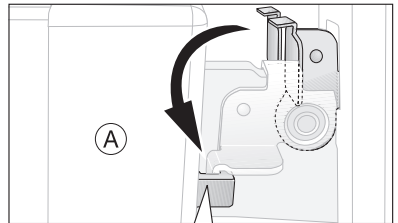

5. Close the oven door.

What to do if ...

Fault	Possible cause	Remedy
The oven does not heat.	The oven has not been switched on.	Switch the oven on.
	The required settings have not been made.	Check the settings.
	The domestic electrical protection device (fuse) has been tripped.	Check the fuses or protection devices. If these are tripped repeatedly, you should call a qualified electrician.
The oven light does not come on.	The bulb has blown.	Replace the bulb.

If you are unable to remedy the problem by following the above suggestions, please contact your local Service Force Centre.



Warning! Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.



If the appliance has been wrongly operated, the visit from the service technician or dealer may not take place free of charge, even during the warranty period.




Advice on cookers with metal fronts:

Because of the cooler surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.

Electrical Connection

The oven is designed to be connected to 230-240V~(50Hz) electricity supply.

The oven has an easily accessible terminal block which is marked as follows:

- Letter L - Live terminal
- Letter N - Neutral terminal
-  - Earth terminal



This oven must be earthed!

The cable used to connect the oven to the electrical supply must comply to the specifications given below.

For UK use only

Connection via	Min. size Cable/flex	Cable/flex type	Fuse
Cooker Control Circuit	2,5 mm ²	PVC/PVC twin and earth	min: 15A max: 20A

It is necessary that you install a double pole switch between the oven and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current regulations.

The switch must not break the yellow and green earth cable at any point.

Important

After installation and connecting, the cable must be placed so that it cannot at any point reach a temperature of more than 50°C above the ambient temperature.

Before the oven is connected, check that the main fuse and the domestic installation can support the load; and that the power supply is properly earthed.

The manufacturer declines any responsibility should these safety measures not be carried out.

Installation Instructions




Attention: The new appliance may only be installed and connected by a **registered expert**.



Please comply with this. If you do not, any damage resulting is not covered by the warranty.





Safety information for the installer

- The electrical installation is to be set up so that the appliance can be isolated from the mains with a minimum 3mm all-pole contact separation. Suitable separation devices include e.g. cut-outs, fuses (screw fuses are to be taken out of the holder), RCD's and contactors.
- Anti-shock protection must be provided by the installation.
- The built-in unit must meet the stability requirements of DIN 68930.
- Built-in ovens and built-in cooking surfaces are fitted with special connection systems. For safety reasons, they must only be combined with appliances from the same manufacturer.

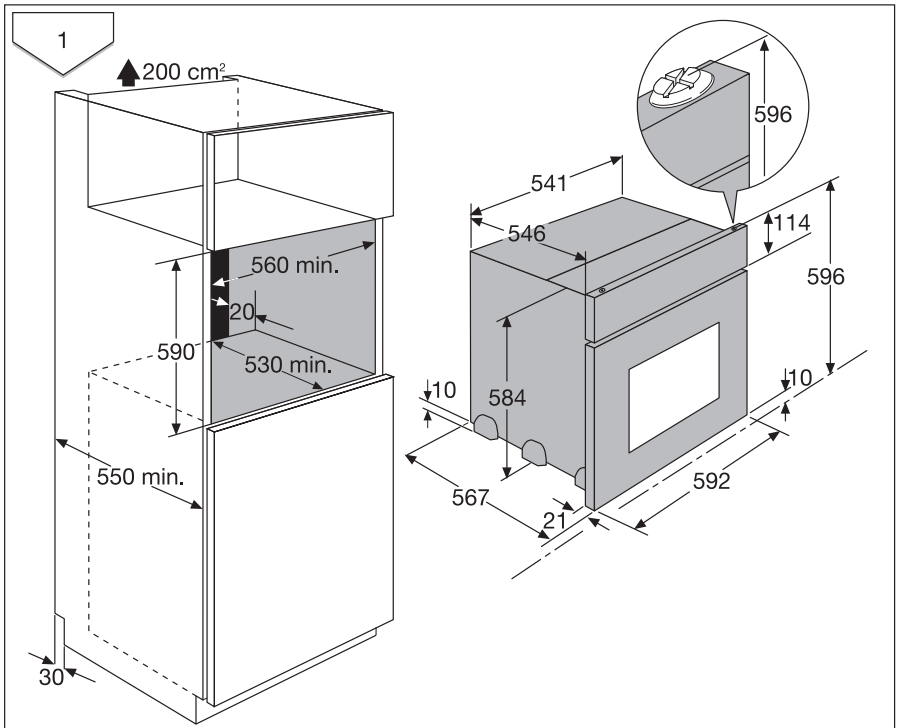

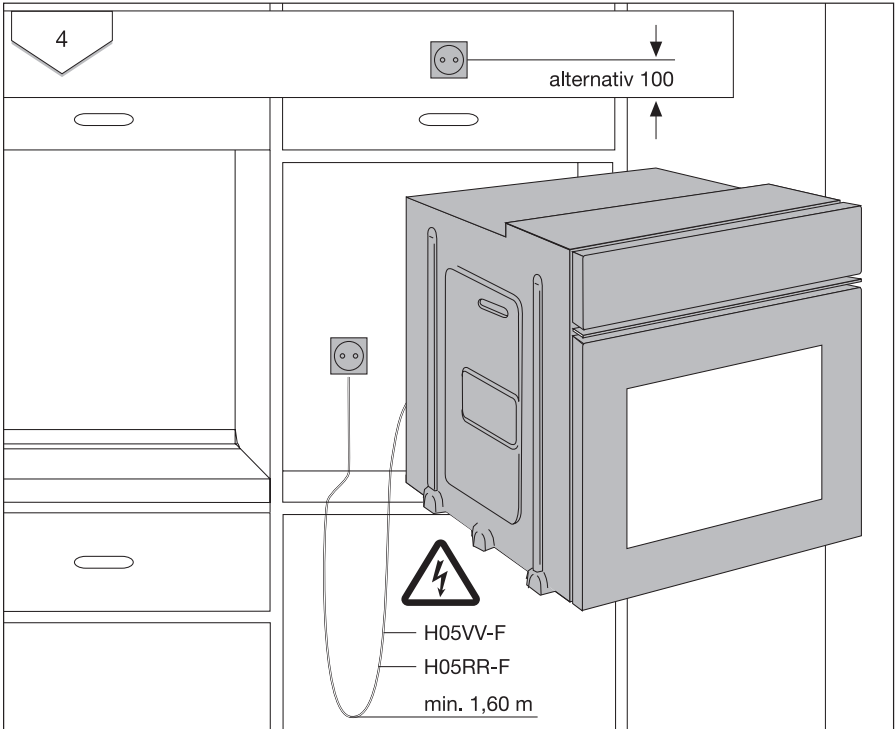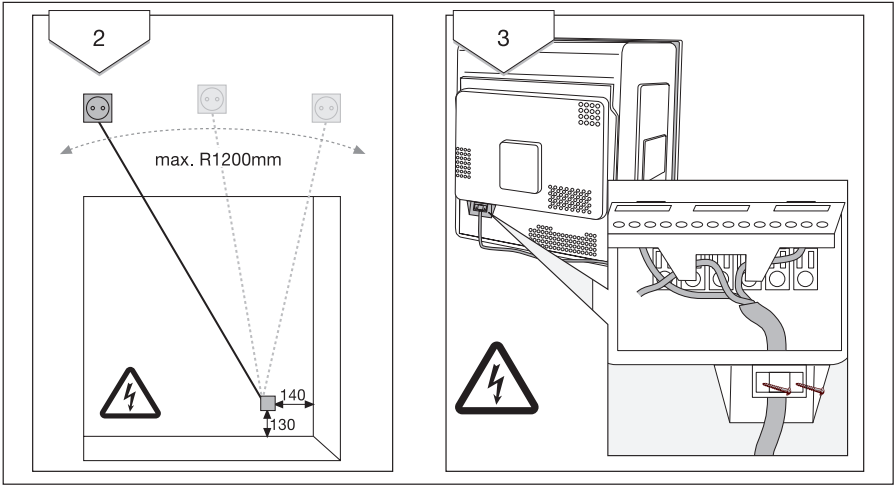

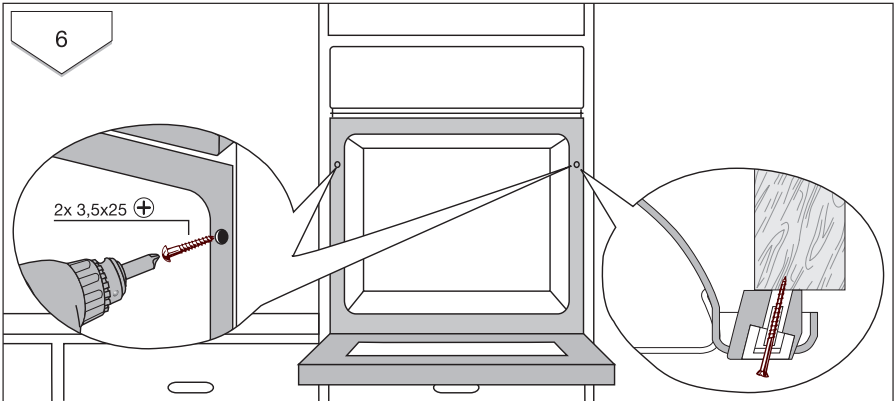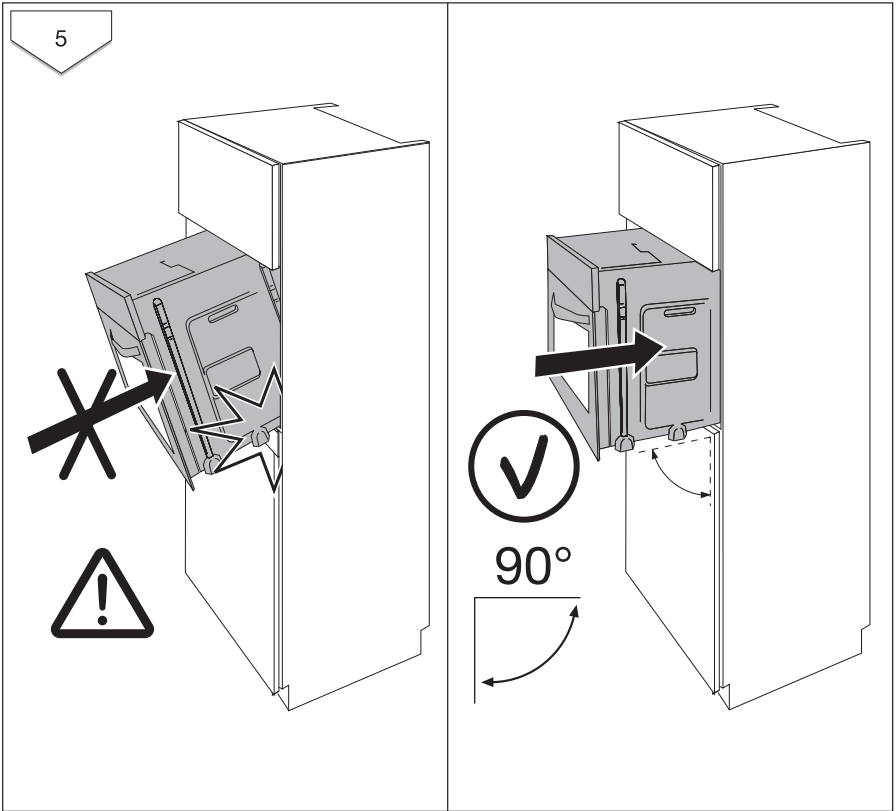

Warranty conditions

Standard guarantee conditions

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre.
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacture which are not marketed by Electrolux.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 3 44 62 20 13
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordernone	+39 (0) 800 11 7511
Sweden	Stockholm	+46 (0) 20 78 77 50
UK	Luton	+44 (0) 8705 950 950

Service and Spare Parts

If the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

0870 5 929 929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading „What to do if...“

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date.

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

Customer Care


For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at

www.electrolux.co.uk.

Customer Care Department
Major Appliances
Electrolux
Addington Way
Luton
Bedfordshire, LU4 9QQ
Tel: 08705 350350 (*)

For Customer Service in the Republic of Ireland please contact us at the address below:


AEG/ Electrolux Group (Ire) Ltd
Long Mile Road/ Dublin 12
Republic of Ireland
Tel: +353 (0) 1 4090753
Email: service.eid@electrolux.ie

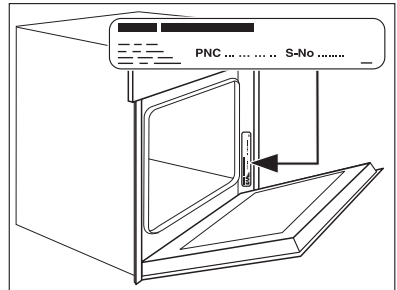

(*) Calls may be recorded for training purposes

822 926 933-A-171105-01

© **Electrolux plc 2003**
Subject to change without notice

 **The Electrolux Group. The world's No.1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.