



Instruction book

Refrigerator

ERES1800

We were thinking of you
when we made this product

Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance



General information and tips



Environmental information

Scrapping old appliances



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Safety instructions

Your new fridge may have other functions compared to your previous one.

Carefully read these instructions to learn how the appliance works and how to care for it. Keep the instruction booklet. It will come in handy if you later sell the cabinet or give it to somebody else.

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or warnings contact the Customer Care Department.

For the User

- The refrigerator is intended for the storage of foodstuffs and the production of cold water, with or without carbon dioxide, for normal household use in accordance with these instructions.
- **If the gas cylinder is used for other purposes than that intended or if it is filled by an unauthorised person, all guarantees automatically become null and void . In order to ensure reliable functioning, only an Electrolux Cylinder may be used.**
- Do not keep explosive gases or liquids in the refrigerator or freezer compartment. They may explode and cause injury and material damage.
- Do not let sharp objects come into contact with the refrigerating system on the back of and inside the cabinet. If the refrigerating system is punctured,

the cabinet will be damaged and foodstuff inside may spoil.

- Do not keep carbonised drinks or bottles in the freezer compartment. The glass bottles may break.
- The cabinet is heavy. The edges and projecting parts of the cabinet may be sharp. Be careful when moving the cabinet and always use gloves.

Child Safety

- Pay attention so that small children do not gain access to the operating controls or the inside of the cabinet.



WARNING

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.



WARNING

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.



WARNING

Do not damage the refrigerant circuit.



WARNING

Do not use electrical appliance inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.



WARNING

Connect to potable water supply only.

Contents


Welcome to the world of Electrolux	3	Removing the ventilation grille	15
Scrapping old cabinets	4	Cleaning	15
Safety instructions	5	Servicing and cleaning the water dispenser.	15
Contents	6	Service during operation	16
USE	7	To change the lamp	16
Control Panel	7	Change of carbon filter	16
DISPLAY	8	Defrosting the fridge	17
Functions Menu	8	When the appliance is not in use	17
Select /Switch off /Switch on	8	SOMETHING NOT WORKING	17
Temperature regulation	8	TECHNICAL SPECIFICATION	19
Switching off	9	Permissible water pressure (to ensure reliable function).	19
Ambient Temperature Function	9	INSTALLATION	20
Child Lock Function	9	Unpacking	20
Shopping Function	9	Remove the transport supports	20
Eco mode Function	9	Cleaning	20
Chill Mode Function	10	Connecting the water hose.	21
Use of the fridge compartment	10	Installation of carbon filter	21
Temperature regulation	10	Electrical cord	22
Holiday Function "H"	10	Installing the cabinet	22
Door open acoustic alarm	11	When the water system is started for the first time	23
Control Panel (water dispenser)	11	Electrical connection	24
Cabinet interior	13	Guarantee/Customer Service	26
HINT and TIPS	14	EUROPEAN GUARANTEE	27
Saving energy	14	www.electrolux.com	27
Food Storage	14		
Protect the environment	14		
MAINTENANCE and CLEANING	15		

USE


Position and clean the cabinet as explained in the section "Installation". Check that the drain hose is located over the drip bowl behind the refrigerator. Also ensure that the drain hose is connected to the box. See the illustration.



Before inserting the power plug into the outlet and switching on the cabinet for the first time, leave it standing upright for about 2 hours. Otherwise the compressor may sustain damage. This time will allow the oil sufficient time to return to the compressor.

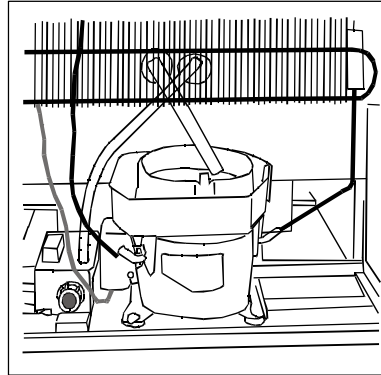



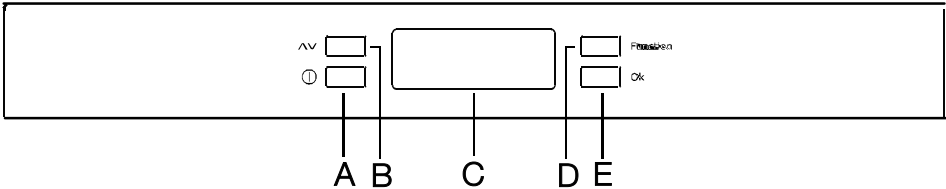






Control Panel



- A - Appliance button ON/OFF
- B - Temperature regulation button
- C - Temperature and function indicator
- D - Function button
- E - Confirmation button

DISPLAY



-  Excessive temperature alarm and Door open acoustic alarm Indicator (if foreseen)
-  If on the temperature indicated is the ambient temperature
-  Positive or negative Temperature indicator
-  Negative Temperature indicator
-  Temperature indicator
-  If on the Child Lock function is on
-  If on the Shopping function is on
-  If on the Chill mode function is on
-  If on the Eco Mode function is on

First switch on

After plugging the plug into the power outlet, if the display is not illuminated, press key (A), appliance on.





For a correct storage of the food select the Eco mode function that guarantee the following temperature is set: +5°C in the fridge

- To select a different temperature see "Temperature regulation".

Functions Menu

By activating the key D the functions menu is operating. Each function could be confirmed by pressing button E. If there is no confirmation after some seconds the display will go out from the menu and return in normal condition.

The following functions are indicated:

-  Ambient Temperature
-  Child Lock function
-  Shopping function
-  Eco Mode function

-  Drinks Chill function

Select /Switch off /Switch on

Temperature regulation

The temperature may be regulated by pressing the key (B) to set the desired temperature.

By pressing the key B the current temperature setting flashes on the indicator and by pressing the key B again it is possible to change it.

You confirm the choice of the temperature either by pressing the key E, (you will hear the buzzer) or by waiting for some seconds (you will not hear the buzzer).

Then the indicator shows the inside compartment temperature again.

The newly selected-temperature must be reached after 24 hours.

It is not necessary to set the temperature again after long periods of non use as the temperature remains stored.



Attention!

During the stability period by the first starting the temperature displayed can not correspond to the setting temperature. During this time it is possible that the temperature displayed is different than the setting temperature.

Switching off

The appliance is shut off by pressing key (A) for more than 1 second. After this, a countdown of the temperature from -3 -2 -1 will be shown.

Ambient Temperature Function

The ambient temperature function is activated by pressing key D (several times if necessary) until the corresponding icon appears

In this condition the selected temperature is the ambient temperature.

You must confirm the choice by pressing key E within a few seconds. You will hear the buzzer and the icon will remain lit.

It is possible to de-activate the function at any time by pressing key D until the corresponding icon will flash and then key E.

Child Lock Function

The Child Lock function is activated by pressing key D (several times if necessary) until the corresponding icon

appears

You must confirm the choice by pressing key E within a few seconds. You

will hear the buzzer and the icon will remain lit.

In this condition any possible operation through the keys does not cause any change as long as this function is activated.

It is possible to de-activate the function at any time by pressing key D until the corresponding icon flashes and then key E.

Shopping Function

If you need to insert a large amount of warm food, for example after doing the grocery shopping, we suggest you activate the Shopping function to chill the products more rapidly and to avoid warming the other food which is already in the refrigerator.

The Shopping function is activated by pressing key D (several times if necessary) until the corresponding icon

appears

You must confirm the choice by pressing key E within a few seconds. You will hear the buzzer and the icon will remain lit.

The Shopping function shuts off automatically after approximately 6 hours. It is possible to de-activate the function at any time by pressing key D until the corresponding icon will flash and then key E.

Eco mode Function

The Eco Mode function is activated by pressing key D (several times if necessary) until the corresponding icon

appears

(or setting the temperature at +5°C).

 
You must confirm the choice by pressing key E within a few seconds. You will hear the buzzer and the icon will remain lit.

In this condition the chosen temperatures are automatically set (+ 5°C and - 18°C), in the best conditions for storing food.

It is possible to de-activate the function at any time by changing the selected temperature in one of the compartments.

Chill Mode Function

The Quick Chill function permits the rapid cooling of cans and bottles taking forced cold air into them. Put the drinks on the Quick Chill shelf and open the air lever to the maximum.

The Quick Chill function is activated by pressing key D (several times if necessary) until the corresponding icon appears .

When the cooling is finished de-activate the function by pressing key D until the corresponding icon will flash, then key E and reset the air lever to the minimum .

Use of the fridge compartment

Temperature regulation

The temperature of this compartment may be regulated between +2°C and +8°C.

During normal functioning the indicator shows the temperature inside the fridge.



Attention!

Difference between the temperature displayed and temperature setting is normal. Especially when:

- a new setting has recently been

selected

- the door has been left open for a long time

- warm food has been placed in the compartment.

Holiday Function "H"

The holiday function sets the temperature at + 15°C.

This function allows you to keep the refrigerator shut and empty during a long holiday period (e. g. the summer holidays) without the formation of a bad smell.

The Holiday Function H may be regulated by pressing the key B. By pressing the key B the current temperature setting flashes on the indicator. Press the key B again. When the letter H appears on the display, confirm the choice of the temperature or by pressing the key E, (you will hear the buzzer) or by waiting for some seconds (you will not hear the buzzer). Now the refrigerator is in the Holiday function in the energy saving mode and the indicator shows the letter H. It is possible to de-activate the function at any time by changing the selected temperature in the compartment.




Attention!

The fridge compartment must be empty whilst the Holiday function is on.

Door open acoustic alarm


An acoustic alarm will sound when the door is left open for around 5 minutes. The door open alarm conditions are indicated by:

- flashing of the icon  ;
- sounding of buzzer.

Press the key (E) to stop the acoustic alarm.
When normal conditions are restored

(door closed):
- the acoustic alarm will stop.

Control Panel (water dispenser)

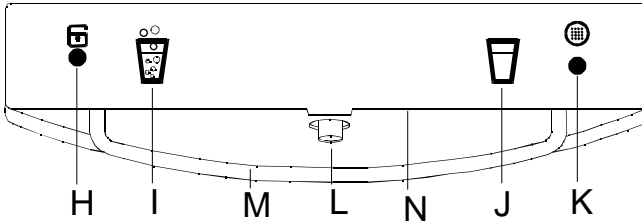

- H. Yellow indicator lamp**
Lights up when the locking function has been activated.
- I. Button for carbonated water.**
 - Used for the choice of carbonated water.
 - For the engagement and disengagement of the locking function.
- J. Button for ordinary water.**
 - Used for the choice of ordinary water.
 - Switches the background lighting on and off.
 - Switches off the indicator lamp for water filter replacement.
- K. Yellow indicator lamp**
Lights up when the water filter must be changed.
- L. Water out-feed**
Activated when a glass or something similar is pressed upwards against the flap.
- M. Flap**
- N. Lighting**

The functions of the water-dispenser

The locking function:
The locking function is activated by the production plant.

For temporary unlocking:
Keep the button (I) pressed in for about three seconds until the yellow indicator lamp (H) goes out. The locking function is re-activated automatically after about three seconds.

For permanent unlocking:
Keep the buttons (I) and (J) pressed in at the same time for about three seconds. The button (I) or (J) lights up to indicate unlocking.

To activate the locking function:
Keep the buttons (I) and (J) pressed in at the same time for about three seconds. Activation is indicated by the yellow indicator lamp (H) lighting up.

Selecting and obtaining water:

Before obtaining water, selection is carried out either by pressing the button for carbonated water (I) or the button for ordinary water (J). The actual choice is indicated by the button which lights up. The selection of water can be changed while the water is running.

Water is obtained by pressing a glass or other container against the opening (M). Stop the water flow by moving the glass or container downwards away from the opening (M). Any water that drips or is spilled is collected in the drip bowl below the water dispenser. When the carbonated water is being obtained, there is a slight afterflow when the glass is removed. The drip bowl can be detached and emptied when necessary.

Lighting:

The water dispenser lighting (N) illuminates automatically when water is obtained.

For continuous lighting:

1. Make sure that the water dispenser is unlocked.
2. Then hold the button for ordinary water (J) pressed in for about three seconds until the illuminates. The lighting then illuminates with about 50 % of its full intensity.

To switch off the lighting:

1. Ensure that the water dispenser is unlocked.
2. Then hold the button for ordinary water (J) pressed in for about three seconds until the lighting goes out.


Indicator lamp for the water filter:

The water dispenser is fitted with an indicator lamp (K) which shows when it is time to change the water filter. When the indicator lamp remains lit, the water filter has been utilised to about 80 % of its expected lifetime. In this situation, it is recommended that you buy a replacement filter. When the indicator lamp starts flashing, the water filter has been utilised to 100% of its lifetime. Replace the filter without delay.

After replacing the filter cartridge, see the section "Service during operation". The indicator lamp can be switched off by holding the button for ordinary water (J) pressed in for about three seconds until the indicator lamp goes out.


Carbon filter's function:

The built-in carbon filter means that strong smelling groceries can be placed near other groceries without affecting their taste or aroma.

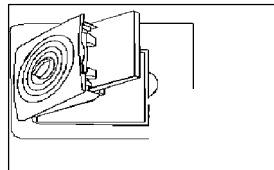


Cabinet interior

The shelves and door compartments are removable and can easily be re-arranged.

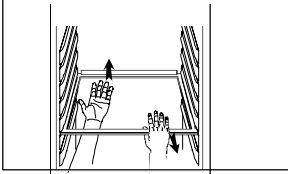


Certain shelves must be lifted up by the rear edge to enable them to be removed.

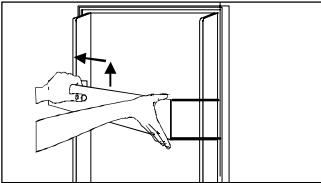


The lower door compartment and the glass shelf above the vegetable drawer must not be moved. They are fitted to ensure air circulation inside the cabinet.

Shelves with a raised edge should be placed with the raised edge facing the rear wall of the cabinet.

The vegetable drawer has a ventilation edging to increase the circulation of air and reduce the risk of condensation.

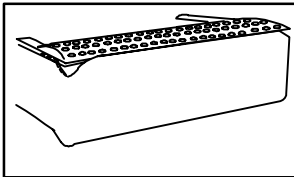

The vegetable drawer has two moveable partitions with five different choices in order to separate different vegetables.

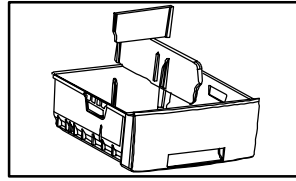


Bottle- and can holder

The side of the bottle and can holder is moveable to enable a more flexible placement of cans and bottles in front of the grid. To allow the holder to be moved easier, when moving sideways, press the shelf backwards.

During chilling of cans or bottles the article should be centrally placed in front of the grid to obtain the best chilling effect.


The bottle support can be pulled out when chilling larger bottles.

For a description of this functions start and stop, see under heading Quick Chill.

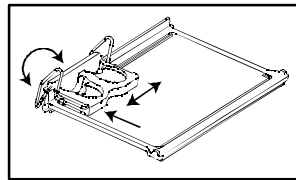

Quick chill shelf:


The lower Quick chill shelf can be placed in one of the upper grooves. To maintain the best performance the shelf should be placed in the second groove from the top.

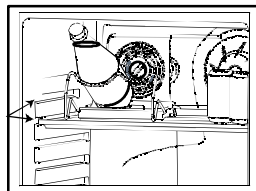

Dismantling of the bottle- and can holder.

Take out the Quick Chill shelf with holder from the cabinet.

To loosen the holder from the shelf, bend the hooks/brackets that surround the backside of the shelf.

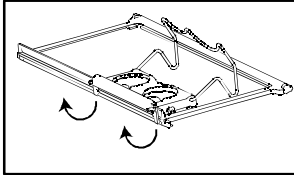

HINT and TIPS

Saving energy

- Pay careful attention to where the cabinet is placed. See the section "Installation". When installed correctly, the cabinet will consume less energy.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to often switch on unnecessarily.
- Ensure there are no obstructions preventing the door from closing properly.
- Thaw frozen food in the fridge. This will ensure safer defrosting of foods and reduce the work of the refrigeration unit
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.
- Always leave warm food to cool down to room temperature before placing in the fridge.

- Make sure the door gasket is complete and always clean.

Food Storage

- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larder compartment.
- Avoid buying frozen food if you can not store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best. Remove suspect food from you refrigerator and clean, refer to cleaning and maintenance.

Protect the environment


- Hand over the cabinet packaging and discarded fridges and freezers to a recycling station. Contact your local council or Environmental Health office for more information.
- Keep foodstuff in re-usable containers. Cut down on disposable material as much as possible.
- When cleaning the cabinet, use a mild washing-up detergent.
- Follow the advice in the section "Saving energy"
- The door gasket and coolant used in this cabinet will not harm the ozone layer.
- All parts in the packaging can be recycled.
- The cabinet has been designed for easy dismantling and subsequent recycling.

MAINTENANCE and CLEANING


Removing the ventilation grille

The ventilation grille can be removed, e.g. to wash the grille.

Make sure the door is open when removing the ventilation grille. Unsnap the upper edge of the grille by pulling outward/downward. Then pull the grille straight out to completely remove it.

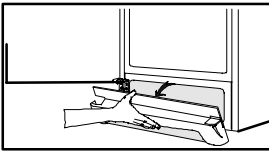

grille (see the section "Removing the ventilation grille") and vacuum-clean under the cabinet. Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

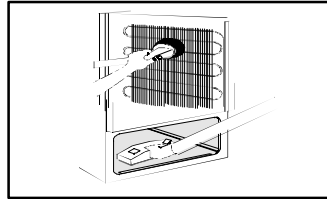

Cleaning


Clean the cabinet at regular intervals.

Internal Cleaning

Disconnect the appliance from electricity supply.

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0,5 litre water) Rinse and dry thoroughly.

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

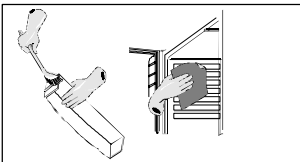

External Cleaning

Use water/neutral soap emulsion for cleaning the surface of stainless steel, anti-finger-print coated. Do NOT use abrasive paste.

Wash the outer cabinet with warm soapy water. Remove the ventilation



When moving the cabinet, lift it by the front edge to avoid scratching the floor.

Servicing and cleaning the water dispenser.

Never use cleaning agents with a grinding or aggressive effect.

When necessary, clean the surfaces of the dispenser and the water container that are accessible from the outside, using only a soft cloth and warm water.

The dispenser drip bowl can be cleaned with a tepid solution of washing up liquid.

If the system is not be used for a long period turn off the water connection to the refrigerator. A filter that has been in service shall not be exposed to temperatures below 0 °C as cracking of the filter body may occur due to freezing expansion.

If the filter still is to be preserved for later reuse, suitable storage temperature will be +5 °C.

When the refrigerator is to be used again, rinse the system through thoroughly by draining off at least three litres (5 pints) of water.

If necessary, all systems containing water must be sanitized by ordering the necessary sanitizing kit through Electrolux Service Force Centre (tel: +44 8705 929 929) or through our website www.electrolux.co.uk.

Service during operation

The water filter is replaced as follows:

Place a piece of kitchen tissue or a dishcloth in the space under the filter. Remove the filter by turning it clockwise. A small amount of water will run out. Dry off and fit the new filter.

See the section "When starting the water system for the first time".

The water connection does not need to be switched off when changing the filter.

Replacement filters can be ordered from Electrolux Service Force Centre. See the section "Service and replacement parts".

The gas cylinder is replaced as follows: remove the gas cylinder and transfer the adapter to the new cylinder.

The replacement gas cylinder is obtained through your local dealer.


To change the lamp

The light is switched on automatically when the door is opened. Before replacing the light bulb, disconnect the power plug from the outlet.

Disassemble the lamp by using a screwdriver in the recess on the lamp insert. To prise it out of its location. Assemble a new lamp by guiding it

into a centred position and press until it snaps into place.

Use a halogen bulb of the same type, maximum rating of 20 W.


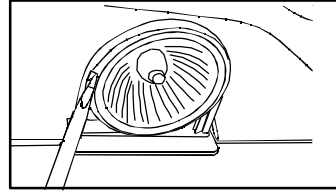


Change of carbon filter

To maintain the best performance the carbon filter should be changed once a year with normal usage.

New carbon filters can be purchased from your local dealer. The filter is placed behind the grill and can be reached by opening the cover. The cover can be opened by simultaneously pressing the lever on the right of the grill (1) and turning the cover outward (2). The carbon filter is then pulled out of its slot (3).

The new carbon filter is placed in the existing slot - The filter should be handled carefully so fragments do not loosen from the surface.

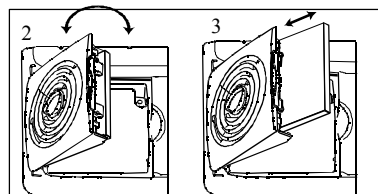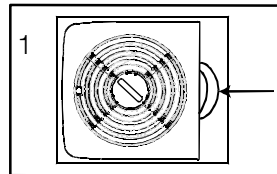

Defrosting the fridge

The fridge is defrosted automatically every time the compressor stops. Frost formation can be prevented by:

- not putting warm foodstuff inside the cabinet.
- avoiding frequently opening the door or keeping it open too long.

When the appliance is not in use

Disconnect the appliance from electricity supply.

Empty all foods and clean the appliance, leaving the doors ajar to prevent unpleasant smells.

If the cabinet is to be kept on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure.

SOMETHING NOT WORKING

Before contacting your local Service Force Centre check the following point:

Problem	Possible cause / Remedy
"□" is displayed in the temperature display.	An error has occurred in measuring the temperature. Call your service representative. (The cooling system will continue to keep food products cold, but temperature adjustment will not be possible.)
It is too cold inside the refrigerator.	Set a warmer temperature.
It is too warm inside the refrigerator.	Set a lower temperature. Put food products in the right place inside the refrigerator. See the chapter "Temperature inside the refrigerator". Distribute the food products to allow cold air to circulate around them. Make sure that the door is completely closed and that the insulating strip is complete and clean.
Water comes out on the floor.	Place the drain hose at the back of the cabinet above the drain bowl. See the chapter "Before using the cabinet the first time".
The compressor operates continuously.	Set a warmer temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean.

<p>Sound level in cabinet is too high.</p>	<p>The refrigerating system will always produce some sounds. A pulsing sound is heard when coolant is pumped inside the cooling pipes. A ticking sound from the thermostat can be heard when the compressor switches on and off. The sound level varies depending on the operation of the cabinet.</p> <p>If you feel the sound level is incorrect: Make sure the pipes at the back of the cabinet do not touch each other. Carefully bend them if they do.</p> <p>If the cushion spacers (between the cabinet wall and pipes) come loose, put them back in place again.</p> <p>Carefully follow the instructions in the chapter "Installing the cabinet".</p>
<p>The cabinet does not operate at all. Cooling or interior light does not operate. No indicator lamps light.</p>	<p>Power does not reach the cabinet. (Try connecting another electrical device to the power outlet.)</p> <p>The cabinet is not switched on.</p> <p>The fuse has blown.</p> <p>The power plug is not properly connected.</p>
<p>Not enough carbon dioxide in the water</p>	<p>Incoming water pressure too low.</p> <p>Drain off a large amount of carbonated water (about 1 litre)</p> <p>The carbon dioxide is running out. Replace the gas cylinder.</p> <p>Storage temperature too high. Lower the temperature in the refrigerator.</p>
<p>Too much carbon dioxide in the water</p>	<p>Dilute with ordinary water. (See the section "The water dispenser functions")</p>
<p>No carbon dioxide.</p>	<p>The gas cylinder is empty. Replace the gas cylinder.</p> <p>Drain off a large amount of carbonated water (about 1 litre)</p> <p>Incoming water pressure too low.</p>
<p>Water flow very low</p>	<p>Remove and clean the strainer in the connecting valve.</p> <p>Sediment in the water. Replace the filter or install a pre-filter.</p>

Only gas comes out when opening	Incoming water pressure too high. Install a pressure-limiting device. Capacity temporarily exceeded. Wait for ten minutes.
The water dispenser lamp and the yellow indicator lamp flashes	Leakage at the water connection. Remedy the leakage and empty the box by pulling out the red plug. See the illustration in "Connecting the water hose".
Indicator lamp for the water filter flashes.	The filter has been totally utilised. Replace the filter.
The indicator lamp stays on and shows yellow	80 % of the filter capacity expended. Buy a new filter.
Delivery is interrupted after a short time	The maximum time of two minutes is attained. Continue with delivery.

If after above checks there is still a fault call your local Service Force Centre. In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.

TECNICAL SPICIFICATION

Model	ERES31800W/ERES31800X
Net capacity Refrigerator l	311
Energy consumption kWh/y	173
Dimension mm	
Height	1800
Width	595
Depth	650

Permissible water pressure (to ensure reliable function).

The total flow in the system can vary, depending on local water conditions and/or water pressure.

Lowest permissible water pressure. 2,5 bar (250kPa)	Consult your installer if water pressure is less than 2,5 bar.
Highest permissible water pressure. 5 bar (500kPa)	If water pressure exceeds 5 bar, than a reduction valve must be fitted (available from your specialist shop).



Do not connect the refrigerator in spaces where ambient temperature can decrease to below freezing.

The refrigerator may only be connected to drinking water supplies.

The refrigerator may only be connected to cold water supplies.

INSTALLATION

Unpacking

Unpack the cabinet and check that it is in good condition and free of any transport damage. Notify the dealer immediately of any damage. Hand the packaging over for recycling. For more information, contact your local council or the dealer.



Do not allow children to play with the packaging. The plastic film can cause suffocation.



Remove the transport supports

Remove the tape and the transport supports from

- the door sides
- inside the door hinges
- the shelves

Remove the transport support on the glass shelf by pushing the support forward along the edge of the shelf until it stops. Take hold of the rear edge of the glass shelf and pull the shelf and transport support forward until the shelf tilts and the transport support can be removed. Some models are fitted with a silencing pad


under the cabinet. Do not remove this pad.

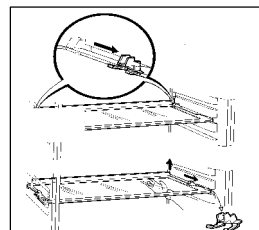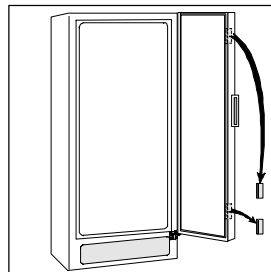

Cleaning


Wash the inside of the cabinet using lukewarm water, a mild washing-up detergent and a soft cloth.

Connecting the water hose.

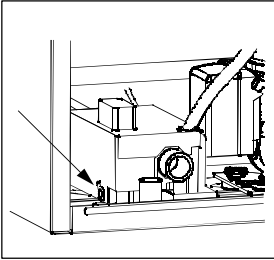

The water coupling is connected to a water tap with an external 3/4 inch thread.


This work is to be carried out by a skilled plumbing installation technician. The refrigerator is to be connected with a shut-off cock. There are different type-approved taps and tap assemblies on the market. The water hose must not be cracked, squeezed or be in tight bends.

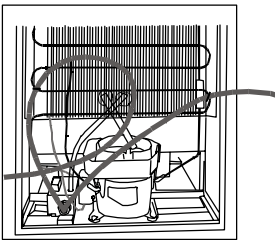

If you require a longer water hose than that supplied, then a VDE-approved 150 38 85-02/0 supply hose should be used.

Before the refrigerator is taken into use in its final location, ensure that the water connection has been correctly carried out, that there is no leakage at the connection to the refrigerator water valve or to the water tap, and that the

four spacers are properly in position, see the illustration.

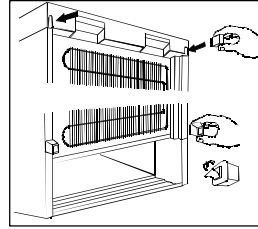



We recommend that the refrigerator is placed on a "run-off" mat intended for refrigerators and freezers, which makes it easier to detect possible leakage.

Installation of carbon filter

On delivery the carbon filter is placed in a plastic bag to secure the length of the carbon filter life. The filter should be placed behind the grill before the cabinet is turned on.

The cover can be opened by simultaneously pressing the lever on the right of the grill (1) and turning the cover outward (2). The carbon filter is then mounted in the slot found in the back of the cover.

The filter should be handled carefully so fragments do not loosen from the surface.

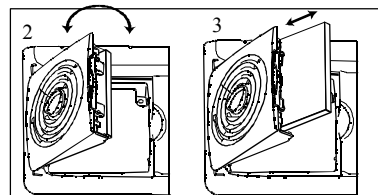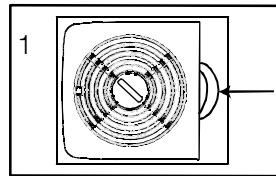


Electrical cord

Do not remove the power cord by pulling on its lead, particularly when the product is being pulled out of its niche.

- Damage to the cord may cause a short-circuit, fire and/or electric shock.
- In the event of damage to the appliance's main cable, only an authorised service company recommended by the manufacturer or a similarly qualified person may adjust it in order to avoid shock hazard for the user.

Installing the cabinet

When two appliances are placed beside each other, the spacers enclosed in the plastic wrapping should be glued between the appliances. As shown in the illustration.

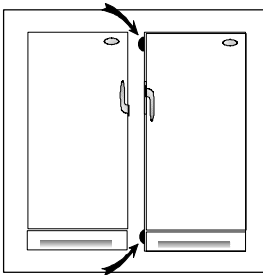

Make sure that the power plug is not squashed or damaged by the back of the product.

- A damaged power plug may overheat and cause a fire.

Do not place heavy articles or the product itself on the power cord.


- there is a risk of a short circuit and fire.

If the power plug socket is loose, do not insert the power plug.

- there is a risk of electric shock or fire.

To obtain the best performance from the cabinet, ensure:


- the cabinet is placed in a dry, cool place and is not exposed to direct sunlight.
- the cabinet is not placed close to a source of heat, e.g. a cooker or dishwasher.
- the cabinet is level. The cabinet should not lean against any wall. If necessary adjust the feet using the adjustment spanner supplied.

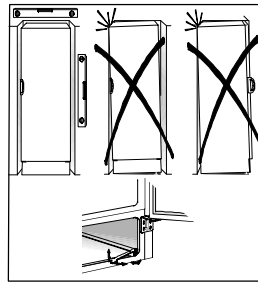

- there is good air circulation around the cabinet and that the air channels below and behind the cabinet are not blocked. The ventilation space above the cabinet must be at least 4 cm.

The ventilation space can either be

- a) directly above the cabinet, or
 - b) behind and above the top cupboard.
- In this case, the space behind the cupboard must be at least 50 mm deep.

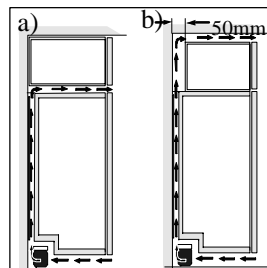

Cabinet is placed at a location where the ambient temperature corresponds to the climate classification*, for which the appliance is designed.

* See on the rating plate on the inside of the appliance.

The following table shows which ambient temperature is correct for each climate classification.

Climate classification	for an ambient temperature of
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+18°C to +38°C
T	+18°C to +43°C

If the cabinet is placed in a corner and the side with the hinges facing the wall, the distance between the wall and the cabinet must be at least 230 mm to allow the door to open enough so that the shelves can be removed. Check that the drain hose at the rear of the cabinet discharges into the drip tray.

The power plug must be accessible after installation of the cabinet.


When the water system is started for the first time.

The following should be carried out when the refrigerator is correctly connected to the water supply in the building:

Open the tap on the water connection and start up the refrigerator. The water system main valve opens and the system starts to fill up. Wait for five minutes.

Unpack the filter provided and connect it as follows:


- Remove the filter protective cap and insert the filter connector into the filter seat and turn as shown in the illustration (2) until the filter engages and the projection on the filter cartridge is opposite the mark on the plastic cover. See also the illustration and the instructions on the inside of the service hatch.

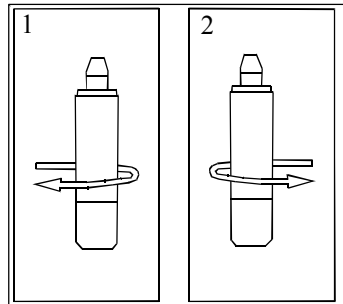


- Unlock the water dispenser. See the section "The water dispenser functions" Select carbonated water and drain off about 1.5 litres (2.5 pints) of water. There may be some air to start with.

Connect the gas cylinder provided as follows:

- Take out the gas cylinder from plastic bag and screw the gas cylinder into the adapter (3) for this purpose, which is located in the cabinet, doing this by hand without tools.

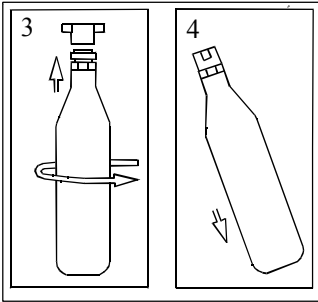

- Place the gas cylinder with adapter in the valve and ensure that the valve bracket hooks are under the counterhold on the adapter (5). Then turn up the bracket lever (6) in one continuous movement. See the illustration and the instructions on the inside of the service hatch.

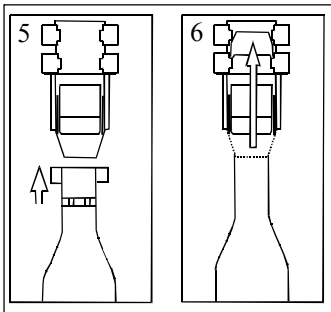

- Unlock the water dispenser and drain off a further 1.5 litres (2.5 pints) of water or until there are signs that the carbonated water in the water dispenser is starting to run.
 - The system is now ready for use. In order to obtain the best possible performance from the refrigerator, wait until the set temperature is reached. A low temperature provides more carbon dioxide, a high temperature less carbon dioxide.

Re-hanging the door.

It is not possible to re-hang the door.

The water supply goes through the hinge to the water dispenser. Contact your dealer for more information.

Electrical connection



This appliance must be earthed. If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted. Remove the fuse from the cut off plug. The cut off plug should then be disposed of to prevent the hazard of socket in another part of your home. The wires in the mains lead are coloured in accordance with the following code:

- Green and yellow -Earth
- Blue -Neutral
- Brown -Live

If you fit your own plug, the colours of the Wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:

Connect the Green and Yellow (earth) wire to the terminal in the plug which is marked with the letter "E" or the earth

symbol  or coloured green and yellow.

Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter "N" or coloured black

Connect the brown (live) wire to the terminal in the plug which is marked with the letter "L" or coloured red.

The plug moulded onto the lead incorporates a fuse. For replacement, use a 13amp BSI362 fuse. Only ASTA or BSI approved fuses should be used. The plug must not be used if the fuse cover/carrier is lost. The cover/carrier is indicated by the coloured insert at the base of the plug.

A replacement cover/carrier must be obtained from your local Service Force Centre.

Guarantee/Customer Service

Standard guarantee conditions

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- Electrolux Service Force Centre must undertake all service work under this guarantee
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Exclusions

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.

- Products of Electrolux manufacturer that are not marketed by Electrolux

Service and Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning

0870 5 929 929

Your telephone call will be automatically routed to the Service Force Centre covering your postcode area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading "Something not working" When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and postcode.
2. Your telephone number.
3. Clear concise details of the fault.
4. The model and Serial number of the appliance (found on the rating plate).
5. The purchase date.

Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls.

Customer Care

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.electrolux.co.uk

Customer Care Department
Electrolux Major Appliances
Addington Way
Luton

Bedfordshire, LU4 9QQ

Tel: 08705 950 950 (*)

(*) Calls may be recorded for training purposes

European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications:-

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com

		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/ Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	

		
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4 Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 2780609	Verkių 29, LT-09108 Vilnius
Luxembourg	+35 2 42 43 13 01	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warsaw
Portugal	+351 21 440 39 00	Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz/Suisse/ Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Electrolux Ljubljana, d.o.o. Tržaška 132, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberínho 1, 821 03 Bratislava
Suomi	+35 8 26 22 33 00	Konepajaranta 4, 28100 Pori
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabaşı caddesi no : 35 Taksim Istanbul
Россия	+7 495 9377837	129090 Москва, Олимпийский проспект, 16, БЦ „Олимпик“

www.electrolux.com

www.electrolux.uk