

7KT333

User's Manual Version 1.0

The information presented in this publication has been made carefully for reliability; however, no responsibility is assumed for inaccuracies. Specifications are subject to change without notice.

IBM, PC/AT, and PC/XT are trademarks of International Business Machines Corporation.

Socket462 is a trademark of AMD Corporation

AWARD is a registered trademark of Phoenix Software Inc.

MS-DOS and WINDOWS NT are registered trademarks of Microsoft Corporation.

Trademarks and/or registered trademarks are the properties of their respective owners.

Table of Contents

Introduction

1. Motherboard Description

1.1 Introduction	1-1
1.2 Package Contents	1-1
1.3 Features	1-2
1.4 7KT333 Motherboard Layout	1-5
1.5 CPU Installation	1-7
1.6 DDR SDRAM Installation	1-8
1.7 Connectors & Jumper Setting	
1.7.1 Back Panel Connectors	
1.7.1.1 PS/2 Mouse/Keyboard CONN.	1-9
1.7.1.2 USB Connector: USB1	1-9
1.7.1.3 Serial Interface ports: COM1/2	1-10
1.7.1.4 Parallel Interface port	1-10
1.7.1.5 Joystick / Midi Connector	1-10
1.7.1.6 Audio Port Connector	1-10
1.7.2 ATX 20-pin Power Connector: ATX	1-11
1.7.3 Floppy Disk Connector: FDD1	1-12
1.7.4 Hard Disk Connectors: IDE1/IDE2	1-12
1.7.5 CPU Fan Connectors: FAN1/2/3/4	1-12
1.7.6 CD-Audio-IN Connectors: CDIN1/CDIN2	1-13
1.7.7 Wake-on-LAN Connector: WOL	1-14
1.7.8 Wake-on-Modem Connector: WOM	1-14
1.7.9 Front USB Port Connector: USB2	1-15
1.7.10 Front Panel Connector: PANEL	1-15
1.7.11 CMOS Function Setting: JBAT1	1-17
1.7.12 CPU Clock Frequency Setting: JP3	1-18
1.7.13 Keyboard wake up Setting: J3	1-19
1.7.14 Watch Dog: WTD1	1-19

Table of Contents

1.7.15 Smart Panel Function (optional)	1-20
1.7.15.1 Port 80 Debug Function(SP-J6)	1-21
1.7.15.2 Second BIOS Connector(SP-J2)	1-21
1.7.15.3 AUX LINE Connector(SP-J5)	1-22
1.7.15.4 Front COM2 Header Conn.(SP-J7)	1-22
1.7.15.5 Front USB3,4 Header Conn.(SP-J8)	1-22

2. BIOS Setup

2.1 Main Menu	2-4
2.2 Standard CMOS Features	2-7
2.3 Advanced BIOS Features	2-10
2.4 Advanced Chipset Features	2-14
2.5 Integrated Peripherals	2-19
2.6 Power Management Setup	2-26
2.7 PnP/PCI Configurations	2-31
2.8 PC Health Status	2-34
2.9 Frequency/Voltage Control	2-36
2.10 Load Fail-Safe Defaults	2-37
2.11 Load Optimized Defaults	2-38
2.12 Set Supervisor/user Password	2-39
2.13 Save & Exit Setup	2-41
2.14 Exit Without Saving	2-42

3. Driver Installation

3.1 Main Menu	3-1
3.2 Installing VIA 4 in 1 Driver	3-2
3.3 Installing Audio Driver	3-3

a. Appendix

Chapter 1

1.1 Introduction

The 7KT333 motherboard is designed for using AMD Athlon and Duron Front Side Bus Frequency 200/266MHz CPU, which utilize the Socket-462 design and the memory size expandable to 3.0GB.

This motherboard use the latest VIA KT333 chipset, applying 266MHz (Double Data Rate) Front Side Bus frequency and 266MHz memory interface delivers a clear upgrade path to the future generation of 266MHz processors, PC-1600/PC-2100/PC-2700 DDR DRAM. The 7KT333 motherboard offers ULTRA ATA 100/133 to provide speedier HDD throughout that boosts overall system performance.

It is ideal for multi-tasking and fully supporting MS-DOS, Windows, Windows NT , Windows ME, Windows 2000, Novell, OS/2, Windows95/98, Windows 98SE, Windows XP, UNIX, Liunx , SCO UNIX etc. This manual also explains how to install the mainboard for operation, and how to setup your CMOS configuration with the BIOS setup program.

1.2 Package Contents

- HDD UDMA66/100 Cable.
- FDD Cable.
- Flash Memory written for BIOS update.
- USB2 Cable **(Optional)**.
- Fully Setup CD Driver built in utility(Ghost, Antivirus, Adobe Acrobat).
- Manual.

1.3 Features

CPU Processor

- Support AMD Athlon 700MHz~Athlon XP 2000+ processor with 200/266MHz FSB.
- Support AMD Duron 600MHz~1.1GHz processor with 200MHz FSB.
- Reserves support for future AMD Athlon/Duron processors.

Chipset

- VIA KT333 North Bridge.
- VIA VT8233A South Bridge.

PCI/AGP Speed

- Supports 33MHz PCI Bus speed.
- Supports AGP 66MHz for 4X device.

DDR SDRAM Memory

- Supports 64/128/256/512....MB DDR module socket.
- Supports 200/266/333MHz DDR SDRAM(2.5V).
- Supports a maximum memory size of 3GB with DDR SDRAM.

Note:

When using DDR 333MHz memory, please make sure the CPU Front Side Bus frequency is 266MHz.

Bus Slots

- Provide one AGP slot.
- Six 32-bit PCI bus.

AC 97 Digital Audio

- AC 97 2.1 interface.
- Sound Blaster and Sound Blaster Pro emulation.

1.3 Features

Universal Serial Bus

- Supports two back Universal Serial Bus(USB)Ports and two front Universal serial Bus(USB)Ports.

Flash Memory

- Support 2MB flash memory.
- Support ESCD Function.

BIOS

- The mainboard BIOS provides Plug & Play BIOS which detects the peripheral devices and expansion cards of the board automatically.
- BIOS support CD-ROM, SCSI, LAN BOOT, Temperature sensor, LAN, Modem, Alarm Bus CLK setup with BIOS.
- The mainboard provides a Desktop Management Interface (DMI) function which records your mainboard specifications.

IDE Built-in On Board

- Supports four IDE devices.
- Supports PIO Mode 5, Master Mode, high performance hard disk drives.
- Support Ultra DMA 33/66/100/133 Bus Master Mode.
- Supports IDE interface with CD-ROM.
- Supports high capacity hard disk drives.
- Support LBA mode.

WOL/WOM (Wake On LAN / Wake On Modem)

- Supports system power on from LAN/ Modem ring up.


Smart Panel

- Supports BIOS Port 80H POST Code output to debug LED.

1.4 7KT333 Motherboard Layout



1.4 7KT333 Layout

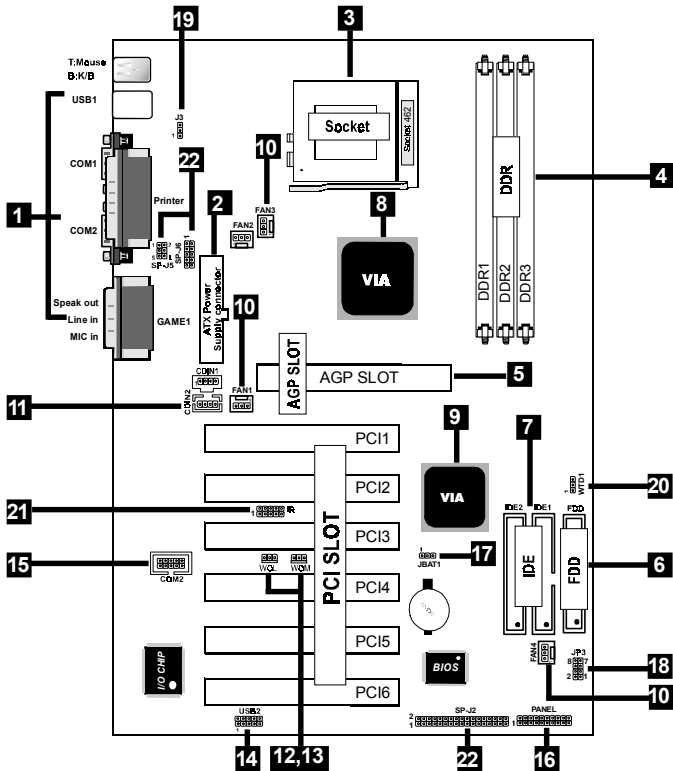

1. Back Panel I/O Connectors (Mouse, Keyboard, USB1, , COM1, COM2, Printer, MIC in, Line in, Speaker out, Game stick)
2. ATX Power Connector (ATX)
3. CPU Processor (Socket 370)
4. DDR SDRAM Sockets (DDR1/DDR2/DDR3)


- 5. AGP Slot**
- 6. Floppy Connector**
- 7. IDE Connectors (IDE1/IDE2)**
- 8. North Bridge (VIA KT333)**
- 9. South Bridge (VIA VT8233A)**
- 10. Fan Connectors (Fan1/2/3/4)**
- 11. CD Audio-In Connectors (CDIN1/CDIN2)**
- 12. Wake-On-LAN Connector**
- 13. Wake-On-Modem Connector**
- 14. Front USB2 Port Connector**
- 15. Front COM2 Port Connector**
- 16. Front Panel Connector (PANEL)**
- 17. CMOS Function Selection (JBAT1)**
- 18. CPU Clock Freq. Setting (JP3)**
- 19. Keyboard Wake-up Setting (J3)**
- 20. Watch Dog (WTD1)**
- 21. IR Connector**
- 22. Smart Panel Function (SP-J2/SP-5/SP-J6)(optional)**

1.5 CPU Installation

The motherboard operates with Socket 462 for AMD Athlon™ and Duron™ processor. The CPU should always has a Heat Sink and cooling fan attached to prevent overheating.

CPU Installation Procedures: Socket 462

1. Pull the lever sideways away from the socket then raise the lever to a 90-degree angle.
 2. Locate Pin 1 in the socket and look for the white dot or cut edge in the CPU. Match Pin 1 with the white dot or cut edge then insert the CPU.
 3. Press the lever down to complete installation.
- 4. Make sure the spec of the heat sink is good enough.**
- 5. Please lock the fan on CPU very carefully, or you will damage the resistor array even circuit line on the motherboard.**

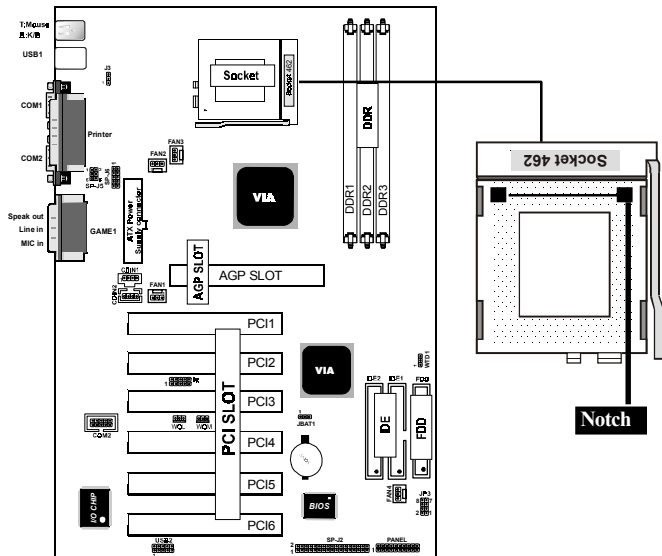

1.6 DDR SDRAM Installation


The motherboard supports a maximized 3GB memory. It provides three 184-pin unbuffered DDR sockets. It supports 64MB to 1GB DDR memory module.

DDR SDRAM Access Time: 2.5V Unbuffered PC1600/PC2100/PC2700 Type required.

DDR SDRAM Type: 64MB, 128MB, 256MB, 512MB, 1GB DDR Module. (184 pin)

DDR SDRAM Installation Procedures:

1. The DDR socket has a “Plastic Safety Tab” and the DDR memory module has an asymmetrical notch”, so the DDR memory module can only fit into the slot in one direction.
2. Push the tabs out. Insert the DDR memory modules into the socket at a 90-degree angle then push down vertically to fit onto place.
3. The Mounting Holes and plastic tabs should fit over the edge and hold the DDR memory modules in place.

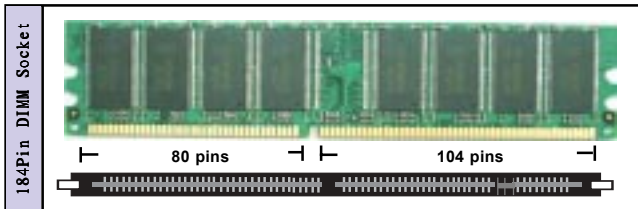


Note:

1. When you plug or unplug DDR module, you must check your power supply is off.
2. When using DDR 333MHz memory, please make sure the CPU Front Side Bus frequency is 266MHz.

1.7 Connectors & Jumpers Setting

1.7.1 Back Panel I/O Connectors

The motherboard provides the following back panel connectors:

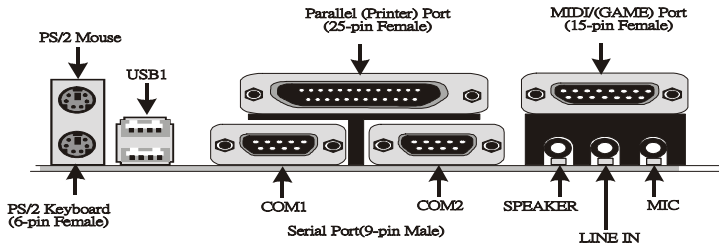


1.7.1.1 PS/2 Mouse / Keyboard CONN.

The motherboard provides a standard PS/2 mouse / Keyboard mini DIN connector for attaching a PS/2 mouse. You can plug a PS/2 mouse / Keyboard directly into this connector.

1.7.1.2 USB Connector: USB1

The motherboard provides a OHCI(Open Host Controller Interface)Universal Serial Bus Roots for attaching USB devices such as a keyboard, mouse and other USB devices. You can plug the USB devices directly into this connector.




Pin	Signal
1	+5V_SB
2	USBP0-(USBP1-)
3	USBP0+(USBP1+)
4	GND

1.7.1.3 The Serial Interfaces: COM1 / COM2

The serial interface port is sometimes referred to as an RS-232 port or an asynchronous communication port. Mice, printers, modems and other peripheral devices can be connected to a serial port. The serial port can also be used to connect your computer system. If you like to transfer the contents of your hard disk to another system, it can be accomplished by serial port.

COM1/COM2



1.7.1.4 Parallel Interface Port

Unlike serial ports, parallel interface ports have been standardized and should not present any difficulty interfacing peripherals to your system. Sometimes called a Centronics port, the parallel port is almost exclusively used with printers. The parallel port on your system has a 25-pin, DB 25 connector.

1.7.1.5 Joystick / Midi Connector


You can connect a joystick or game pad to this connector.

1.7.1.6 Audio Port Connectors

Speaker out is a connector for Speakers or Headphones. Line in is used for external CD player, Tape player, or other audio devices. Mic is a connector for the microphones.

1.7.2 ATX Power Connector: ATX

This connector supports the power button on-board. Using the ATX power supply, functions such as Modem Ring Wake-Up and Soft Power Off are supported on this motherboard. This power connector supports instant power-on functionality, which means that the system will boot up instantly when the power connector is inserted on the board.



Pin ATX	Signal	Pin ATX	Signal
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PS-ON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	PW-OK	18	-5V
9	5V_SB	19	5V
10	12V	20	5V

Note:

Make sure that the ATX PIII power supply can take at least 1Amp load on the 5Volt standby lead (5VSB).

Important:

Before you switch on your power supply, please make sure:

1. Memory Module installing is OK.
2. Power supply setting is OK.
3. AGP card 4X is OK.

1.7.3 Floppy Disk Connector: FDC


This connector supports the provided floppy drive ribbon cable. After connecting the single end to the board, connect those two plugs on the other end to the floppy drives.

1.7.4 Hard Disk Connectors: IDE1/IDE2

These connectors support the provided IDE hard disk ribbon cable. After connecting the single end to the board, connect those two plugs at the other end to your hard disk.

If you install two hard disks, you must configure the second drive to Slave mode by setting its jumper settings. BIOS now supports SCSI device or IDE CD-ROM boot up (see "HDD Sequence SCSI/IDE First" & "Boot Sequence" in the BIOS Features Setup of the BIOS SOFTWARE) (Pin 20 is removed to prevent inserting in the wrong orientation when using ribbon cables with pin 20 plugged).

1.7.5 Fan Connectors: Fan1/2/3/4

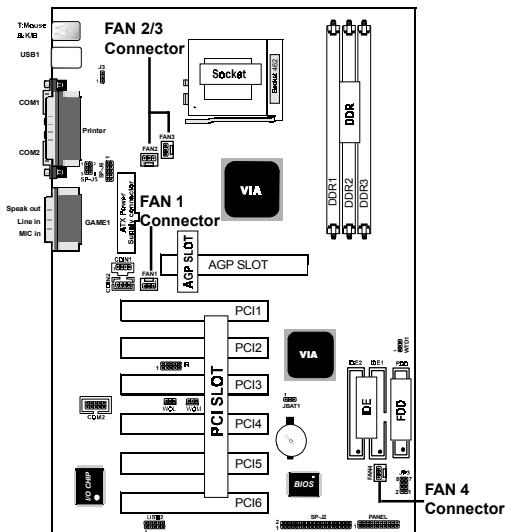


Pin Fan2/3	Definition
0 1	Ground
0 2	+12VDC
0 3	Signal

Pin Fan1/4	Definition
0 1	Ground
0 2	+12VDC
0 3	NA


These connectors support cooling fans of 1Amp or less. Orientate the fans so that the heatsink fins allow airflow to go across the onboard heat sink(s) instead of the expansion slots. Depending on the fan manufacturer, the wiring and plug may be different. The red wire should be positive, while the black should be ground. Connect the fan's plug to the board taking into consideration the polarity of the this connector.

1.7.6 CD Audio-In Connectors: CD-IN1/CDIN2


CDIN1 and CDIN2 are the connectors for CD-Audio Input signal. Please connect it to CD-ROM CD-Audio output connector.

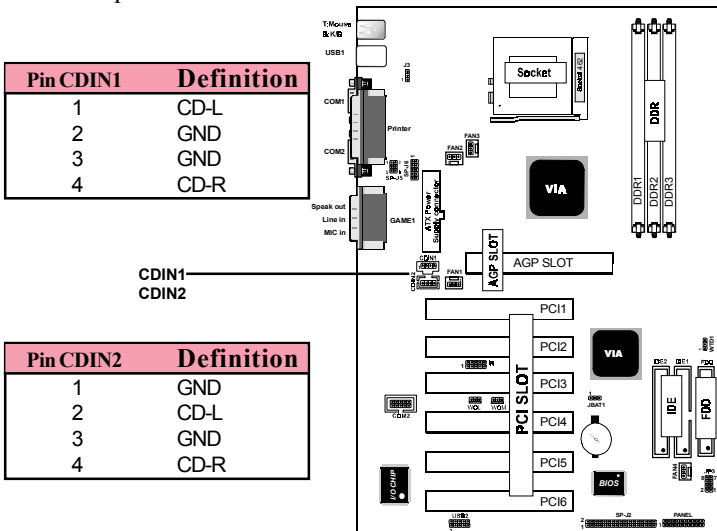


1.7.7 Wake-On-LAN Connector: WOL

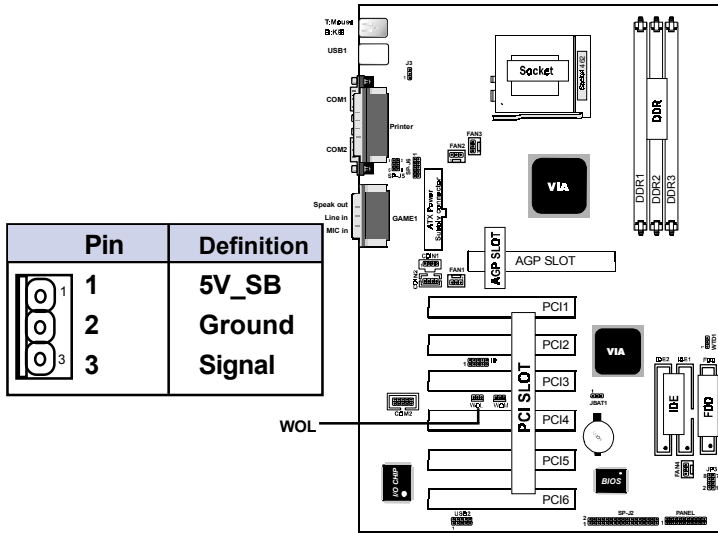


1.7.8 Wake-On-Modem Connector: WOM

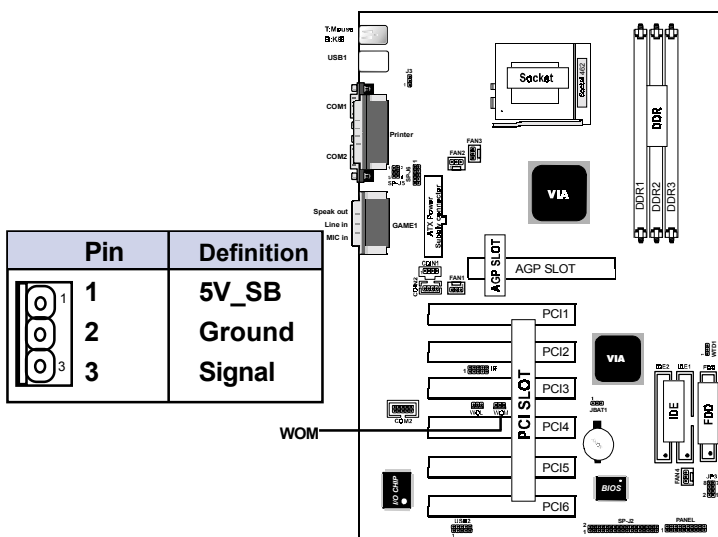

1.7.9 Front USB Port Connector: USB2

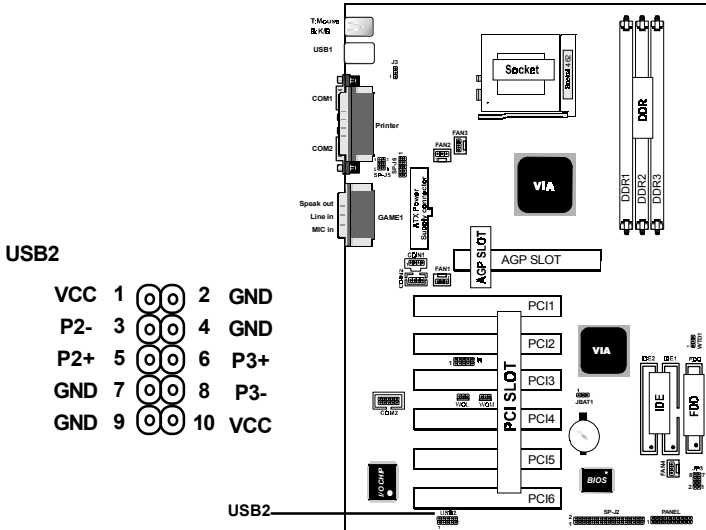

1.7.10 Front Panel Connector: PANEL

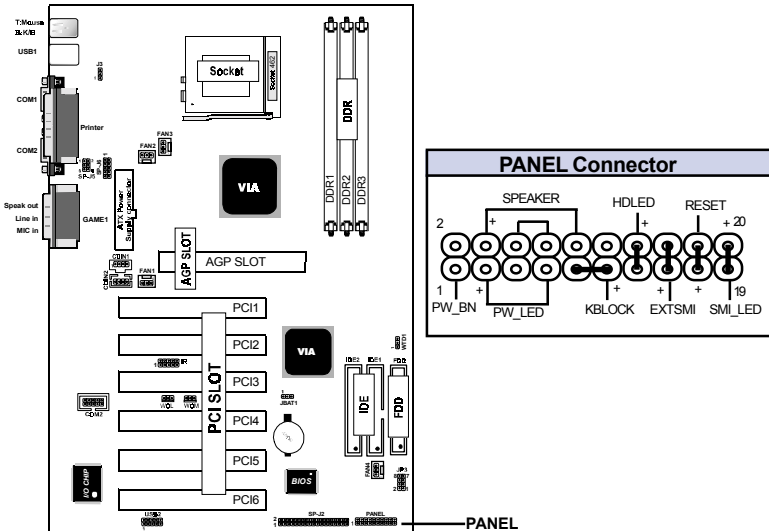

ATX Power Switch (PW_BN)

The system power is controlled by a momentary switch connected to this lead. Pushing the button once will switch the system ON.

Power LED Lead (PW_LED)

The system power LED lights when the system power is on.

Speaker Connector (SPEAKER)

The speaker (onboard or offboard) provides error beep code information during the Power Self-Test when the computer cannot use the video interface. The speaker is not connected to the audio subsystem and does not receive output from the audio subsystem.

Hard Drive LED Connector (HDLED)

This connector supplies power to the cabinet IDE activity LED. Read and write activity by devices connected to the Primary or Secondary IDE connectors will cause the LED to light up.

Keyboard Lock (KBLOCK)

The header is for setting keyboard locked.

Reset Switch Lead (RESET)


The connector can be connected to a momentary SPST type switch that is normally open. When the switch is closed, the motherboard resets and runs the POST.

SMI Suspend Switch Lead (SMI_LED) (Disabled)

This allows the user to manually place the system into a suspend mode of Green mode. System activity will be instantly decreased to save electricity and expand the life of certain components when the system is not in use. This 2-pin connector (see the figure) connects to the case-mounted suspend switch. If you do not have a switch for the connector, you may use the "Turbo Switch" instead since it does not have a function. If you want to use this connector, the "Suspend Switch" in the Power Management Setup of the BIOS SOFTWARE section should be on the default setting of Enable.

1.7.11 CMOS Function Selection: JBAT1

A battery be used to retain the mainboard configuration in CMOS RAM.

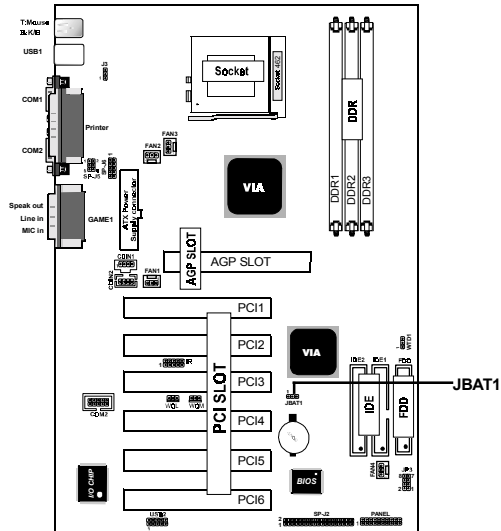

Pin JBAT1	Definition
1-2	Normal (Default)
2-3	Clear CMOS


NOTE:

(Please follow the procedure below to clear CMOS data.)

- (1) Remove the AC power line.
- (2) JBAT1(2-3) Closed.
- (3) Wait five seconds.
- (4) JBAT1(1-2) Closed.
- (5) AC Power on.
- (6) Reset your desired password or clear CMOS data.

1.7.12 CPU Clock Freq. Setting: JP3

Overclocking is operating a CPU/Processor beyond its specified frequency. JP3 jumper is used for the CPU Front Side Bus Frequencies from 100MHz to 200MHz.

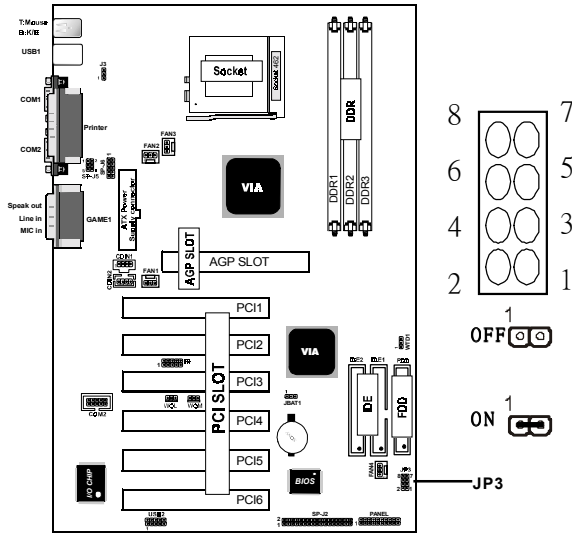


1-2	3-4	5-6	7-8	CPU(MHz)	PCI(MHz)	Default
NA	ON	NA	ON	100	33.3	*
NA	ON	NA	OFF	133	33.3	*

Note:


We don't recommend you overclocking, since it will make the CPU life short and get the risk of CPU damage.

1.7.13 Keyboard Wake up Setting: J3

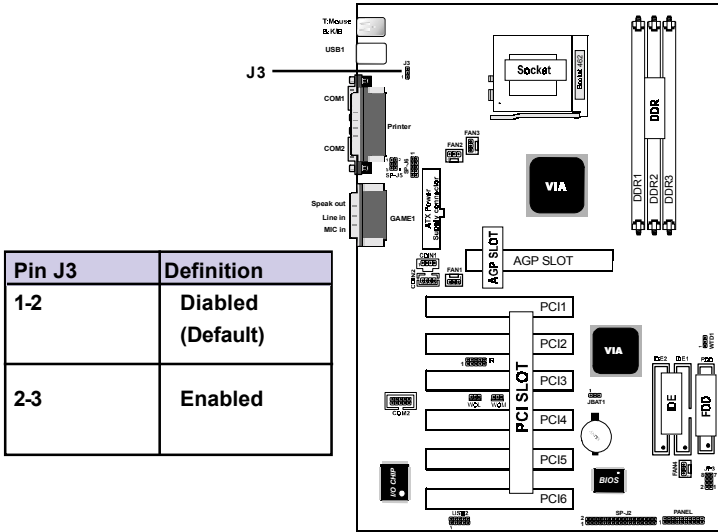

Pin J3	Definition
1-2	Disabled (Default)
2-3	Enabled

1.7.14 Watch Dog: WTD1

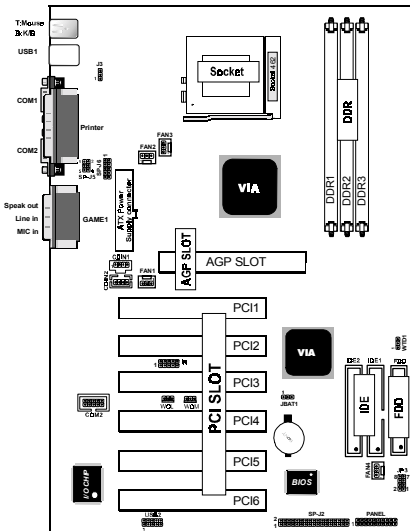


Pin WTD1	Definition
1-2	Disabled (Default)
2-3	Enabled

1.7.15 Smart Panel Function: SP-J2/SP-J6/SP-J5/SP-J7/SP-J8 (optional)

Note:

The motherboard provides the pin leads for Smart Panel II. If you want POST Error Code or Smart Panel II function, please refer to Smart Panel II (S P K T 3 3 3) manual.

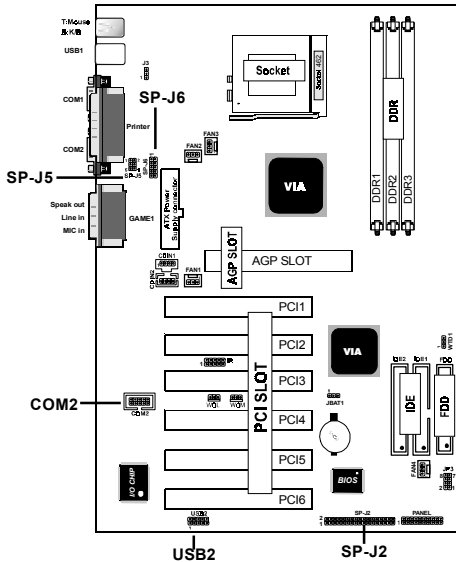

The Smart Panel provides the following panel connectors:



1.7.15.1 Port 80 Debug Function: SP-J6

For Smart Panel connector(SP-J6) to M/B
(SP-J6).

Pin SP-J6	Assignment	Pin SP-J6	Assignment
1	ERD4	2	ERD0
3	ERD5	4	ERD1
5	ERD6	6	ERD2
7	ERD7	8	ERD3
9	GND	10	NC

1.7.15.2 Second BIOS Connector: SP-J2

For Smart Panel connector(SP-J2) to M/B
(SP-J2).

Pin SP-J2	Assignment	Pin SP-J2	Assignment
1	XDD0	2	+5V
3	XDD1	4	XAA0
5	XDD2	6	XAA1
7	XDD3	8	XAA2
9	XDD4	10	XAA3
11	XDD5	12	XAA4
13	XDD6	14	XAA5
15	XDD7	16	XAA6
17	GND	18	DISABLE
19	ROMCS-	20	XAA7
21	MEMR-	22	XAA8
23	MEMW-	24	XAA9
25	SA18J	26	XAA10
27	XAA17	28	XAA11
29	XAA16	30	XAA12
31	XAA15	32	XAA13
33	+5V	34	XAA14

1.7.15.3 AUX Line Connector: SP-J5

For Smart Panel connector(SP-J5) to M/B (SP-J5).

Pin SP-J5	Assignment	Pin SP-J5	Assignment
1	LINE_OUT_L	2	LINE_OUT_R
3	LINE_IN_L	4	LINE_IN_R
5	MIC_IN_L	6	MIC_IN_R

1.7.15.4 Front COM2 Header Conn.: SP-J7

For Smart Panel connector(SP-J7) to M/B (COM2).

Pin SP-J7	Assignment	Pin SP-J7	Assignment
1	DCD	2	FX
3	TX	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI		

1.7.15.5 Front USB3,4 Header Conn.: SP-J8(USB2)

For Smart Panel connector(SP-J8) to M/B (USB2).

Pin SP-J8	Assignment	Pin SP-J8	Assignment
1	VCC	2	GND
3	P2-	4	GND
5	P2+	6	P3+
7	GND	8	P3-
9	GND	10	VCC

Chapter 2

Introduction

This chapter discusses the Award Setup program built into the ROM BIOS. The Setup program allows the user to modify the basic system configuration. This special information is then stored in battery-backed RAM so that it retains the setup information when the power is turned off.

The Award BIOS installed in your computer system's ROM (Read Only Memory) is a custom version of an industry standard BIOS. This means that it supports AMD Athlon™ and Duron™ Processor. The BIOS provides critical low-level support for standard devices such as disk drives and serial and parallel ports.

The rest of this manual is intended to guide you through the process of configuring your system using Setup.

Plug and Play Support

This AWARD BIOS supports the Plug and Play Version 1.0A specification. ESCD(Extended System Configuration Data)write is supported.

EPA Green PC Support

This AWARD BIOS supports Version 1.03 of the EPA Green PC specification.

PCI Bus Support

This AWARD BIOS also supports Version 2.1 of the Intel PCI (Peripheral Component Interconnect)local bus specification.

APM Support

This AWARD BIOS supports Version 1.1&1.2 of the Advanced Power Management(APM) specification. Power management features are implemented via the System Management Interrupt(SMI). Sleep and Suspend power management modes are supported. Power to the hard disk drives and video monitors can be managed by this AWARD BIOS.

DRAM Support

SDRAM (Synchronous DRAM) are supported.

Support CPU

This AWARD BIOS supports the AMD Athlon™ and Duron™ Processor.

Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the <PgUp> and <PgDn> keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program by using the keyboard.

Note:

(BIOS version 1.0 is for reference only. If there is a change in BIOS version, please use the actual version on the BIOS.)

Keystroke	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left(menu bar)
Right arrow	Move to the item on the right(menu bar)
Esc	Main Menu: Quit without saving changes Submenus: Exit Current page to the next higher level menu
Move Enter	Move to item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+Key	Increase the numeric value or make changes
-Key	Decrease the numeric value or make changes
Esc Key	Main menu-Quit and not save changes into CMOS Status Page Setup Menu and option Page Setup Menu-Exit Current page and return to Main Menu
F1 Key	General help on Setup navigation keys.
F5 Key	Load previous values from CMOS
F6 Key	Load the fail-safe defaults from BIOS default table
F7 Key	Load the optimized defaults
F10 Key	Save all the CMOS changes and exit

2.1 Main Menu

Once you enter AWARD BIOS CMOS Set up Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions. Use the arrow keys to select among the items and press<Enter> to accept and enter the sub-menu.

“WARNING”

The information about BIOS defaults on manual (Figure 1,2,3,4,5,6,7,8,9,10,11,12,13,14)is just for reference, please refer to the BIOS installed on the board for updated information.

© **Figure 1. Main Menu**

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	Load Fail-Safe Defaults
Advanced Chipset Features	Load Optimized Defaults
Integrated Peripherals	Set Supervisor Password
Power Management Setup	Set User Password
PNP/PCI Configurations	Save & Exit Setup
PC Health Status	Exit Without Saving
Esc : Quit F9 : Menu in BIOS ←→↑↓: Select Item	
F10 : Save & Exit Setup	
Time , Date , Hard Disk Type ...	

Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

Advanced BIOS Features

This setup page includes all the items of the BIOS special enhanced features.

Advanced Chipset Features

This setup page includes all the items of the Chipset special enhanced features.

Integrated Peripherals

This selection page includes all the items of the IDE hard drive and Programmed Input/Output features.

Power Management Setup

This setup page includes all the items of the power management features.

PnP/PCI Configurations

This setup page includes the user defined or default IRQ Setting.

PC Health Status

This page shows the hardware Monitor information of the system.

Frequency / Voltage Control

This setup page controls the CPU's clock and frequency ratio.

Load Fail-Safe Defaults

Use this menu to load the BIOS default values for the minimal/stable performance for your system operating.

Load Optimized Defaults

These settings are more likely to configure a workable computer when something is wrong. If you cannot boot the computer successfully, select the BIOS Setup options and try to diagnose the problem after the computer boots. These settings do not provide optional performance.

Set Supervisor Password

Change, set, or, disable password. It allows you to limit access to the system and Setup, or just to Setup.

Set User Password

You can specify both a User and a Supervisor password. When you select either password option, you are prompted for a 1-6 character password. Enter the password and then retype the password when prompted.

Save & Exit Setup

Save CMOS value changes to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

2.2 Standard CMOS Features

This item in the Standard CMOS Setup Menu is divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

© Figure 2. Standard CMOS Features

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

Standard CMOS Features

Date(mm:dd:yy)	Tue,Jun 6 2000	Item Help
Time (hh:mm:ss)	11:26:10	
IDE Primary Master	None	Menu Level
IDE Primary Slave		Change the day,
IDE Secondary Master		month,year
IDE Secondary Master	None	and century.
Drive A	1.44M,3.5 in	
Drive B	None	
Video	EGA/VGA	
Halt On	All,But Keyboard	
Base Memory	640K	
Extended Memory	65472K	
Total	1024K	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

Main Menu Selections

This table shows the selections that you can make on the Main Menu.

Item	Options	Description
Date	Month DD YYYY	Set the system,date. Note that the 'Day' automatically changes when you set the data.
IDE Primary Master	Options are in its sub menu.	Press<Enter> to enter the sub menu of detailed.
IDE Primary Slave	Options are in its sub menu.	Press<Enter> to enter the sub menu of detailed.
IDE Secondary Master	Options are in its sub menu.	Press<Enter> to enter the sub menu of detailed.
IDE Secondary Slave	Options are in its sub menu.	Press<Enter> to enter the sub menu of detailed.
Drive A Drive B	None 360K,5.25in 1.2M,5.25in 720K,3.5in 1.44M,3.5in 2.88M,3.5in	Select the type of floppy disk drive installed in your system.
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device.

Item	Options	Description
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/Key	Select the situation in which you want the BIOS to stop the POST process and notify.
Base Memory	N/A	Displays the amount of conventional memory detected during boot up.
Extended Memory	N/A	Displays the amount of conventional memory detected during boot up.
Total Memory	N/A	Displays the total memory available in the system.

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software IDE

Primary Master

IDE HDD Auto-Detection	Press Enter	Item Help
IDE Primary Master Access Mode	Auto	Menu Level
Capacity	13022MB	
Cylinder	25232	
Head	16	
Precomp	0	
Landing Zone	25231	
Sector	61	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

2.3 Advanced BIOS Features

© Figure 3. Advanced BIOS Features

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

Advanced BIOS Features

Virus Warning	Disabled	Item Help
CPU Internal Cache	Enabled	Menu Level
External Cache	Enabled	
CPU L2 Cache ECC Checking	Enabled	Allows you to choose the VIRUS warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempts to write data into this area, BIOS will show a warning message on screen and alarm beep
Processor Number Feature	Enabled	
Quick Power On Self Test	Enabled	
First Boot Device	Floppy	
Second Boot Device	HDD-0	
Third Boot Device	LS120	
Boot Other Device	Enabled	
Swap Floppy Drive	Disabled	
Boot Up Floppy Seek	Enabled	
Boot Up NumLock Status	On	
Gate A20 Option	Fast	
Typematic Rate Setting	Disabled	
Typematic Rate (Chars/Sec)	6	
Typematic Delay (Msec)	250	
Security Option	Setup	
OS Select For DRAM	Non-OS2	
Video BIOS Shadow	Enabled	
C8000-CBFFF	Shadow	
CC000-CFFFF	Shadow	
D0000-D3FFF	Shadow	
D4000-D7FFF	Shadow	
D8000-DBFFF	Shadow	
DC000-DFFFF	Shadow	
EPA / (H/W Monitor) Show	H/W Monitor	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

Virus Warning

This option allows you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempts to write data into this area, BIOS will show a warning message on screen and alarm beep.

The Choices: Disabled(default), Enabled.

CPU Internal Cache

These two categories speed up memory access. However, it depends on CPU/chipset design.

Enabled (default) Enabled cache.
Disabled Disabled cache.

External Cache

This fields allow you to Enable or Disable the CPU'S "Level 2" secondary cache. Caching allows better performance.

Enabled (default) Enabled cache.
Disabled Disabled cache.

CPU L2 Cache ECC Checking

The item allows you to enable/disable CPU L2 Cache ECC Checking.

The Choices: Enabled(default), Disabled.

Processor Number Feature

The item will show up when you install the Pentium III processor.

Enabled (default) Pentium Processor Number Feature.
Disabled Disabled.

Quick Power On Self Test

This category speeds up Power on Self-Test(POST) after you power up the computer. If it is set to Enable, BIOS will shorten or skip some check items during POST.

Enabled (default) Enabled quick POST.
Disabled Normal POST.

First/Secondary/Third Boot Device

This BIOS attempts to load the operating system from the devices in the sequence selected in these items.

The Choices: Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, LAN, Disabled.

Boot Other Device

The Choices: Enabled(default), Disabled.

Swap Floppy Drive

If the system has two floppy drives, you can swap the logical drive name assignments.

The Choices: Disabled(default), Enabled.

Boot Up Floppy Seek

Seek disk drives during boot up. Disabled speeds boot-up.

The Choices: Enabled(default), Disabled.

Boot Up NumLock Status

Select power on state for Numlock.

On (default) Numpad is number keys.

Off Numpad is arrow keys.

Gate A20 Option

Select if chipset or keyboard controller should control Gate A20.

Normal A pin in the keyboard controller controls Gate A20.

Fast (default) Lets chipset control Gate A20.

Typematic Rate Setting

Enabled Enabled this option to adjust the keystroke repeat rate.

Disabled (default) Disabled.

Typematic Rate (Char/Sec)

Range between 6(**default**) and 30 characters per second.
This option controls the speed of repeating keystrokes.

Typematic Delay (Msec)

This option sets the time interval for displaying the first and the second characters.

The Choices: 250(**default**), 500, 750, 1000.

Security Option

This category allows you to limit access to the system and Setup, or just to Setup.

System

The system will not boot and access to Setup will be denied if the correct password is not entered in prompt.

Setup (default)

The system will boot, but access to Setup will be denied if the correct password is not entered in prompt.

OS Select For DRAM

Select the operating system that is running with greater than 64MB of RAM on the system.

The Choices: Non-OS2(**default**), OS2.

Video BIOS Shadow

Determines whether video BIOS will be copied to RAM for faster execution.

Enabled (default)

Optional ROM is enabled.

Disabled

Optional ROM is disabled.

EPA / (H/W Monitor) Show

The Choices: H/W Monitor(**default**), EPA LOGO.

2.4 Advanced Chipset Features

This section allows you to configure the system based on the specific features of the installed chipset. This chipset manages bus speeds and access to system memory resources, such as DRAM and external cache. It also coordinates communications of the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for your system. The only time you might consider making any changes would be if you discovered that data was lost while using your system.

© Figure 4. Advanced Chipset Features

CMOS Setup Utility-Copyright(C) 1984-2001 Award Software

Advanced Chipset Features

DRAM Clock / Drive Control	Press Enter	Item Help
AGP & P2P Bridge Control	Press Enter	Menu Level
CPU & PCI Bus Control	Press Enter	
Chipset Register Adjust	Press Enter	
Memory Hole	Disabled	
System BIOS Cacheable	Disabled	
Video RAM Cacheable	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

DRAM Clock / Drive Control

Current FSB Frequency	133MHz	Item Help
Current DRAM Frequency	166MHz	Menu Level
DRAM Clock	By SPD	
DRAM Timing	By SPD	
*SDRAM CAS Latency	2.5	
*Bank Interleave	Disabled	
*Precharge to Active(Trp)	3T	
*Active to Precharge(Tras)	6T	
*Active to CMD(Trcd)	3T	
*DRAM Queue Depth	4 Level	
DRAM Command Rate	2T Command	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

DRAM Clock

This item determines DRAM Clock following the CPU host clock.

The Choices: By SPD(default), 100.

DRAM Timing

The DRAM timing is controlled by the DRAM Timing Registers. The Timings programmed into this register are dependent on the system design.

The Choices: By SPD(default), Manual.

SDRAM CAS Latency

2.5 (default)	Set SDRAM latency Time to 2.5.
2	Set SDRAM latency Time to 2.

Bank Interleave

The Choices: Disabled(default), 2 Bank, 4 Bank.

Precharge to Active (Trp)

The Choices: 3T(default), 2T.

Active to Precharge

6T (default)	Set DRAM Precharge in 6.
5T	Set DRAM Precharge in 5.

Active to CMD (Trcd)

The Choices: 3T(default), 2T.

DRAM Queue Depth

The Choices: 4 Level(default), 2 Level, 3 Level.

DRAM Command Rate

The Choices: 2T Command(default), 1T Command.

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

AGP & P2P Bridge Control

AGP Aperture Size	64M	Item Help
AGP Mode	4X	Menu Level
AGP Driving Control	Auto	
AGP Driving Value	DA	
AGP Fast Write	Disabled	
AGP Master 1WS Write	Disabled	
AGP Master 1WS Read	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

AGP Aperture Size

Select the size of the Accelerated Graphic Port(AGP) aperture. The aperture is a portion of the PCI memory address range dedicated for graphics memory address space. Host cycle that hit the aperture range are forwarded to the AGP without any translation.

The Choices: 64M(default), 256M, 128M, 64M, 32M, 16M, 8M, 4M.

AGP Mode

The Choices: 4X(default), 2X, 1X.

AGP Driving Control

By choosing “Auto” the system BIOS will enable the AGP output Buffer Drive strength that were defined by AGP Card. By choosing “Manual”, it allows user to set AGP output Buffer Drive strength by manual.

The Choices: Auto(default), Manual.

AGP Fast Write

The Choices: Disabled(default), Enabled.

AGP Master 1WS Write

When Enabled, write data to the AGP (Accelerated Graphic Port) that will be executed with one wait states.

The Choices: Disabled(default), Enabled.

AGP Master IWS Read

When Enabled, read data to the AGP (Accelerated Graphic Port) that will be executed with one wait states.

The Choices: Disabled(default), Enabled.

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

CPU & PCI Bus Control

PCI 1 Master 0 WS Write	Enabled	Item Help
PCI 2 Master 0 WS Write	Enabled	Menu Level
PCI 1 Port Write	Enabled	
PCI 2 Port Write	Enabled	
PCI Delay Transaction	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

PCI 1 Master 0 WS Write

When this field is Enabled, write data to the PCI bus are executed with zero wait states.

The Choices: Enabled(default), Disabled.

PCI 2 Master 0 WS Write

When this field is Enabled, write data to the PCI bus are executed with zero wait states.

The Choices: Enabled(default), Disabled.

PCI 1 Port Write

The Choices: Enabled(default), Disabled.

PCI 2 Port Write

The Choices: Enabled(default), Disabled.

PCI Delay Transaction

The Choices: Disabled(default), Enabled.

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

Chipset Register Adjust

CS#/CKE Early Clock Select	Auto	Item Help
SMCD/MA Early Clock Select	Auto	Menu Level
KT333 Rx6D Register	Auto	
KT333 Rx6D Register	33	
KT333 RxFD Register	Auto	
KT333 RxFD Register	00	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

Memory Hole

In order to improve performace, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory's space below 16MB.

The Choices: **Diablded**(default), 15M-16M.

System BIOS Cacheable

When enabled, the access to the system BIOS ROM address at F0000H-FFFFFFH is cached.

The Choices: **Disabled**(default), Enabled.

Video RAM Cacheable

Enabled

Enabled Video RAM Cacheable.

Disabled (default)

Disabled Video RAM Cacheable.

2.5 Integrated Peripherals

© Figure 5. Integrated Peripherals

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

Integrated Peripherals

VIA Onchip IDE Device	Press Enter	Item Help
VIA Onchip PCI Device	Press Enter	
Super IO Device	Press Enter	Menu Level
Init Display First	PCI Slot	
Onchip USB Connector	All Enabled	
USB Keyboard Support	Disabled	
IDE HDD Block Mode	Enabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

VIA Onchip IDE Device

On-Chip IDE Channel 0	Enabled	Item Help
On-Chip IDE Channel 1	Enabled	
IDE Prefetch Mode	Enabled	Menu Level
Primary Master PIO	Auto	
Primary Slave PIO	Auto	
Secondary Master PIO	Auto	
Secondary Slave PIO	Auto	
Primary Master UDMA	Auto	
Primary Slave UDMA	Auto	
Secondary Master UDMA	Auto	
Secondary Slave UDMA	Auto	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

On-Chip IDE Channel 0

Enabled (default)

Enabled onboard 1st channel
IDE port.

Disabled

Disabled onboard 1st channel
IDE port.

On-Chip IDE Channel 1

Enabled (default)	Enabled onboard 2nd channel IDE port.
Disabled	Disabled onboard 2nd channel IDE port.

IDE Prefetch Mode

The onboard IDE drive interface supports IDE prefetching, for faster drive access. If you install a primary and or secondary add-in IDE interface, set this field to Disabled if the interface does not support prefetching.

The Choices: Enabled(default), Disabled.

Primary Master PIO(for onboard IDE 1st channel)

Auto (default)	BIOS will automatically detect the IDE HDD Accessing mode.
Mode 0~4	Manually set the IDE Accessing mode.

Primary Slave PIO(for onboard IDE 2nd channel)

Auto (default)	BIOS will automatically detect the IDE HDD Accessing mode.
Mode 0~4	Manually set the IDE Accessing mode.

Secondary Master PIO(for onboard IDE 1st channel)

Auto (default)	BIOS will automatically detect the IDE HDD Accessing mode.
Mode 0~4	Manually set the IDE Accessing mode.

Secondary Slave PIO(for onboard IDE 2nd channel)

Auto (default)	BIOS will automatically detect the IDE HDD Accessing mode.
Mode 0~4	Manually set the IDE Accessing mode.

Primary Master UDMA**Auto (default)**

BIOS will automatically detect the IDE HDD Accessing mode.

Disabled

Disabled.

Primary Slave UDMA**Auto (default)**

BIOS will automatically detect the IDE HDD Accessing mode.

Disabled

Disabled.

Secondary Master UDMA**Auto (default)**

BIOS will automatically detect the IDE HDD Accessing mode.

Disabled

Disabled.

Secondary Slave UDMA**Auto (default)**

BIOS will automatically detect the IDE HDD Accessing mode.

Disabled

Disabled.

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

VIA Onchip PCI Device

VIA-3058 AC97 Audio	Auto	Item Help
VIA-3068 AC97 Modem	Auto	
VIA-3043 Onchip LAN	Enabled	Menu Level
OnChip LAN Boot ROM	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

VIA-3058 AC97 Audio

The default setting of this item utilizes an onboard sound chip for audio output. There is no need to buy and insert a sound card. If a sound card is installed, disable this item.

The Choices: Auto(default), Disabled

VIA-3068 AC97 Modem

The item allows you to control the onboard MC97 Modem controller.

The Choices: Auto(default), Disabled.

VIA-3043 Onchip LAN

The Choices: Enabled(default), Disabled.

OnChip LAN Boot ROM

The Choices: Disabled(default), Enabled.

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

Super IO Device

Onboard FDC Controller	Enabled	Item Help
Onboard Serial Port 1	3F8/IRQ4	Menu Level
Onboard Serial Port 2	2F8/IRQ3	
UART Mode Select	Normal	
RxD,TxD Active	Hi,Lo	
IR Transmission Delay	Enabled	
UR2 Duplex Mode	Half	
Use IR Pins	IR-Rx2Tx2	
Onboard Parallel Port	378/IRQ7	
Parallel Port Mode	SPP	
EPP Mode Type	EPP1.7	
ECP Mode Use DMA	3	
Game Port Address	201	
Midi Port Address	330	
Midi Port IRQ	10	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

Onboard FDC Controller

Enabled (default)

Enabled onboard FDC Controller.

Disabled

Disabled onboard FDC Controller.

Onboard Serial Port1

Select an address and corresponding interrupt for the first and second serial ports.

The Choices: **3F8/IRQ4**(default), 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Auto, Disabled.

Onboard Serial Port 2

Auto	BIOS will automatically setup the Serial Port 2 address.
3F8/IRQ4	Enabled onboard Serial Port 2 and address is 3F8.
2F8/IRQ3 (default)	Enabled onboard Serial Port 2 and address is 2F8.
3E8/IRQ4	Enabled onboard Serial Port2 and address is 3E8.
2E8/IRQ3	Enabled onboard Serial Port2 and address is 2E8.
Disabled	Disabled.

UART Mode Select

This item allows you to select which Infra Red(IR) function of the onboard I/O chip you wish to use.

The Choices: **Normal**(default), IrDA, SCR, ASKIR.

UR2 Duplex Mode

This item allows you to select which Infra Red(IR) function of the onboard I/O chip you wish to use.

The Choices: **Half**(default), Full.

Onboard Parallel Port

This item allows you to select the I/O address with which to access the onboard parallel port controller.

The Choices: **378/IRQ7**(default), Disabled, 278/IRQ5, 3BC/IRQ7.

Parallel Port Mode

SPP (default)	Using Parallel port as Standard Parallel Port.
EPP	Using Parallel port as Enhanced Parallel Port.
ECP	Using Parallel port as Extended Capabilities Port.
ECP/EPP	Using Parallel port as

EPP Mode Select

The Choices: EPP1.7(default), EPP1.9.

ECP Mode Use DMA

The Choices: 3(default), 1.

Game Port Address

201 (default)	Set onboard game port to 201.
209	Set onboard game port to 209.
Disabled	Disabled.

Midi Port Address

300	Set Midi Port address to 300.
330 (default)	Set Midi Port address to 330.
290	Set Midi Port address to 290.
Disabled	Disabled.

Midi Port IRQ

10 (default)	Set Midi Port IRQ to 10.
5	Set Midi Port IRQ to 5.

Init Display First

PCI Slot (default)	Set Init Display First to PCI Slot.
AGP	Set Init Display First to onboard AGP.

Onchip USB Connector

This should be enabled if your system has a USB installed on the system board and you wish to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.

The Choices: All Enabled(default), All Disabled, 1 USB Port, 2 USB Port.

USB Keyboard Support

Select Enabled if your system contains a Universal Serial Bus(USB) controller and you have a USB keyboard.

The Choices: Disabled(default), Enabled.

IDE HDD Block Mode

Enabled (default)	Enabled.
Disabled	Disabled.

2.6 Power Management Setup

The Power Management Setup allows you to configure your system to most effectively save energy while operating in a manner consistent with your own style of computer use.

© Figure 6. Power Management Setup

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

Power Management Setup

ACPI Function	Enabled	Item Help
ACPI Suspend Type	S1(POS)	Menu Level
Power Management Option	User Define	
HDD Power Down	Disabled	
Suspend Mode	Disabled	
Video Off Option	Suspend->Off	
Video Off Method	V/H SYNC+Blank	
Modem Use IRQ	3	
Soft-Off by PWRBTN	Instant-Off	
IRQ / Event Activity Detect	Press Enter	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

ACPI Function

This item display status of the Advanced Configuration and Power Management (ACPI). **The Choices: Enabled, Disabled.**

ACPI Suspend Type

The item allows you to select the suspend type under ACPI operating system.

S1(POS) (default) Power on Suspend.

S3(STR) Suspend to RAM.

Power Management Option

This option allows you to set each mode individually.

When not disabled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.

The Choices: User Define (default), Min Saving, Max Saving.

HDD Power Down

By default, this is “Disabled”, meaning that no matter the mode of the rest of the system, the hard drive will remain ready. Otherwise, you have a range of choices from 1 to 15 minutes or Suspend. This means that you can select to have your hard disk drive be turned off after a selected number of minutes or when the rest of the system goes into a suspend mode.

The Choices: Disabled(default).

Suspend Mode

The **Suspend Mode** fields set the Period of time after each of these modes activates. At Max Saving, these modes activate sequentially (in the given order) after one minute; at Min Saving after one hour.

The Choices: Disabled(default).

Video Off Option

This field determines when to activate the video off feature for monitor power management.

The Choices: Suspend->off(default), Always on.

Video Off Method

This determines the manner in which the monitor is blanked.

V/H SYNC+Blank
(default)

This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.

Blank Screen

This option only writes blanks to the video buffer.

DPMS Support

Initial display power management signaling.

Modem Use IRQ

This determines the IRQ, which can be applied in Modem use.

The Choices: 3(default), 4/5/7/9/10/11/NA.

Soft-Off by PWRBTN

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has “hung”.

The Choices: Instant-Off(default), Delay 4 Sec.

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software
IRQ / Event Activity Detect

PS2KB Wakeup Select	Hotkey	Item Help
PS2KB Wakeup From S3/S4/S5	Disabled	
VGA	OFF	Menu Level
LPT & COM	LPT/COM	
HDD & FDD	ON	
PCI Master	OFF	
PowerOn by PCI Card	Disabled	
Modem Ring Resume	Disabled	
RTC Alarm Resume	Disabled	
Date (of Month)	0	
Resume Time (hh:mm:ss)	0 0 0	
IRQs Activity Monitoring	Press Enter	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F1:General Help F5:Previous Values F6:Fail-Safe Defaults
F7:Optimized Defaults

IRQ / Event Activity Monitoring

If you highlight the “Press Enter” next to the “Wake Up Events” label and then press the enter key, it will take you to a submenu with the following options:

VGA

When set to On, any event occurring at a VGA port will awaken a system which has been powered down.

LPT & COM

When set to On, any event occurring at a COM(serial) / LPT (printer) port will awaken a system which has been powered down.

HDD & FDD

When set to On(default), any event occurring at a hard or floppy drive will awaken a system which has been powered down.

PCI Master

When set to On, any event occurring at a PCI port will awaken a system which has been powered down.

Poweron by PCI Card

The Choices: Disabled(default), Enabled.

Modem Ring Resume

To use this function, you need a LAN add-on card which supports power on function. It should also support the wake-up on LAN jump. **The Choices:** Disabled(default).

RTC Alarm Resume

When “Enabled”, you can set the date and time at which the RTC (real-time clock) alarm awakens the system from Suspend mode.

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

IRQs Activity Monitoring

Primary INTR	ON	Item Help
IRQ 3 (COM2)	Enabled	Menu Level
IRQ 4 (COM1)	Enabled	
IRQ 5 (LPT2)	Enabled	
IRQ 6 (Floppy Disk)	Enabled	
IRQ 7 (LPT1)	Enabled	
IRQ 8 (RTC Alarm)	Disabled	
IRQ 9 (IRQ2 Redir)	Disabled	
IRQ 10 (Reserved)	Disabled	
IRQ 11 (Reserved)	Disabled	
IRQ 12 (PS2/Mouse)	Enabled	
IRQ 13 (Coprocessor)	Enabled	
IRQ 14 (Hard Disk)	Enabled	
IRQ 15 (Reserved)	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

IRQs Activity Monitoring

When set to On(default), any event occurring at Primary INTR will awaken a system which has been powered down.

The following is a list of IRQ, Interrupt ReQuests, which can be exempted much as the COM ports and LPT ports above can. When an I/O device wants to gain the attention of the operating system, it signals this by causing an IRQ to occur. When the operating system is ready to respond to the request, it interrupts itself and performs the service. As above, the choices are On and Off. Off is the default. When set On, activity will neither prevent the system from going into a power management mode nor awaken it.

IRQ3	(COM1)
IRQ4	(COM2)
IRQ5	(LPT2)
IRQ6	(Floppy Disk)
IRQ7	(LPT1)
IRQ8	(RTC Alarm)
IRQ9	(IRQ2 Redir)
IRQ10	(Reserved)
IRQ11	(Reserved)
IRQ12	(PS/2 Mouse)
IRQ13	(Coprocesor)
IRQ14	(Hard Disk)
IRQ15	(Reserved)

2.7 PnP/PCI Configurations

This section describes configuring the PCI bus system. PCI or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed of the CPU itself when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users make any changes to the default settings.

© Figure 7. PnP/PCI Configurations

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

PnP/PCI Configurations

PNP OS Installed	No	Item Help
Reset Configuration Data	Disabled	Menu Level
Resources Controlled By IRQ Resources	Auto(ESCD) Press Enter	Select Yes if you are using a Plug and Play capable operating system
PCI/VGA Palette Snoop	Disabled	select No if you need the BIOS to configure non- boot devices
Assign IRQ For VGA	Enabled	
Assign IRQ For USB	Enabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
F1:General Help F5:Previous Values F6:Fail-Safe Defaults
F7:Optimized Defaults

PNP OS Installed

When set to YES, BIOS will only initialize the PnP cards used for booting (VGA, IDE, SCSI). The rest of the cards will be initialized by the PnP operating system like Windows 95. When set to No, BIOS will initialize all the PnP cards. Therefore for non-PnP operating systems (DOS, Netware), this option must be set to No.

Reset Configuration Data

The system BIOS supports the PnP feature so the system needs to record which resource is assigned and proceeds resources from conflict. Every peripheral device has a node, which is called ESCD. This node records which resources are assigned to it. The system needs to record and update ESCD to the memory locations. These locations (4K) are reserved at the system BIOS. If Disabled (Default) is chosen, the system's ESCD will update only when the new configuration varies from the last one. If Enabled is chosen, the system is forced to update ESCDs and then is automatically set to the "Disabled" mode.

IRQ3	assigned to: PCI PnP
IRQ4	assigned to: PCI PnP
IRQ5	assigned to: PCI PnP
IRQ6	assigned to: PCI PnP
IRQ7	assigned to: PCI PnP
IRQ8	assigned to: PCI PnP
IRQ9	assigned to: PCI PnP
IRQ10	assigned to: PCI PnP
IRQ11	assigned to: PCI PnP
IRQ12	assigned to: PCI PnP
IRQ13	assigned to: PCI PnP
IRQ14	assigned to: PCI PnP
IRQ15	assigned to: PCI PnP

Resources Controlled By

By Choosing "Auto" (default), the system BIOS will detect the system resources and automatically assign the relative IRQ and DMA channel for each peripheral. By Choosing "Manual" the user will need to assign IRQ & DMA for add-on cards. Be sure that there are no IRQ/DMA and I/O port conflicts.

IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

PCI / VGA Palette Snoop

Choose Disabled or Enabled. Some graphic controllers which are not VGA compatible take the output from a VGA controller and map it to their display as a way to provide boot information and VGA compatibility.

However, the color information coming from the VGA controller is drawn from the palette table inside the VGA controller to generate the proper colors, and the graphic controller needs to know what is in the palette of the VGA controller. To do this, the non-VGA graphic controller watches for the write access to the VGA palette and registers the snoop data. In PCI based systems, the Write Access to the palette will not show up on the ISA bus if the PCI VGA controller responds to the Write.

In this case, the PCI VGA controller should not respond to the Write, it should only snoop the data and permit the access to be forwarded to the ISA bus. The non-VGA ISA graphic controller can then snoop the data on the ISA bus. Unless you have the above situation, you should disable this option.

Disabled (default)	Function Disabled.
Enabled	Function Enabled.

Assign IRQ For VGA

Lets the user choose which IRQ to assign for the VGA.

Assign IRQ For USB

Lets the user choose which IRQ to assign for the USB.

2.8 PC Health Status

© Figure 8. PC Health Status

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

PC Health Status

CPU Warning Temperature	Disabled	Item Help
Current CPU Temperature		Menu Level
Current System Temperature		
Fan3 Speed		
Fan2 Speed		
Vcore		
+3.3V		
+5V		
+12V		
-12V		
VBAT(V)		
5VSB(V)		
Shut down Temperature	Disabled	

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

Current Voltage(V) Vcore / +12V / -12V / +5V / +3.3V / 5VSB / VBAT

Detect system's voltage status automatically.

Current CPU / System Temperature(°C / °F)

This field displays the current CPU temperature,if your computer contains a monitoring system.

Fan2 / Fan3 Speed

These field displays the current speed of up to System Fans,if your computer contains a monitoring system.

CPU Warning Temperature(°C)

Disabled (default)	Disabled. Monitor CPU Temp.at 50°C / 122°F.
50°C / 122°F	Monitor CPU Temp.at 50°C / 122°F.
53°C / 127°F	Monitor CPU Temp.at 53°C / 127°F.
56°C / 133°F	Monitor CPU Temp.at 56°C / 133°F.
60°C / 140°F	Monitor CPU Temp.at 60°C / 140°F.
63°C / 145°F	Monitor CPU Temp.at 63°C / 145°F.
66°C / 151°F	Monitor CPU Temp.at 66°C / 151°F.
70°C / 158°F	Monitor CPU Temp.at 70°C / 158°F.

Shutdown Temperature(°C / °F)

Disabled(default)	Disabled. Monitor CPU Temp.at 60°C / 140°F, if Temp.>60°C / 140°F system will automatically power off.
60°C / 140°F	Monitor CPU Temp.at 60°C / 140°F, if Temp.>60°C / 140°F system will automatically power off.
65°C / 149°F	Monitor CPU Temp.at 65°C / 149°F, if Temp.>65°C / 149°F system will automatically power off.
70°C / 158°F	Monitor CPU Temp.at 70°C / 158°F, if Temp.>70°C / 158°F system will automatically power off.
75°C / 167°F	Monitor CPU Temp.at 75°C / 167°F, if Temp.>75°C / 167°F system will automatically power off.

2.9 Frequency / Voltage Control

© Figure 9. Frequency / Voltage Control

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

Frequency / Voltage Control

Auto Detect DIMM / PCI CLK	Enabled	Item Help
Spread Spectrum	Disabled	
CPU Clock	100	Menu Level

←→↑↓: Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit
 F1:General Help F5:Previous Values F6:Fail-Safe Defaults
 F7:Optimized Defaults

Auto Detect DIMM / PCI CLK

This item allows you to enable/disable auto detect DIMM / PCI CLOCK.

The Choices: Enabled(default), Disabled.

Spread Spectrum

This function is designed to EMI test only.

The Choices: Disabled(default), Enabled.

CPU Clock

This item allows you to select the CPU clock from 133MHz to 166MHz, 100MHz to 133MHz depending on the CPU Host Clock .


The Choices: 100(default), Min.100~Max.166.

2.10 Load Fail-Safe Defaults

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

© Figure 10. Load Fail-Safe Defaults

CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

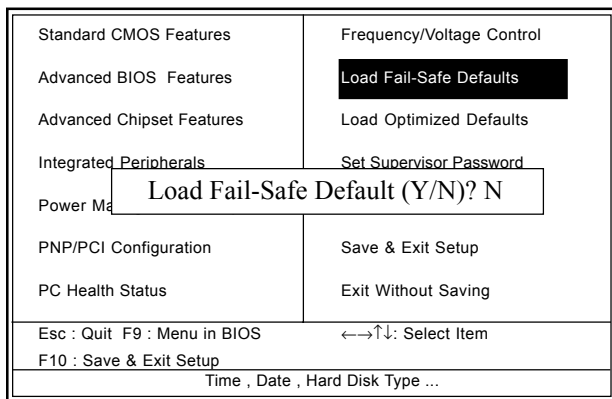


Pressing 'Y' loads the default values that are factory settings for optimal performance of system operations.

2.11 Load Optimized Defaults

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

© Figure 11. Load Optimized Defaults


CMOS Setup Utility-Copyright (C) 1984-2001 Award Software

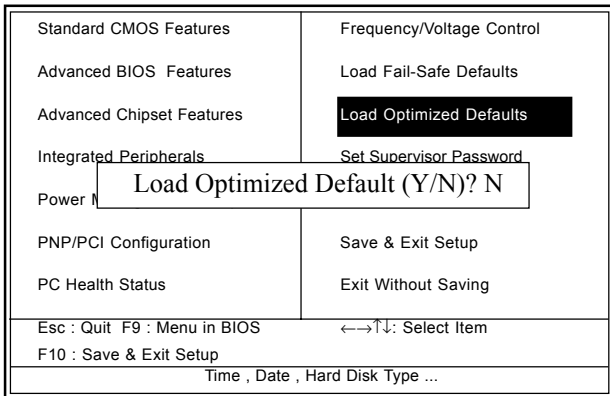

Pressing ‘Y’ loads the default values that are factory settings for optimal performance of system operations.

2.12 Set Supervisor / User Password

© Figure 12. Set Supervisor / User Password

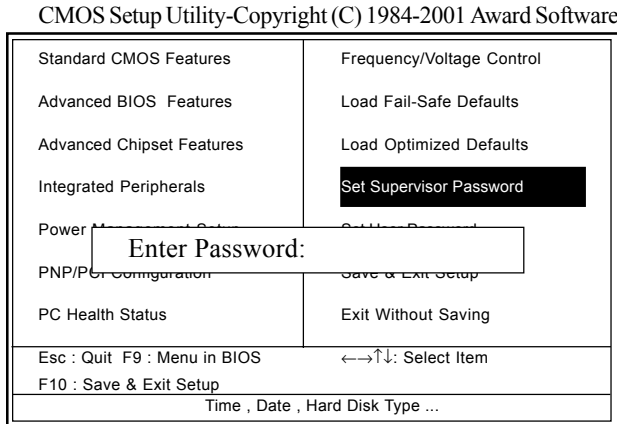

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Enter Password


Type a password, up to eight characters, and press <Enter>. The password you type now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <ESC> to abort the selection and not enter a password. To disable the password, just press <Enter> when you are prompted to enter a password. A message will confirm that you wish to disable the password. Once the password is disabled, the system will boot and you can enter setup freely.

Password Disabled

If you select “System” at the Security Option of BIOS Features Setup Menu, you will be prompted for the password every time when the system is rebooted, or any time when you try to enter Setup. If you select “Setup” at the Security Option of BIOS Features Setup Menu, you will be prompted only when you try to enter Setup.

2.13 Save & Exit Setup

© Figure 13. Save & Exit Setup

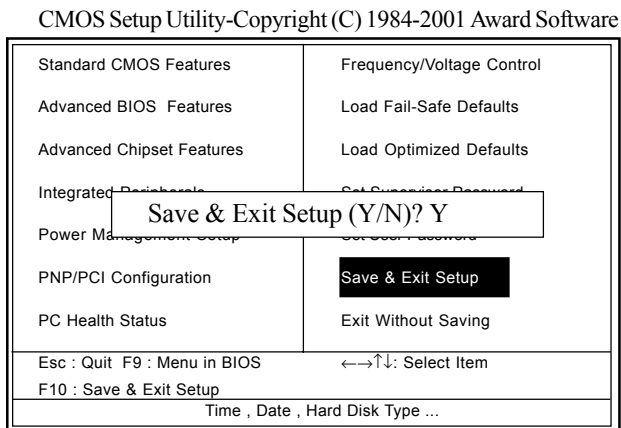


Typing “Y” will quit the Setup Utility and save the user setup value to RTC CMOS RAM.

Typing “N” will return to the Setup Utility.

2.14 Exit Without Saving

© Figure 14. Exit Without Saving

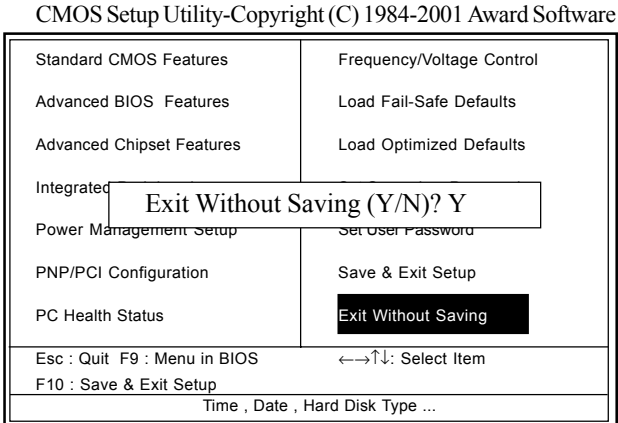

Typing “Y” will quit the Setup Utility without saving to RTC CMOS RAM.

Typing “N” will return to the Setup Utility.

Chapter 3

There are motherboard drivers and utilities included in ACORP Bonus CD disc. You don't need to install all of them in order to boot your system. But after you finish the hardware installation, you have to install your operation system first (such as windows 98) before you can install any drivers or utilities. Please refer to your operation system installation guide.

Note: Please follow recommended procedure after install Windows ME and Windows XP.

3.1 Auto-run Menu

You can use the auto-run menu of Bonus CD disc. Choose the utility or driver and select model name.




3.2 Installing VIA 4 in 1 Driver

You can install the VIA 4 in 1 driver (IDE Bus master (For Windows NT use), VIA ATAPI Vendor Support Driver, VIA AGP, IRQ Routing Driver (For Windows 98 use), VIA Registry (INF) Driver) from the Bonus Pack CD disc auto-run menu.




(1)
Click "Driver" Item.

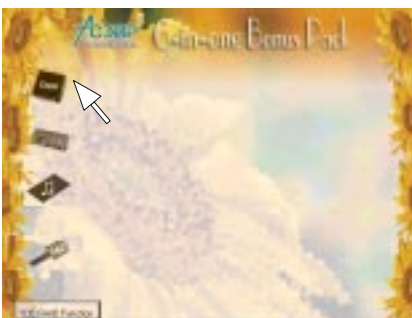

(2)
Click
"Chipset" Item.



(3)
Click
"VIA Service Pack" Item.

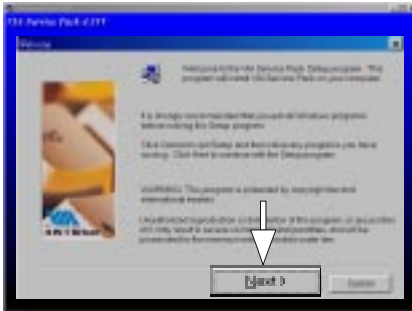

(4)
Click "Next".

3.3 Installing Audio Driver

This motherboard comes with an AC97 CODEC and the sound controller is in VIA South Bridge chipset. You can find the audio driver from the Bonus Pack CD disc auto-run menu.



(1)
Click "Driver" Item.




(2)
Click "Audio" Item.



(3)
Click
"VT8233A" Item.



(4)
For Win NT
& Win 2000
& Win 9X_ME system.
Select your O.S. system.

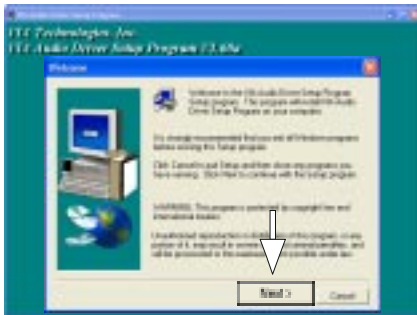


(5)
Click "Next".



(6)
Click "Finish".

The 7KT333 Jumper Setting Summary

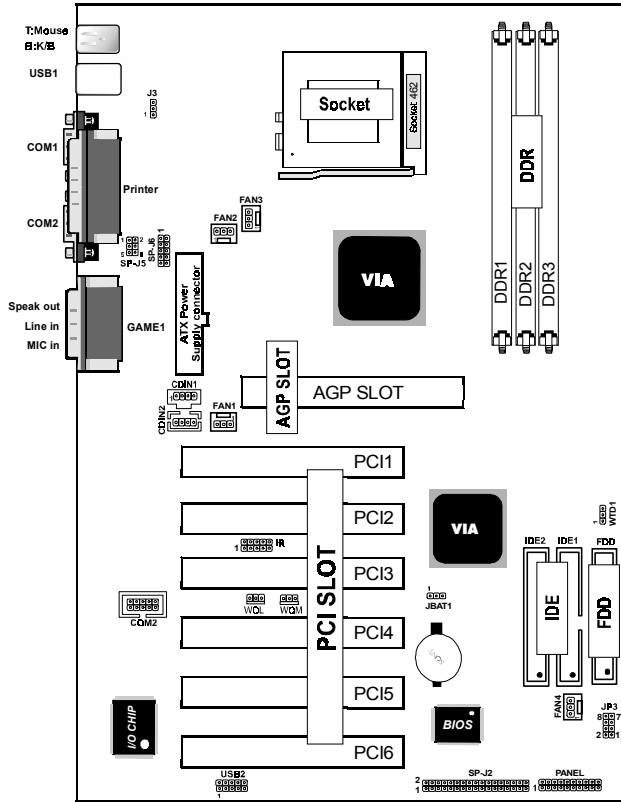

CPU Clock Frequency Setting: JP3

1-2	3-4	5-6	7-8	CPU(MHz)	PCI(MHz)	Default
NA	ON	NA	ON	100	33.3	*
NA	ON	NA	OFF	133	33.3	*

Keyboard Wake up Setting: J3

Pin J3	Definition
1-2	Enabled
2-3	Disabled (Default)

CMOS Function Selection: JBAT1

Pin JBAT1	Definition
1-2	Normal (Default)
2-3	Clear CMOS

Watch Dog: WTD1

Pin WTD1	Definition
1-2	Disabled (Default)
2-3	Enabled

Fan Connectors: Fan2/3

Pin	Assignment
1	Ground
2	+12VDC
3	Signal

Fan Connectors: Fan1/4

Pin	Assignment
1	Ground
2	+12VDC
3	NA

Wake-On LAN Connector: WOL

Pin	Assignment
1	5V_SB
2	Ground
3	Signal

Wake-On Modem Connector: WOM

Pin	Assignment
1	5V_SB
2	Ground
3	Signal

CD Audio-In Connectors: CDIN1/CDIN2

Pin CDIN1	Assignment
1	CD-L
2	GND
3	GND
4	CD-R

Pin CDIN2	Assignment
1	GND
2	CD-L
3	GND
4	CD-R

Panel Connector

