

# ICF-C763/C763L

## SERVICE MANUAL

Ver 1.0 2004.05



*US Model*  
*Canadian Model*  
ICF-C763  
*AEP Model*  
ICF-C763/C763L  
*UK Model*  
ICF-C763L

### SPECIFICATIONS

#### Time display

UK, North and South America	12-hour system
Other countries/regions	24-hour system

#### Frequency range

Model for North and South America

Band	ICF-C763	Channel step
FM	87.5 - 108 MHz	0.1 MHz
AM	530 - 1 710 kHz	10 kHz

Model for other countries/Regions

Band	ICF-C763	ICF-C763L	Channel step
FM	87.5 - 108 MHz	87.5 - 108 MHz	0.05 MHz
AM (MW)	531 - 1 602 kHz	531 - 1 602 kHz	9 kHz
LW	—	153 - 279 kHz	3 kHz

#### Speaker

Approx. 5.7 cm (2 1/4 inches) dia. 4 Ω

#### Power output

200 mW (at 10 % harmonic distortion)

#### Power requirements

North and South American model	: 120 V AC, 60 Hz
Other model	: 230 V AC, 50 Hz

#### Dimensions

Approx. 115.5 x 105 x 110.6 mm (w/h/d) (4 5/8 x 4 1/4 x 4 3/8 inches)  
including projecting parts and controls

#### Mass

Approx. 665 g (1 lb 7.5 oz)  
Approx. 675 g (1 lb 7.8 oz): ICF-C763L (UK model)  
Approx. 600 g (1 lb 5.2 oz): ICF-C763 (North and South America model)

Design and specifications are subject to change without notice.

ICF-763  
**FM/AM PLL SYNTHESIZED CLOCK RADIO**  
ICF-763L  
**FM/MW/LM PLL SYNTHESIZED CLOCK RADIO**

9-877-783-01  
2004E02-1  
© 2004.05

**Sony Corporation**  
Personal Audio Company  
Published by Sony Engineering Corporation

**SONY®**

TABLE OF CONTENTS

Specifications ..... 1

1. GENERAL  
Location and Function of Controls ..... 3

2. ELECTRICAL ADJUSTMENTS ..... 4

3. DIAGRAMS  
3-1. IC Block Diagrams ..... 6  
3-2. IC Pin Function Descriptions ..... 7  
3-3. Printed Wiring Board – Main section – ..... 8  
3-4. Schematic Diagram – Main section– ..... 9  
3-5. Printed Wiring Board – Contrd section – ..... 10  
3-6. Schematic Diagram – Contrd section – ..... 11  
3-7. Printed Wiring Board – Power section – ..... 12  
3-8. Schematic Diagram – Power section – ..... 12

4. EXPLODED VIEW  
4-1. Cabinet (Upper) Section ..... 13

5. ELECTRICAL PARTS LIST ..... 14

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:  
Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.



LEAKAGE


The AC leakage from any exposed metal part to earth Ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

• HOW TO CHANGE THE CERAMIC FILTER

This model is used two ceramic filters of CF2 and CF3. You must use same type of color marked ceramic filters in order to meet same specifications. Therefore, the ceramic filter must change two pieces together since it's supply two pieces in package as a spare parts.

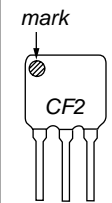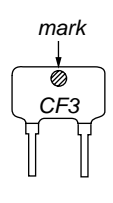		Mark	Center frequency
		no mark	10.70MHz
		blue	10.67MHz
		orange	10.73MHz
		black	10.64MHz
		white	10.76MHz

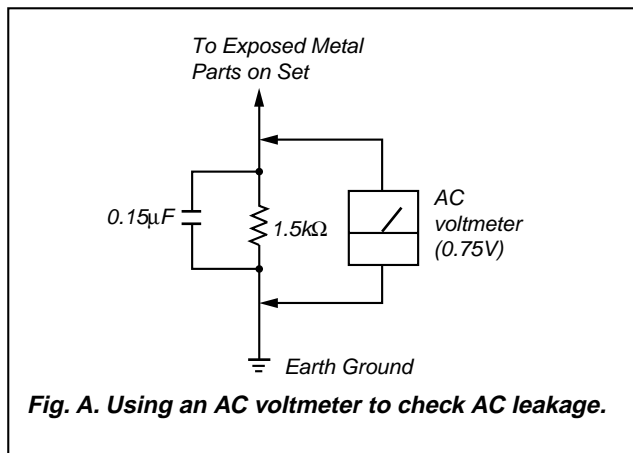

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!


LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

# SECTION 1 GENERAL

This section is extracted from instruction manual.

## LOCATION AND FUNCTION OF CONTROLS

The PRESET 3 button and VOLUME have a tactile dot.

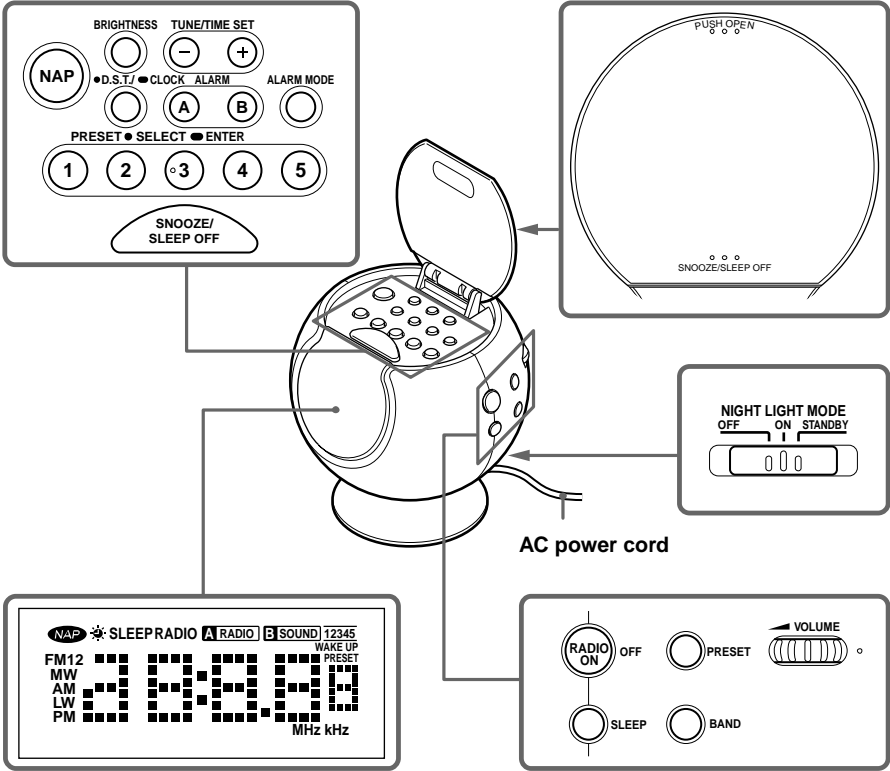

## SECTION 2 ELECTRICAL ADJUSTMENTS

< > : ICF-C763L


**TUNER SECTION**    0 dB = 1 μV

• **AM Section**

**Setting:**

BAND button: AM <MW and LW>

AM RF signal generator

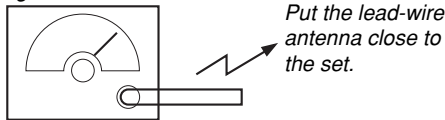


30% amplitude modulation by 400 Hz signal

• **FM Section**

**Setting:**


BAND button: FM

FM RF signal generator

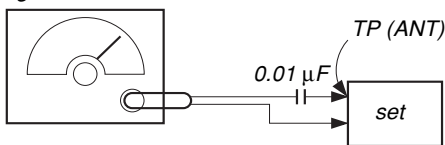


22.5 kHz frequency deviation by 400 Hz signal  
output level : as low as possible

• Connecting Level Meter (FM, AM <MW and LW>)

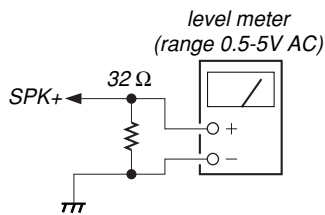

• Connecting Digital Voltmeter (FM, AM <MW and LW>)

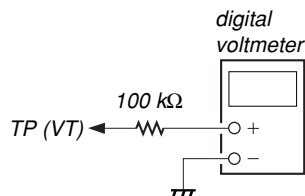

• Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

• **ICF-C763**    [ ] : Italian model

<b>AM IF ADJUSTMENT</b>		
Adjust for a maximum reading on level meter.		
T1		
450 kHz		

<b>AM FREQUENCY COVERAGE ADJUSTMENT</b>		
Frequency Display	530 kHz [531 kHz]	1,710 kHz [1,602 kHz]
Reading on Digital voltmeter	3.0 ± 0.1 V	10.0 ± 1.0V [9.0 ± 1.0V]
Adjustment Part	L4	<confirmation>

<b>AM TRACKING ADJUSTMENT</b>		
Adjust for a maximum reading on level meter.		
L1	CT1	
530 kHz [531kHz]	1.490 kHz [1.404kHz]	

• **ICF-C763L**

<b>MW IF ADJUSTMENT</b>		
Adjust for a maximum reading on level meter.		
T1		
450 kHz		

<b>MW FREQUENCY COVERAGE ADJUSTMENT</b>		
Frequency Display	531 kHz	1.602 kHz
Reading on Digital voltmeter	2.75 ± 0.1 V	9.0 ± 1.0 V
Adjustment Part	L4	<confirmation>

<b>MW TRACKING ADJUSTMENT</b>		
Adjust for a maximum reading on level meter.		
L1	CT1	
621 kHz	1.404 kHz	

<b>LW FREQUENCY COVERAGE ADJUSTMENT</b>		
Frequency Display	153 kHz	279 kHz
Reading on Digital voltmeter	2.3 ± 0.3 V	9.0 ± 0.1 V
Adjustment Part	<confirmation>	CT4

<b>LW TRACKING ADJUSTMENT</b>		
Adjust for a maximum reading on level meter.		
L1	CT2	
162 kHz	243 kHz	

• **ICF-C763/C763L**


<b>FM FREQUENCY COVERAGE CONFIRMATION</b>		
Frequency Display	87.5 MHz	108 MHz
Reading on Digital voltmeter	3.2 ± 0.3 V	10.0 ± 1.5 V
Adjustment Part	<confirmation>	<confirmation>

<b>FM TRACKING ADJUSTMENT</b>		
Adjust for a maximum reading on level meter.		
L2	CT3	
87.5 MHz	108 MHz	


**Adjustment and Connect Location: See page 5.**

Adjustment and Connect Location


【MAIN BOARD】 (Component Side)

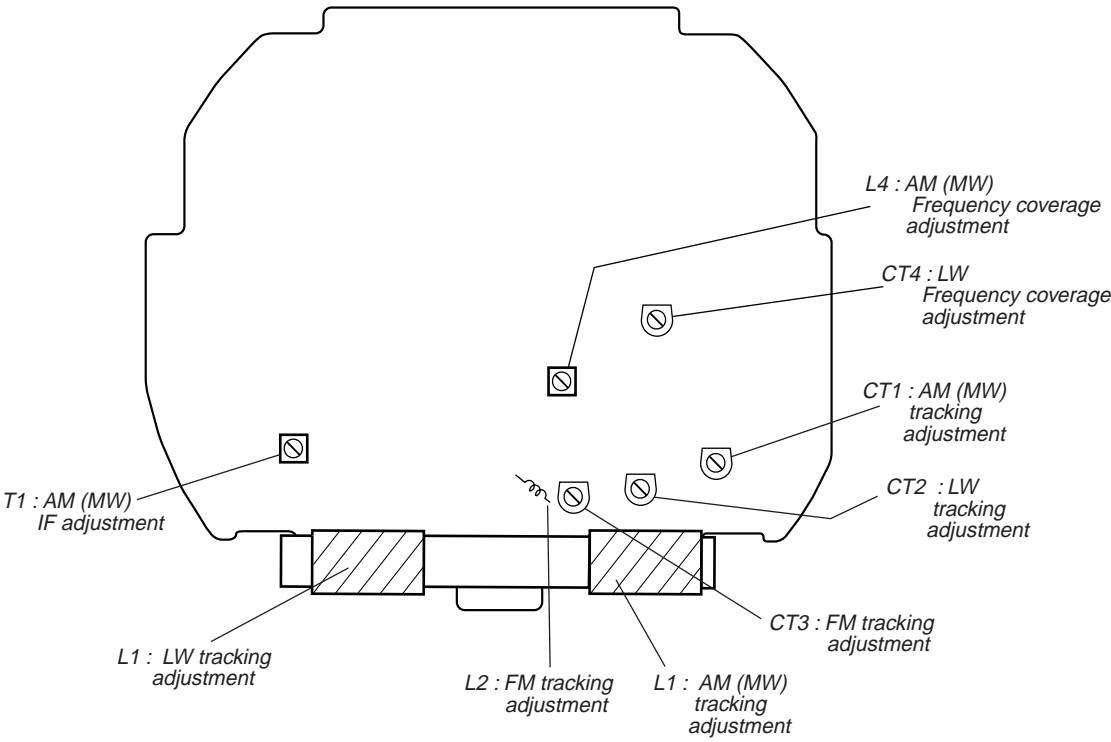

【MAIN BOARD】 (Conductor Side)

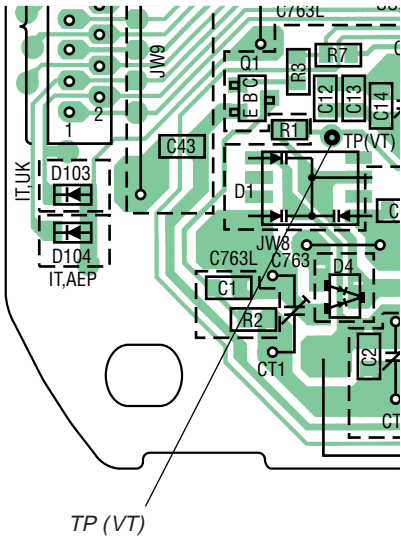

【MAIN BOARD】 (Conductor Side)

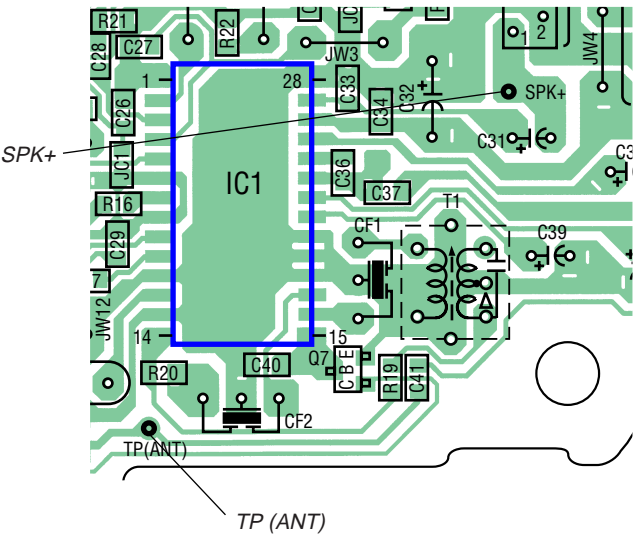

## SECTION 3 DIAGRAMS

• **Circuit Boards Location**

**Note:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $1/4 W$  or less unless otherwise specified.

**Note:**


- : parts extracted from the component side.
- : Pattern from the side which enables seeing.

<p><b>Note:</b> The components identified by mark <math>\triangle</math> or dotted line with mark <math>\triangle</math> are critical for safety. Replace only with part number specified.</p>	<p><b>Note:</b> Les composants identifiés par une marque <math>\triangle</math> sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	---

- : B+ Line.
- : adjustment for repair.
- Voltages are dc with respect to ground under no-signal conditions.  
no mark : FM  
( ) : AM
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ).  
Voltage variations may be noted due to normal production tolerances.
- Signal path.  
 : FM  
 : AM
- Abbreviation  
CND : Canadian model  
IT : Itarian model

**3-1. IC Block Diagrams**

**IC1 CXA1019M**

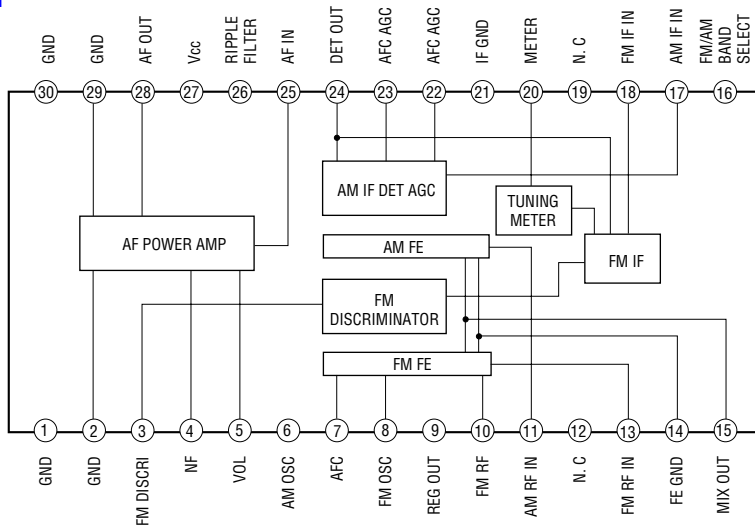

### 3-2. IC Pin Function Descriptions


#### • IC100 SYSTEM CONTROL (MPD17072GB-573-1A7)

Pin No.	Pin Name	I/O	Description
1, 2	BACK LIGHT1, 2	O	Back light LED
3, 4	ILLUMINATION1, 2	O	Illumination LED
5 to 9	KS0 to 4	O	Key source
10 to 13	KR0 to 3	I	Key return (Pull-down resistor: ON setting)
14	ILLUMINATION 2	O	Illumination LED
15	MUTE	O	Mute output
16, 17	BAND1, 2	O	Band output
18	GND	–	Ground
19	EO	O	Output for charge pump for PLL frequency synthesizer
20	VCOL	I	VCO input on AM band
21	VCOH	I	VCO input on FM band
22	REG0	–	Voltage regulator for PLL output
23	VDD	–	Power supply (+3V)
24	XOUT	O	Connected to crystal oscillator for system clock (75kHz)
25	XIN	I	Connected to crystal oscillator for system clock (75kHz)
26	REG1	–	Voltage regulator for oscillation circuit output
27	REGLCD0	–	LCD drive power supply terminal
28, 29	CAPLCD0, 1	–	Connected to the capacitor for doubler circuit
30	REGLCD1	–	LCD drive power supply terminal
31 to 34	COM0 to 3	O	LCD common output
35 to 49	LCD0to 14	O	LCD segment output
50	CE	I	Chip enable signal input
51	INT	I	Door open/close detect input
52	BEEP	O	BEEP output
53	MELODY ST	O	Melody IC starts playing
54	MELODY CK	O	Melody IC serial clock
55	MELODY DATA	O	Melody IC serial data
56	INTIAL	O	Initial output






3-4. SCHEMATIC DIAGRAM – MAIN SECTION –

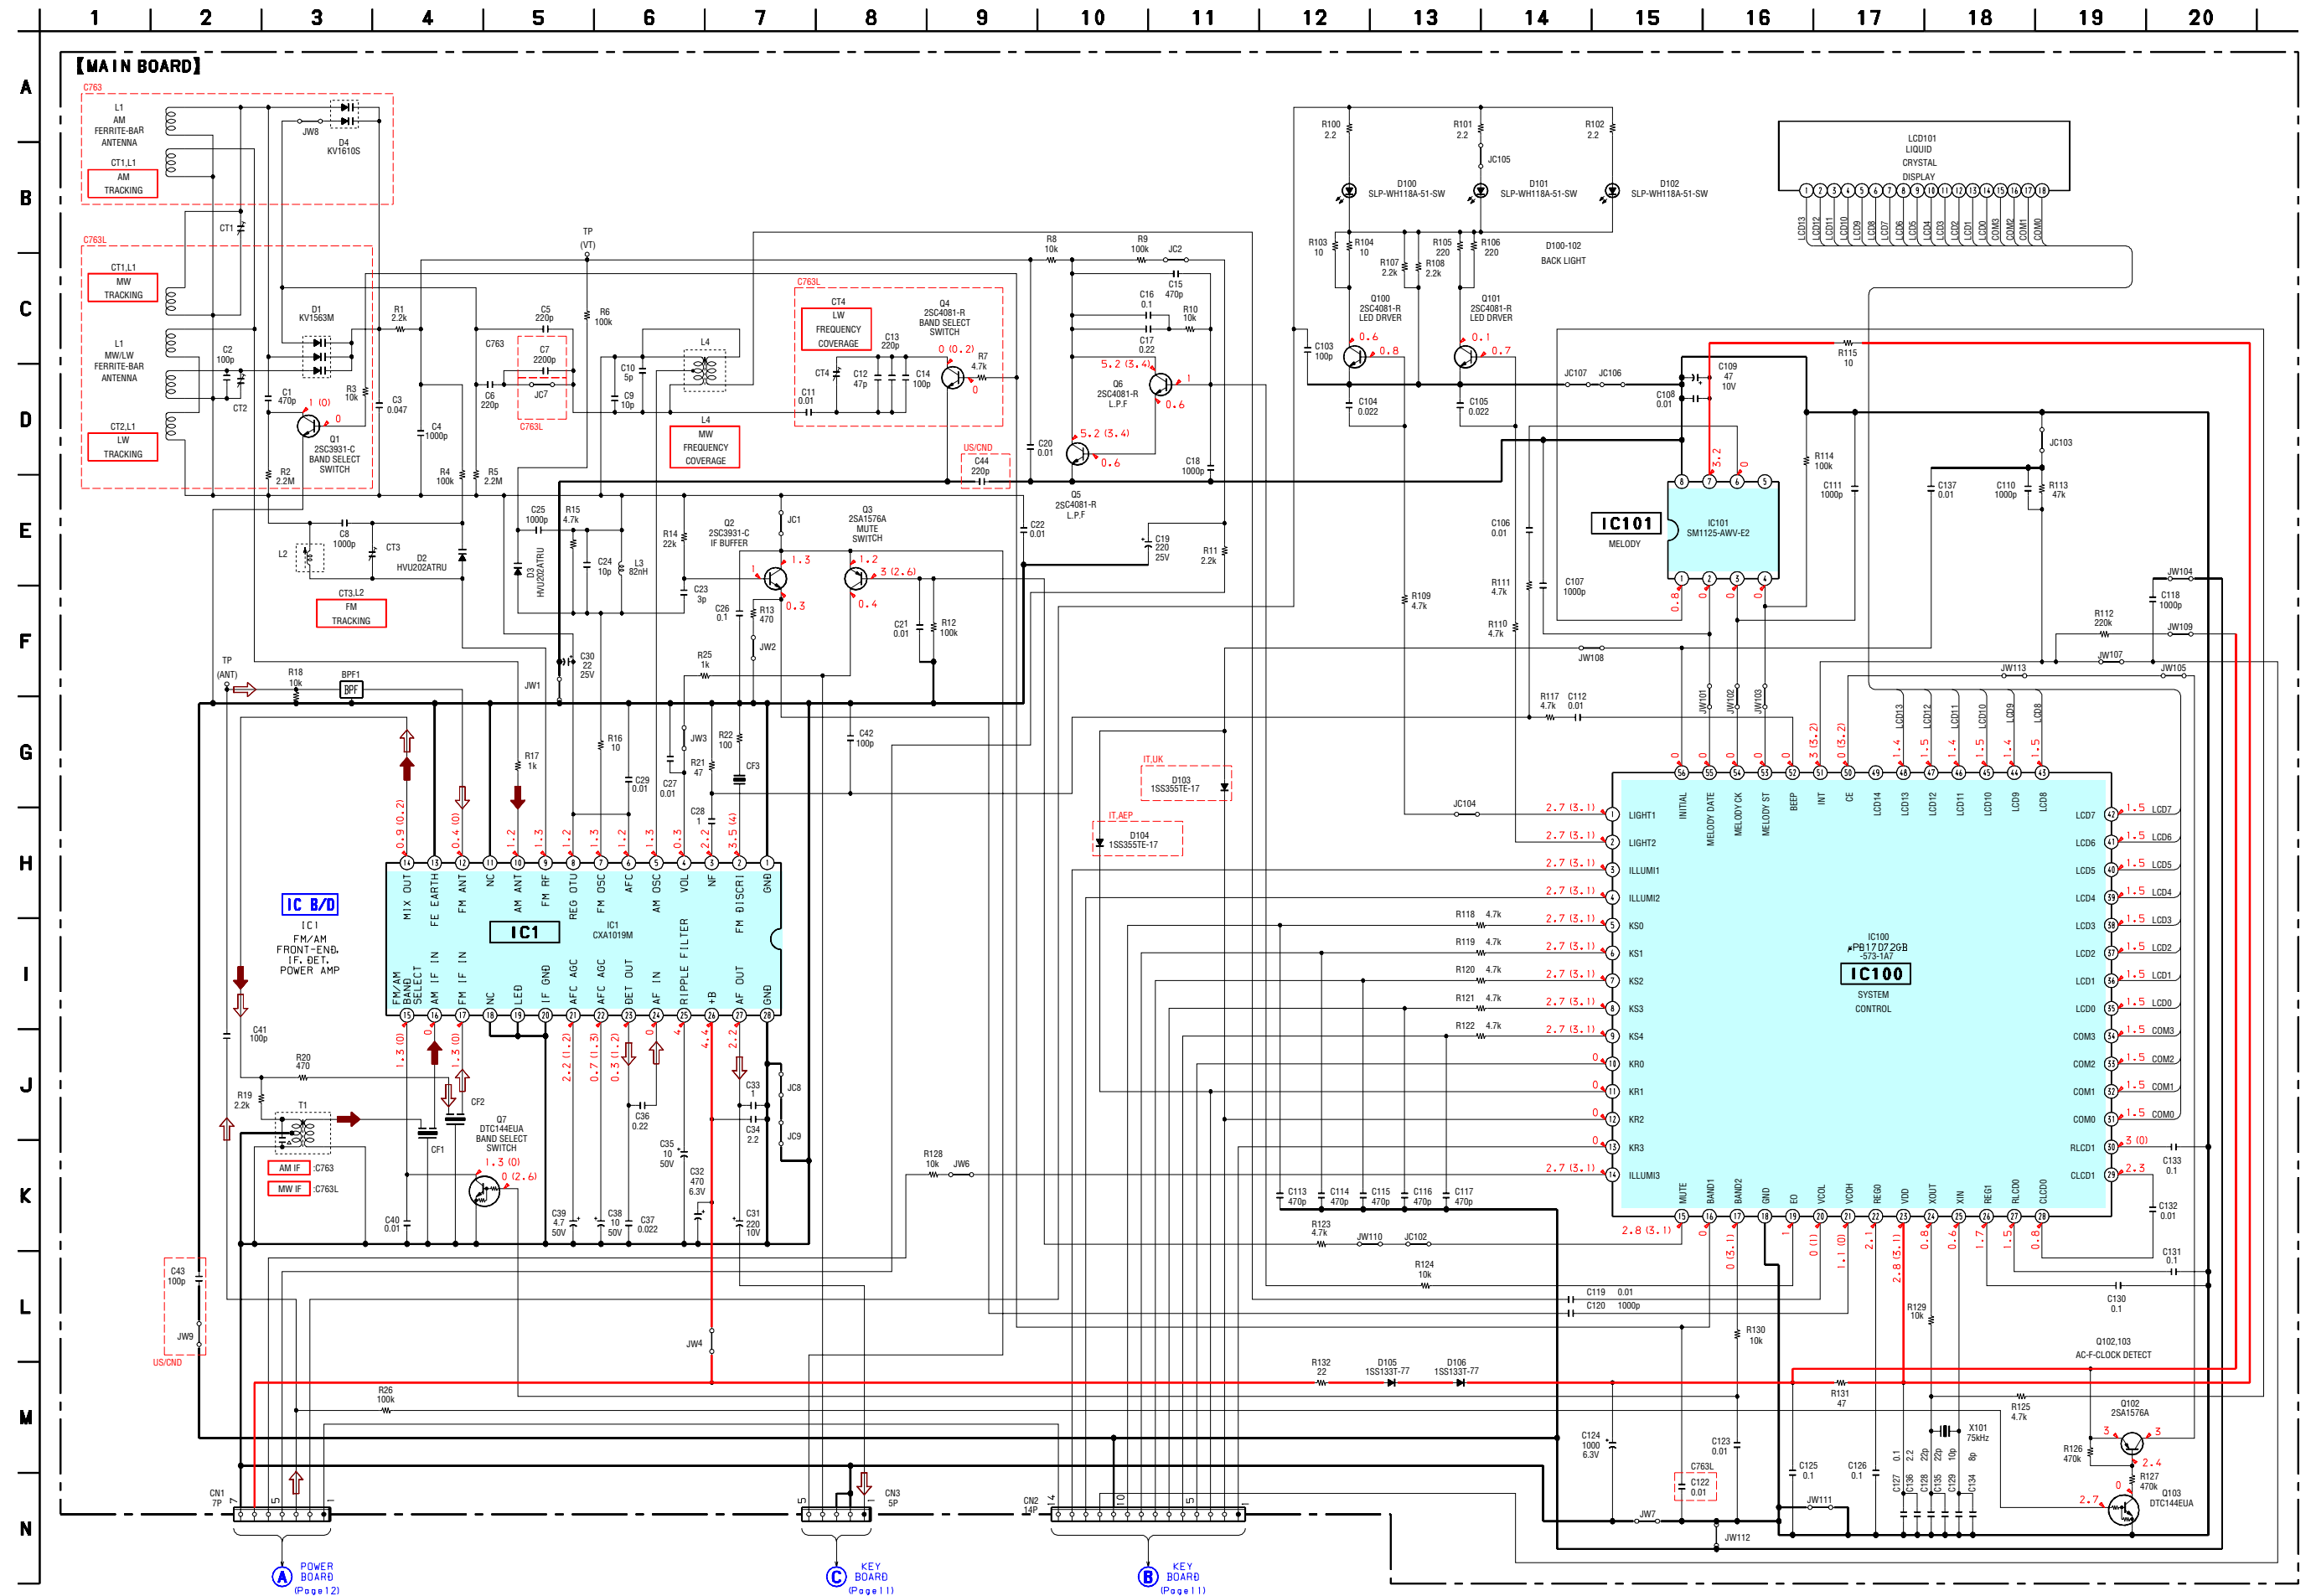

3-5. PRINTED WIRING BOARD – CONTROL SECTION –

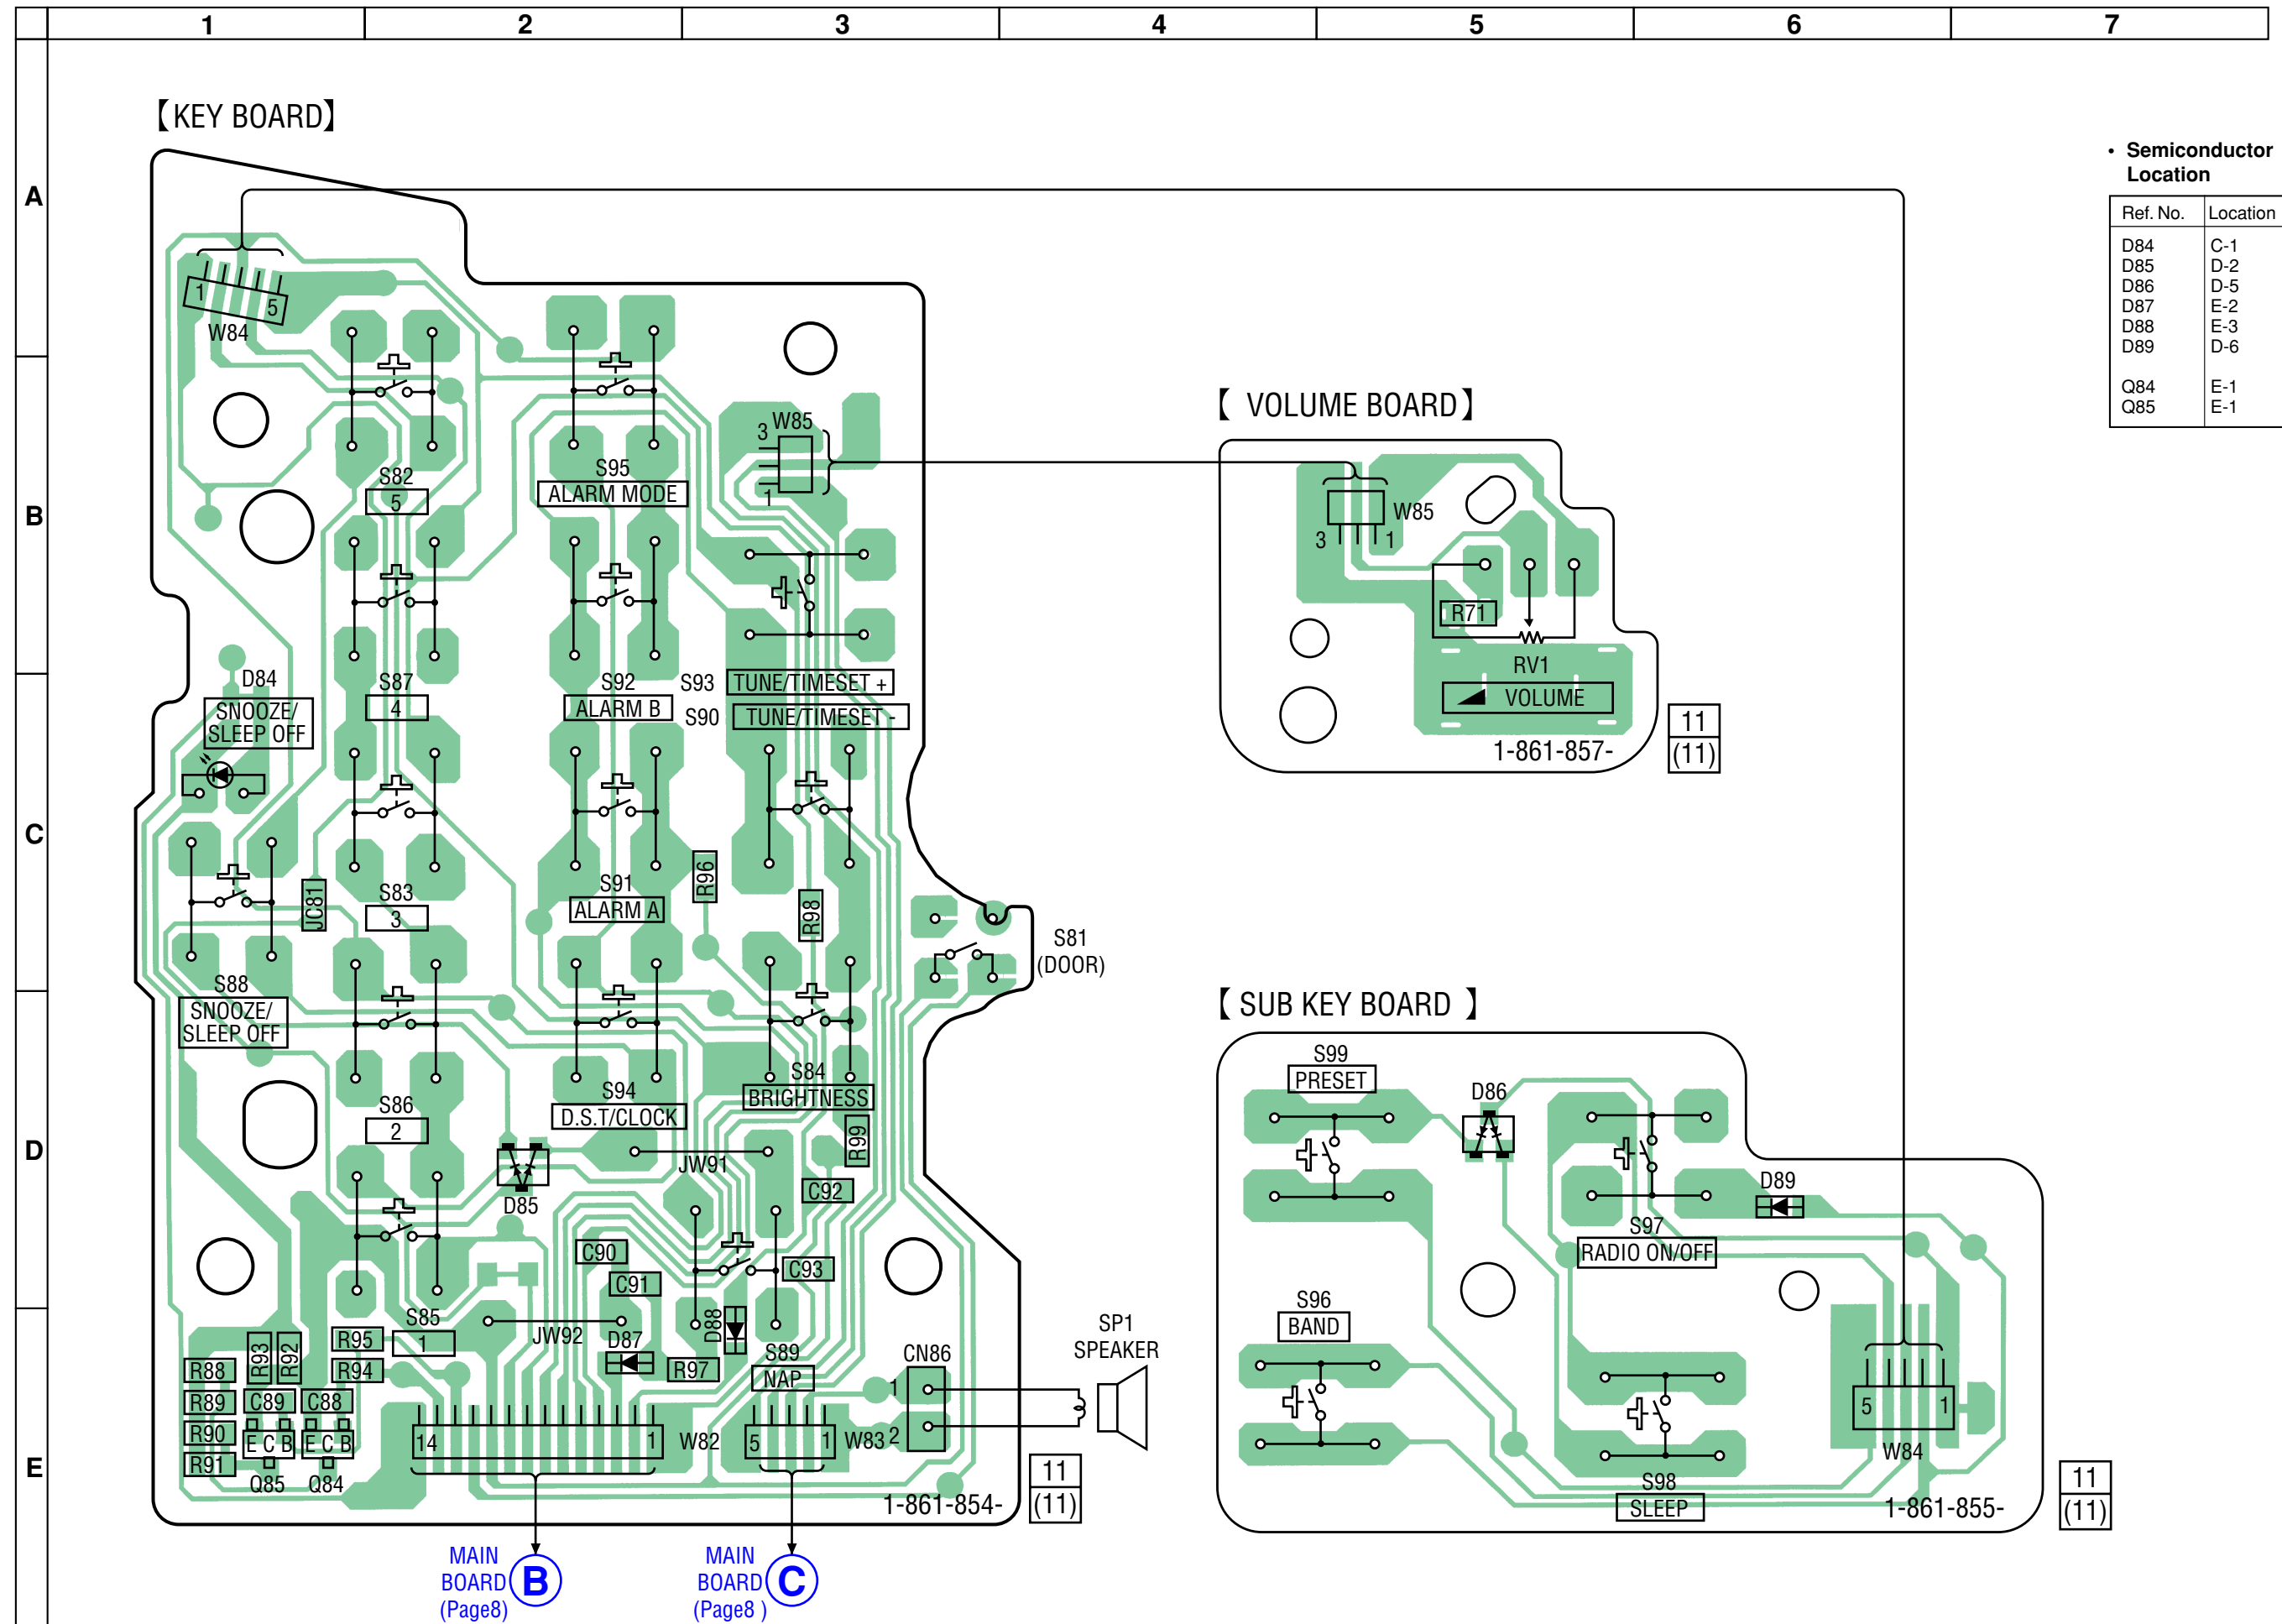


• Semiconductor Location

Ref. No.	Location
D84	C-1
D85	D-2
D86	D-5
D87	E-2
D88	E-3
D89	D-6
Q84	E-1
Q85	E-1


MAIN BOARD (Page8) **B**

MAIN BOARD (Page8) **C**

3-6. SCHEMATIC DIAGRAM – CONTROL SECTION –

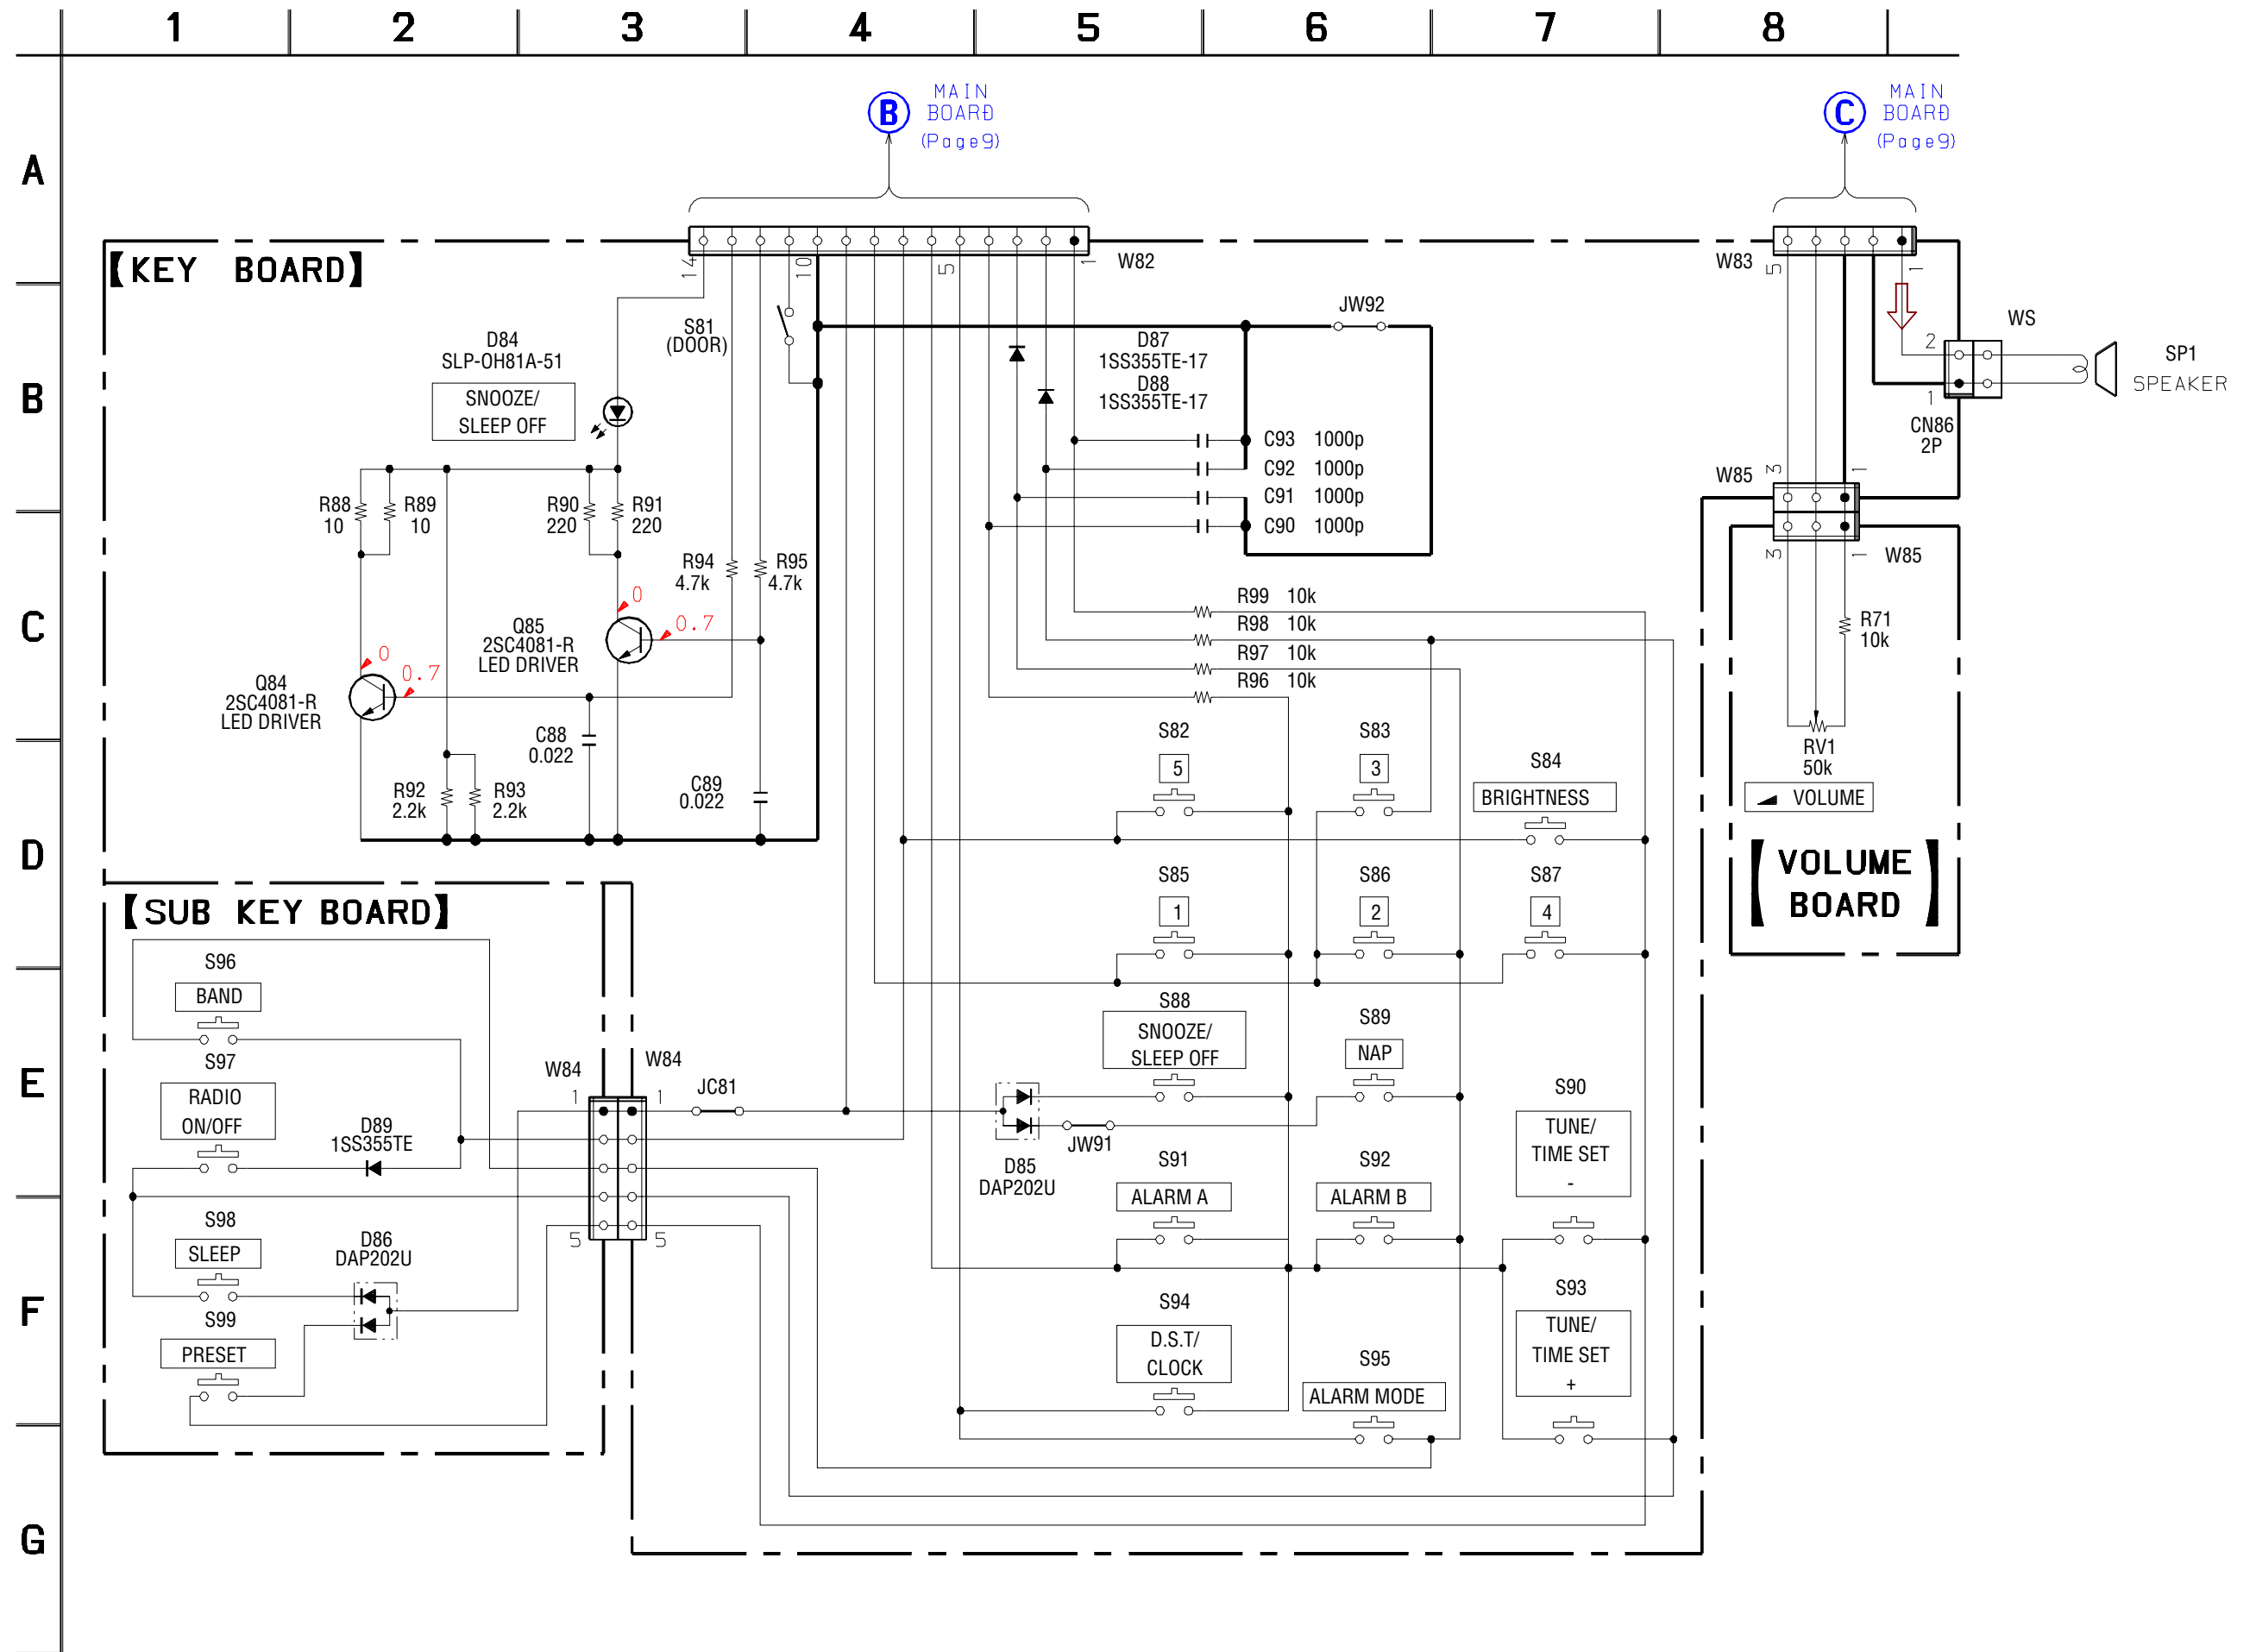


3-7. PRINTED WIRING BOARD – POWER SECTION –

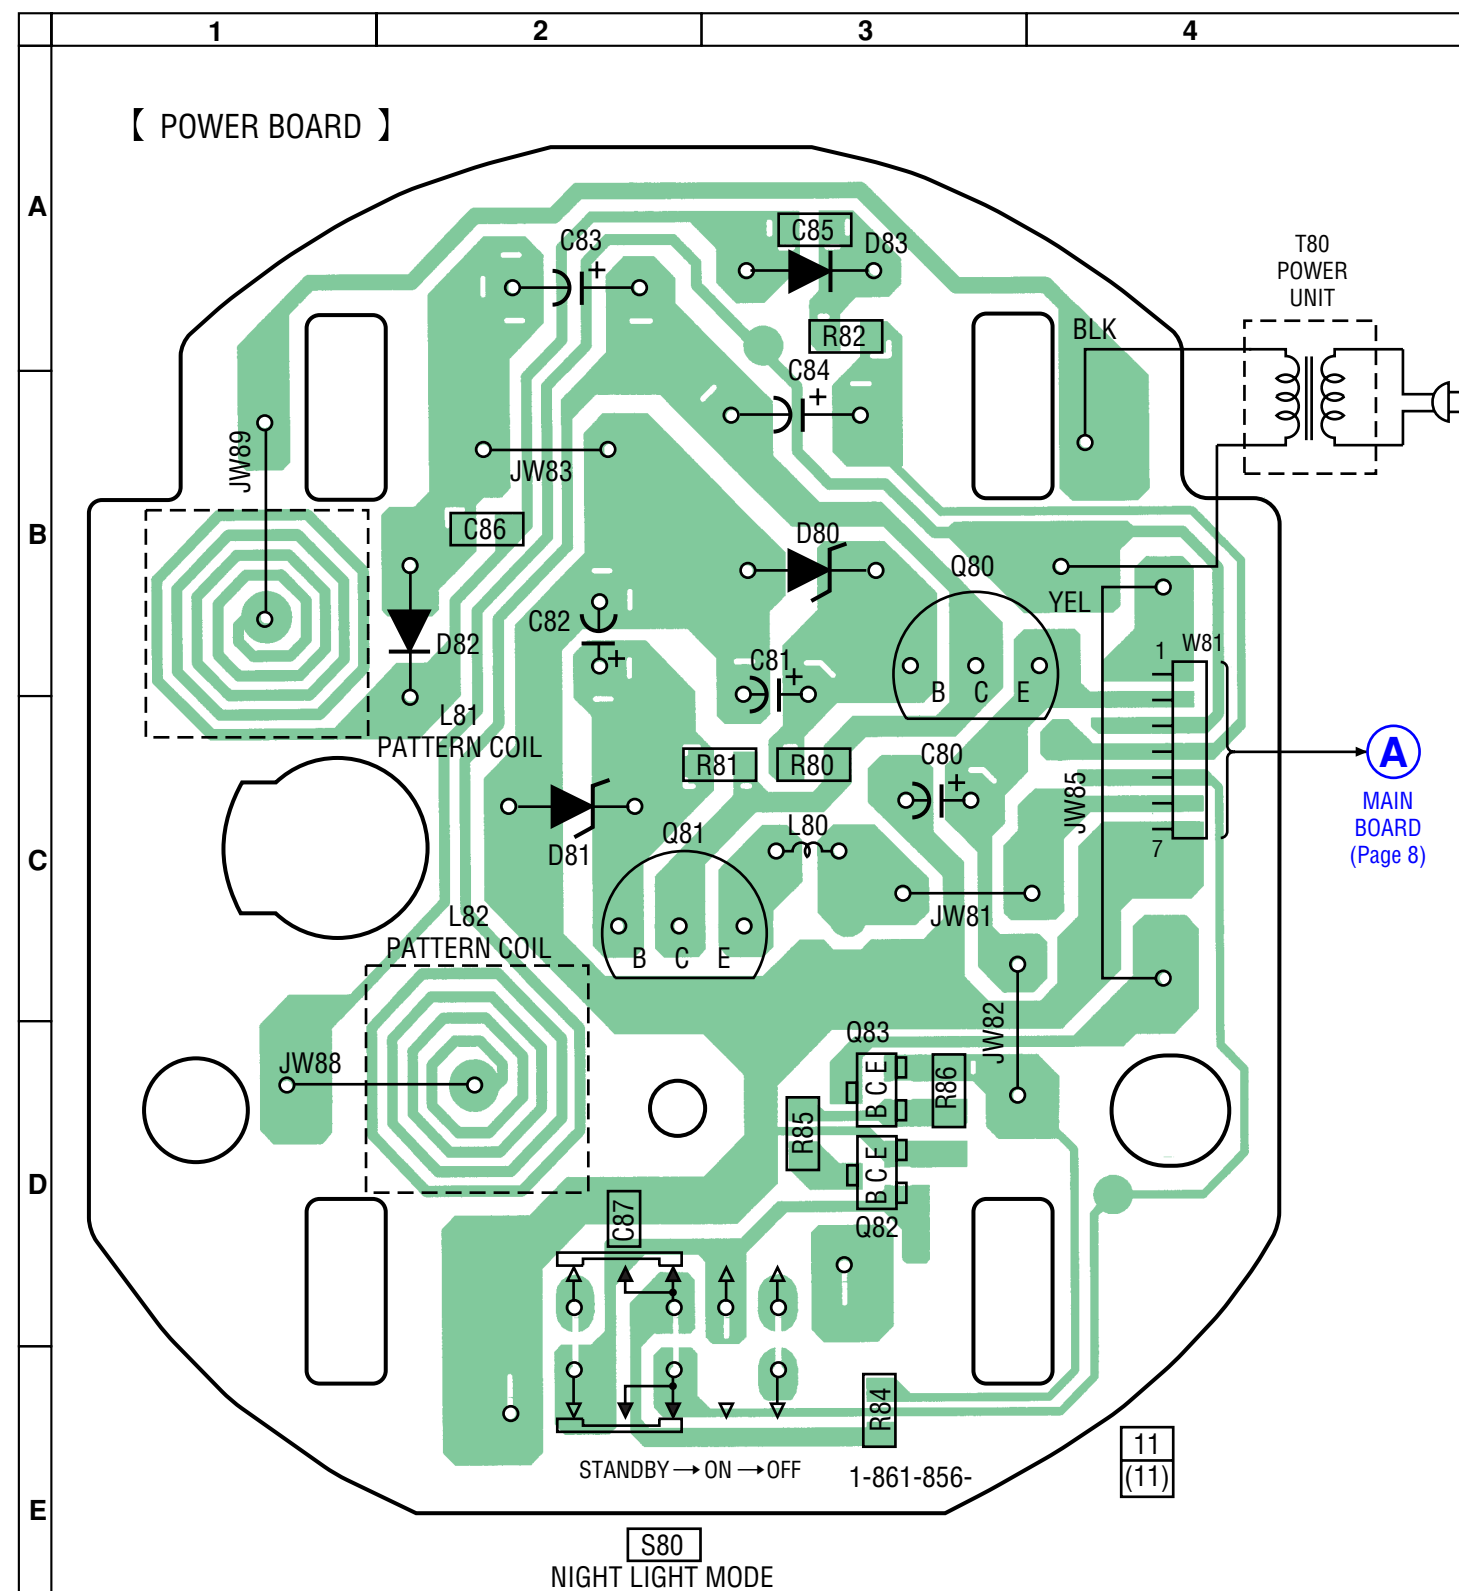

• Semiconductor Location

Ref. No.	Location
D80	B-3
D81	C-2
D82	B-2
D83	A-3
Q80	B-3
Q81	C-2
Q82	D-3
Q83	D-3

3-8. SCHEMATIC DIAGRAM – POWER SECTION –

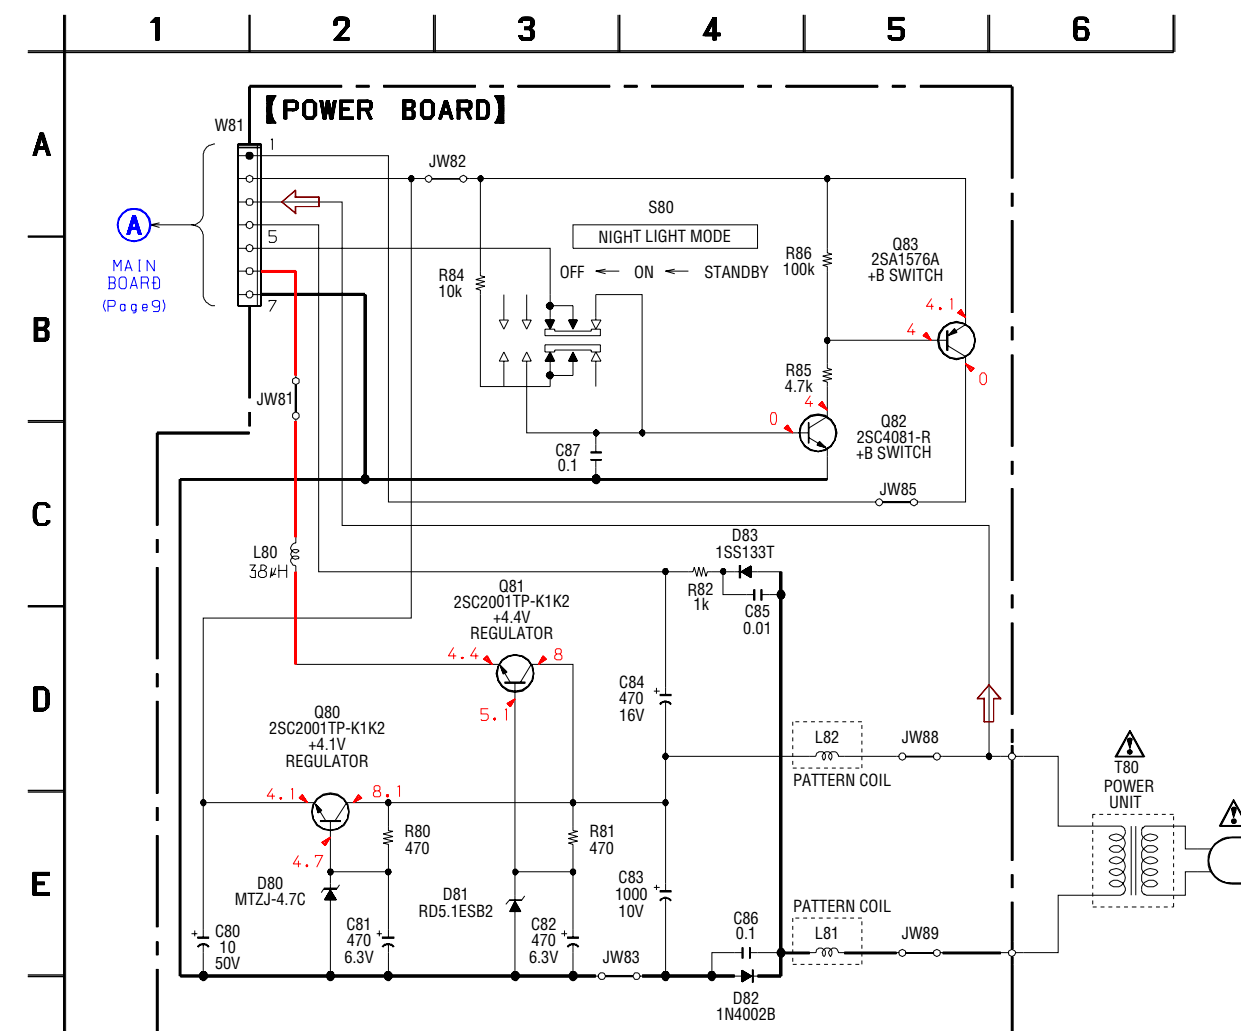

## SECTION 4 EXPLODED VIEW

**NOTE :**

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “ \* ” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories are given in the last of this parts list.
- Abbreviation  
CND : Canadian model  
IT : Itarian model

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

### 4-1. CABINET (UPPER) SECTION

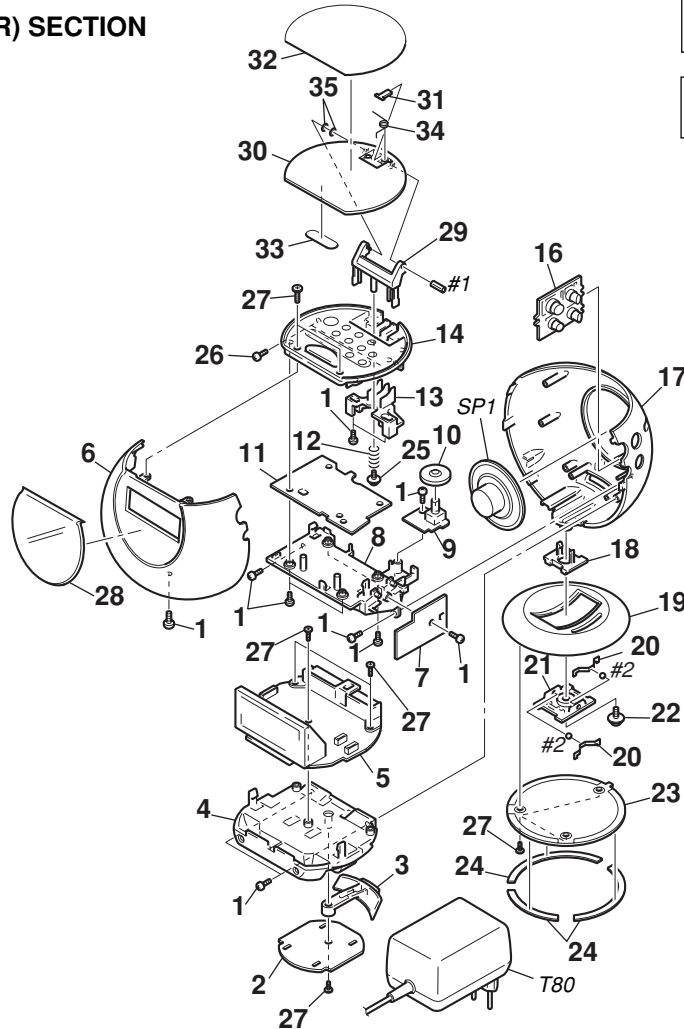

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	3-252-827-01	SCREW (B2.6), (+) BV TAPPING		21	3-265-386-01	PLATE (STAND), CLICK	
2	A-4547-466-A	POWER BOARD, COMPLETE (C763)		22	3-252-830-01	SCREW (B3), (+) PWH TAPPING	
2	A-4547-481-A	POWER BOARD, COMPLETE (C763L)		23	3-265-383-01	STAND	
3	3-265-388-01	KNOB (LIGHTMODE)		24	3-265-401-01	FOOT	
4	3-265-381-01	CHASSIS (LOWER)		25	3-252-828-01	SCREW (B2.6), (+) PWH TAPPING	
5	A-4547-454-A	MAIN PC BOARD ASSY (IT)		26	3-254-058-01	SCREW	
5	A-4547-472-A	MAIN PC BOARD ASSY (US, CND)		27	3-254-081-01	SCREW	
5	A-4547-476-A	MAIN PC BOARD ASSY (UK)		28	3-265-372-01	WINDOW (LCD)	
5	A-4547-484-A	MAIN PC BOARD ASSY (AEP)		29	3-265-375-01	SHAFT	
6	X-2023-066-1	CABINET (FRONT) SUB ASSY		30	3-265-377-01	LID	
7	A-4547-463-A	SUB, KEY BOARD, COMPLETE		31	3-265-378-01	PLATE, CLICK	
8	3-265-382-01	CHASSIS (UPPER)		32	3-265-393-01	PANEL (C763)	
9	A-4547-470-A	VOLUME (HAND) BOARD, COMPLETE		32	3-265-393-11	PANEL (C763L)	
10	3-265-387-01	KNOB (VOL)		33	3-265-394-01	CUSHION (SNOOZE)	
11	A-4547-459-A	KEY BOARD, COMPLETE		34	3-265-397-01	SPRING (CLICK)	
12	3-265-396-01	SPRING (SHAFT)		35	3-265-402-01	RING, O	
13	3-265-376-01	HOLDER (SHAFT)		SP1	1-544-517-51	SPEAKER	
14	X-2023-067-1	CABINET (UPPER) SUB ASSY		$\triangle$ T80	1-468-672-21	POWER UNIT (US, CND)	
16	3-265-379-01	BUTTON (POWER)		$\triangle$ T80	1-468-673-21	POWER UNIT (UK)	
17	3-265-370-01	CABINET (REAR)		$\triangle$ T80	1-468-674-21	POWER UNIT (IT, AEP)	
18	3-265-385-01	GUIDE (STAND)		#1	7-626-314-11	SPRING PIN 2X8	
19	3-265-384-01	COVER (STAND)		#2	7-671-113-01	STEEL, BALL 3	
20	3-265-398-01	SPRING (STAND)					

**SECTION 5**  
**ELECTRICAL PARTS LIST**

NOTE :

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms  
METAL : Metal-film resistor  
METAL OXIDE :Metal oxide-film resistor  
F : nonflammable
- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- SEMICONDUCTORS  
In each case, u :  $\mu$  , for example :  
uA.... :  $\mu$  A.... , uPA.... :  $\mu$  PA....  
uPB.... :  $\mu$  PB.... , uPC.... :  $\mu$  PC....  
uPD.... :  $\mu$  PD....
- CAPACITORS  
uF :  $\mu$  F
- COILS  
uH :  $\mu$  H
- Abbreviation  
CND : Canadian model  
IT : Italian model

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-4547-459-A	KEY BOARD, COMPLETE *****		S83	1-771-550-11	SWITCH, TACTILE (3)	
		< CAPACITOR >		S84	1-771-550-11	SWITCH, TACTILE (BRIGHTNESS)	
C88	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V		S85	1-771-550-11	SWITCH, TACTILE (1)	
C89	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V		S86	1-771-550-11	SWITCH, TACTILE (2)	
C90	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		S87	1-771-550-11	SWITCH, TACTILE (4)	
C91	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		S88	1-554-937-11	SWITCH, TACTILE (SNOOZE/SLEEP OFF)	
C92	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		S89	1-771-550-11	SWITCH, TACTILE (NAP)	
		< CONNECTOR >		S90	1-771-550-11	SWITCH, TACTILE (TUNE/TIME SET -)	
C93	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		S91	1-771-550-11	SWITCH, TACTILE (ALARM A)	
		< DIODE >		S92	1-771-550-11	SWITCH, TACTILE (ALARM B)	
CN86	1-580-181-11	SOCKET, CONNECTOR 2P		S93	1-771-550-11	SWITCH, TACTILE (TUNE/TIME SET +)	
		< SHORT >		S94	1-771-550-11	SWITCH, TACTILE (D.S.T/CLOCK)	
D84	6-500-921-01	DIODE SLP-OH81A-51 (SNOOZE/SLEEP OFF)		S95	1-771-550-11	SWITCH, TACTILE (ALRM MODE)	
D85	8-719-941-09	DIODE DAP202U				< FLAT CABLE >	
D87	8-719-988-61	DIODE 1SS355TE-17		W82	1-829-128-11	CABLE, FLEXIBLE FLAT (14 CORE)	
D88	8-719-988-61	DIODE 1SS355TE-17		W83	1-829-130-11	CABLE, FLEXIBLE FLAT (5 CORE)	
		< TRANSISTOR >		W84	1-829-127-11	CABLE, FLEXIBLE FLAT (5 CORE)	
		< RESISTOR >		W85	1-829-126-11	CABLE, FLEXIBLE FLAT (3 CORE)	
		< SWITCH >		*****			
JC81	1-216-864-11	SHORT CHIP 0		A-4547-454-A	MAIN PC BOARD ASSY (IT)		
		< CAPACITOR >		A-4547-472-A	MAIN PC BOARD ASSY (US, CND)		
Q84	8-729-905-35	TRANSISTOR 2SC4081-R		A-4547-476-A	MAIN PC BOARD ASSY (UK)		
Q85	8-729-905-35	TRANSISTOR 2SC4081-R		A-4547-484-A	MAIN PC BOARD ASSY (AEP)		
		< RESISTOR >		*****			
R88	1-216-797-11	METAL CHIP 10 5% 1/10W		3-265-380-01	HOLDER (LCD)		
R89	1-216-797-11	METAL CHIP 10 5% 1/10W		3-265-391-01	HOLDER (ANT)		
R90	1-216-813-11	METAL CHIP 220 5% 1/10W				< BAND PASS FILTER >	
R91	1-216-813-11	METAL CHIP 220 5% 1/10W		BPF1	1-236-022-11	FILTER, BAND PASS	
R92	1-216-825-11	METAL CHIP 2.2K 5% 1/10W				< CAPACITOR >	
R93	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		C1	1-164-315-11	CERAMIC CHIP 470PF 5% 50V	(C763L)
R94	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		C2	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	(C763L)
R95	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		C3	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
R96	1-216-833-11	METAL CHIP 10K 5% 1/10W		C4	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
R97	1-216-833-11	METAL CHIP 10K 5% 1/10W		C5	1-164-230-11	CERAMIC CHIP 220PF 5% 50V	
R98	1-216-833-11	METAL CHIP 10K 5% 1/10W		C6	1-164-230-11	CERAMIC CHIP 220PF 5% 50V	
R99	1-216-833-11	METAL CHIP 10K 5% 1/10W		C7	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V	(C763)
S81	1-570-953-11	SWITCH, PUSH (1 KEY) (DOOR)		C8	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
S82	1-771-550-11	SWITCH, TACTILE (5)		C9	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
				C10	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V	



Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C11	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V	C125	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C12	1-162-923-11	CERAMIC CHIP	47PF 5%	50V (C763L)	C126	1-164-156-11	CERAMIC CHIP 0.1uF 25V
C13	1-164-230-11	CERAMIC CHIP	220PF 5%	50V (C763L)	C127	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C14	1-162-927-11	CERAMIC CHIP	100PF 5%	50V (C763L)	C128	1-162-919-11	CERAMIC CHIP 22PF 5% 50V
C15	1-164-315-11	CERAMIC CHIP	470PF 5%	50V	C129	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V
C16	1-107-826-11	CERAMIC CHIP	0.1uF 10%	16V	C130	1-164-156-11	CERAMIC CHIP 0.1uF 25V
C17	1-115-467-11	CERAMIC CHIP	0.22uF 10%	10V	C131	1-164-156-11	CERAMIC CHIP 0.1uF 25V
C18	1-162-964-11	CERAMIC CHIP	0.001uF 10%	50V	C132	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V
C19	1-104-666-11	ELECT	220uF 20%	25V	C133	1-164-156-11	CERAMIC CHIP 0.1uF 25V
C20	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V	C134	1-162-913-11	CERAMIC CHIP 8PF 0.5PF 50V
C21	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V	C135	1-162-919-11	CERAMIC CHIP 22PF 5% 50V
C22	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V	C136	1-135-834-91	CERAMIC CHIP 2.2 6PF 6.3V
C23	1-162-908-11	CERAMIC CHIP	3PF 0.25PF	50V	C137	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V
C24	1-162-915-11	CERAMIC CHIP	10PF 0.5PF	50V			< FILTER >
C25	1-162-964-11	CERAMIC CHIP	0.001uF 10%	50V	* CF1	1-577-319-11	FILTER, CERAMIC (C763)
C26	1-107-826-11	CERAMIC CHIP	0.1uF 10%	16V	CF1	1-578-677-21	FILTER, CRYSTAL (C763L)
C27	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V	CF2	1-577-324-11	FILTER, CERAMIC
C28	1-125-837-91	CERAMIC CHIP	1uF 10%	6.3V	CF3	1-577-324-11	FILTER, CERAMIC
C29	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V			< CONNECTOR >
C30	1-128-551-11	ELECT	22uF 20%	63V	CN1	1-770-638-11	CONNECTOR, FFC/FPC 7P
C31	1-126-934-11	ELECT	220uF 20%	16V	CN2	1-770-644-11	CONNECTOR, FFC/FPC 14P
C32	1-104-655-91	ELECT	470uF 20%	6.3V	CN3	1-770-636-11	CONNECTOR, FFC/FPC 5P
C33	1-125-837-91	CERAMIC CHIP	1uF 10%	6.3V			< TRIMMER >
C34	1-135-834-91	CERAMIC CHIP	2.2 6PF	6.3V	CT1	1-141-304-21	CAP, CERAMIC TRIMMER 10PF (AM TRACKING)
C35	1-126-964-11	ELECT	10uF 20%	50V	CT2	1-141-459-11	CAP, TRIMMER (SEAL TYPE) 45PF (LW TRACKING)(C763L)
C36	1-115-467-11	CERAMIC CHIP	0.22uF 10%	10V	CT3	1-141-304-21	CAP, CERAMIC TRIMMER 10PF (FM TRACKING)
C37	1-164-227-11	CERAMIC CHIP	0.022uF 10%	25V	CT4	1-141-459-11	CAP, TRIMMER (SEAL TYPE) 45PF (LW FREQUENCY COVERAGE)(C763L)
C38	1-126-964-11	ELECT	10uF 20%	50V			< DIODE >
C39	1-126-963-11	ELECT	4.7uF 20%	50V	D1	8-719-023-99	DIODE KV1563M-3 (C763L)
C40	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V	D2	8-719-084-67	DIODE HVU202ATRU
C41	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	D3	8-719-084-67	DIODE HVU202ATRU
C42	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	D4	6-500-169-01	DIODE KV1610STL1-2 (C763)
C43	1-162-927-11	CERAMIC CHIP	100PF 5%	50V (US, CND)	D100	6-500-915-01	DIODE SLP-WH118A-51-SW
C44	1-164-230-11	CERAMIC CHIP	220PF 5%	50V (US, CND)	D101	6-500-915-01	DIODE SLP-WH118A-51-SW
C103	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	D102	6-500-915-01	DIODE SLP-WH118A-51-SW
C104	1-164-227-11	CERAMIC CHIP	0.022uF 10%	25V	D103	8-719-988-61	DIODE 1SS355TE-17 (IT, UK)
C105	1-164-227-11	CERAMIC CHIP	0.022uF 10%	25V	D104	8-719-988-61	DIODE 1SS355TE-17 (IT, AEP)
C106	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V	D105	8-719-991-33	DIODE 1SS133T-77
C107	1-162-964-11	CERAMIC CHIP	0.001uF 10%	50V	D106	8-719-991-33	DIODE 1SS133T-77
C108	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V			< IC >
C109	1-126-947-11	ELECT	47uF 20%	35V	IC1	8-752-050-16	IC CXA1019M
C110	1-162-964-11	CERAMIC CHIP	0.001uF 10%	50V	IC100	6-804-219-01	IC uPD17072GB-573-1A7
C111	1-162-964-11	CERAMIC CHIP	0.001uF 10%	50V	IC101	6-701-907-01	IC SM1125-AWV-E2
C112	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V			< SHORT >
C113	1-164-315-11	CERAMIC CHIP	470PF 5%	50V	JC1	1-216-864-11	SHORT CHIP 0
C114	1-164-315-11	CERAMIC CHIP	470PF 5%	50V	JC2	1-216-864-11	SHORT CHIP 0
C115	1-164-315-11	CERAMIC CHIP	470PF 5%	50V	JC7	1-216-864-11	SHORT CHIP 0 (C763L)
C116	1-164-315-11	CERAMIC CHIP	470PF 5%	50V	JC8	1-216-864-11	SHORT CHIP 0
C117	1-164-315-11	CERAMIC CHIP	470PF 5%	50V	JC9	1-216-864-11	SHORT CHIP 0
C118	1-162-964-11	CERAMIC CHIP	0.001uF 10%	50V	JC102	1-216-864-11	SHORT CHIP 0
C119	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V	JC103	1-216-864-11	SHORT CHIP 0
C120	1-162-964-11	CERAMIC CHIP	0.001uF 10%	50V	JC104	1-216-864-11	SHORT CHIP 0
C122	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V (C763L)			
C123	1-162-970-11	CERAMIC CHIP	0.01uF 10%	25V			
C124	1-126-916-11	ELECT	1000uF 20%	6.3V			

# ICF-C763/C763L

						MAIN		POWER			
Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
JC105	1-216-864-11	SHORT CHIP	0			R104	1-216-797-11	METAL CHIP	10	5%	1/10W
JC106	1-216-864-11	SHORT CHIP	0			R105	1-216-813-11	METAL CHIP	220	5%	1/10W
JC107	1-216-864-11	SHORT CHIP	0			R106	1-216-813-11	METAL CHIP	220	5%	1/10W
		< COIL >				R107	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
L1	1-428-951-11	COIL, FERRITE-ROD ANTENNA (MW)				R108	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
		(AM TRACKING) (C763)				R109	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
L1	1-428-952-11	COIL, FERRITE-ROD ANTENNA				R110	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
		(LW/MW TRACKING) (C763L)				R111	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
L2	1-406-922-11	COIL, AIR-CORE (FM TRACKING)				R112	1-216-849-11	METAL CHIP	220K	5%	1/10W
L3	1-414-690-21	INDUCTOR	82nH			R113	1-216-841-11	METAL CHIP	47K	5%	1/10W
L4	1-406-485-11	COIL (OSC)				R114	1-216-845-11	METAL CHIP	100K	5%	1/10W
		< LIQUID CRYSTAL DISPLAY >				R115	1-216-797-11	METAL CHIP	10	5%	1/10W
LCD101	1-805-589-11	DISPLAY PANEL, LIQUID CRYSTAL				R117	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
		< TRANSISTOR >				R118	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q1	8-729-423-52	TRANSISTOR	2SC3931-C (C763L)			R119	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q2	8-729-423-52	TRANSISTOR	2SC3931-C			R120	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q3	8-729-026-53	TRANSISTOR	2SA1576A-T106-QR			R121	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q4	8-729-905-35	TRANSISTOR	2SC4081-R (C763L)			R122	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q5	8-729-905-35	TRANSISTOR	2SC4081-R			R123	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q6	8-729-905-35	TRANSISTOR	2SC4081-R			R124	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q7	8-729-029-14	TRANSISTOR	DTC144EUA-T106			R125	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q100	8-729-905-35	TRANSISTOR	2SC4081-R			R126	1-216-853-11	METAL CHIP	470K	5%	1/10W
Q101	8-729-905-35	TRANSISTOR	2SC4081-R			R127	1-216-853-11	METAL CHIP	470K	5%	1/10W
Q102	8-729-026-53	TRANSISTOR	2SA1576A-T106-QR			R128	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q103	8-729-029-14	TRANSISTOR	DTC144EUA-T106			R129	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< RESISTOR >				R130	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R131	1-216-805-11	METAL CHIP	47	5%	1/10W
R2	1-216-861-11	METAL CHIP	2.2M	5%	1/10W	R132	1-216-801-11	METAL CHIP	22	5%	1/10W
					(C763L)						
R3	1-216-833-11	METAL CHIP	10K	5%	1/10W						
					(C763L)						
R4	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R5	1-216-861-11	METAL CHIP	2.2M	5%	1/10W						
R6	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R7	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
					(C763L)						
R8	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R9	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R10	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R11	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R12	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R13	1-216-817-11	METAL CHIP	470	5%	1/10W						
R14	1-216-837-11	METAL CHIP	22K	5%	1/10W						
R15	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R16	1-216-797-11	METAL CHIP	10	5%	1/10W						
R17	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R18	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R19	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R20	1-216-817-11	METAL CHIP	470	5%	1/10W						
R21	1-216-805-11	METAL CHIP	47	5%	1/10W						
R22	1-216-809-11	METAL CHIP	100	5%	1/10W						
R25	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R26	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R100	1-216-789-11	METAL CHIP	2.2	5%	1/10W						
R101	1-216-789-11	METAL CHIP	2.2	5%	1/10W						
R102	1-216-789-11	METAL CHIP	2.2	5%	1/10W						
R103	1-216-797-11	METAL CHIP	10	5%	1/10W						
		< TRANSISTOR >									
Q80	8-729-011-92	TRANSISTOR	2SC2001TP-K1K2								



POWER

SUB KEY

VOLUME

Ref. No.	Part No.	Description	Remark		
Q81	8-729-011-92	TRANSISTOR	2SC2001TP-K1K2		
Q82	8-729-905-35	TRANSISTOR	2SC4081-R		
Q83	8-729-026-53	TRANSISTOR	2SA1576A-T106-QR		
< RESISTOR >					
R80	1-216-817-11	METAL CHIP	470	5%	1/10W
R81	1-216-817-11	METAL CHIP	470	5%	1/10W
R82	1-216-821-11	METAL CHIP	1K	5%	1/10W
R84	1-216-833-11	METAL CHIP	10K	5%	1/10W
R85	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R86	1-216-845-11	METAL CHIP	100K	5%	1/10W
< SWITCH >					
S80	1-554-061-00	SWITCH, SLIDE (NIGHT LIGHT MODE)			
< FLAT CABLE >					
W81	1-829-129-11	CABLE, FLEXIBLE FLAT (7 CORE)			
*****					
A-4547-463-A		SUB KEY BOARD, COMPLETE			
		*****			
< DIODE >					
D86	8-719-941-09	DIODE	DAP202U		
D89	8-719-988-61	DIODE	1SS355TE-17		
< SWITCH >					
S96	1-771-550-11	SWITCH, TACTILE (BAND)			
S97	1-771-550-11	SWITCH, TACTILE (RADIO ON/OFF)			
S98	1-771-550-11	SWITCH, TACTILE (SLEEP)			
S99	1-771-550-11	SWITCH, TACTILE (PRESET)			
*****					
A-4547-470-A		VOLUME BOARD, COMPLETE			
		*****			
< RESISTOR >					
R71	1-216-833-11	METAL CHIP	10K	5%	1/10W
< VARIABLE RESISTOR >					
RV1	1-227-482-11	RES, VAR, CARBON	50K		(▲ VOLUME)
*****					
MISCELLANEOUS					
*****					
SP1	1-544-517-51	SPEAKER			
△ T80	1-468-672-21	POWER UNIT (US, CND)			
△ T80	1-468-673-21	POWER UNIT (UK)			
△ T80	1-468-674-21	POWER UNIT (IT, AEP)			
*****					
ACCESSORIES					
*****					
3-266-173-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH, GERMAN) (EXCEPT US)				
3-266-173-21	MANUAL, INSTRUCTION (ENGLISH) (US)				
3-266-173-31	MANUAL, INSTRUCTION (ITALIAN, DUTCH, PORTUGUESE, SWEDISH, FINNISH) (IT, AEP)				

The components identified by mark △ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

